

Portable Outdoor Radio

Kindly remind that the product has voltage protection, when the Type-C charging voltage exceeds 6V, the product will stop charging, please use 5V 1A/2A adapter for charging.

RF exposure statement
This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must be co-located or operating in conjunction with my other antenna or transmitter.

FCC Warning
This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

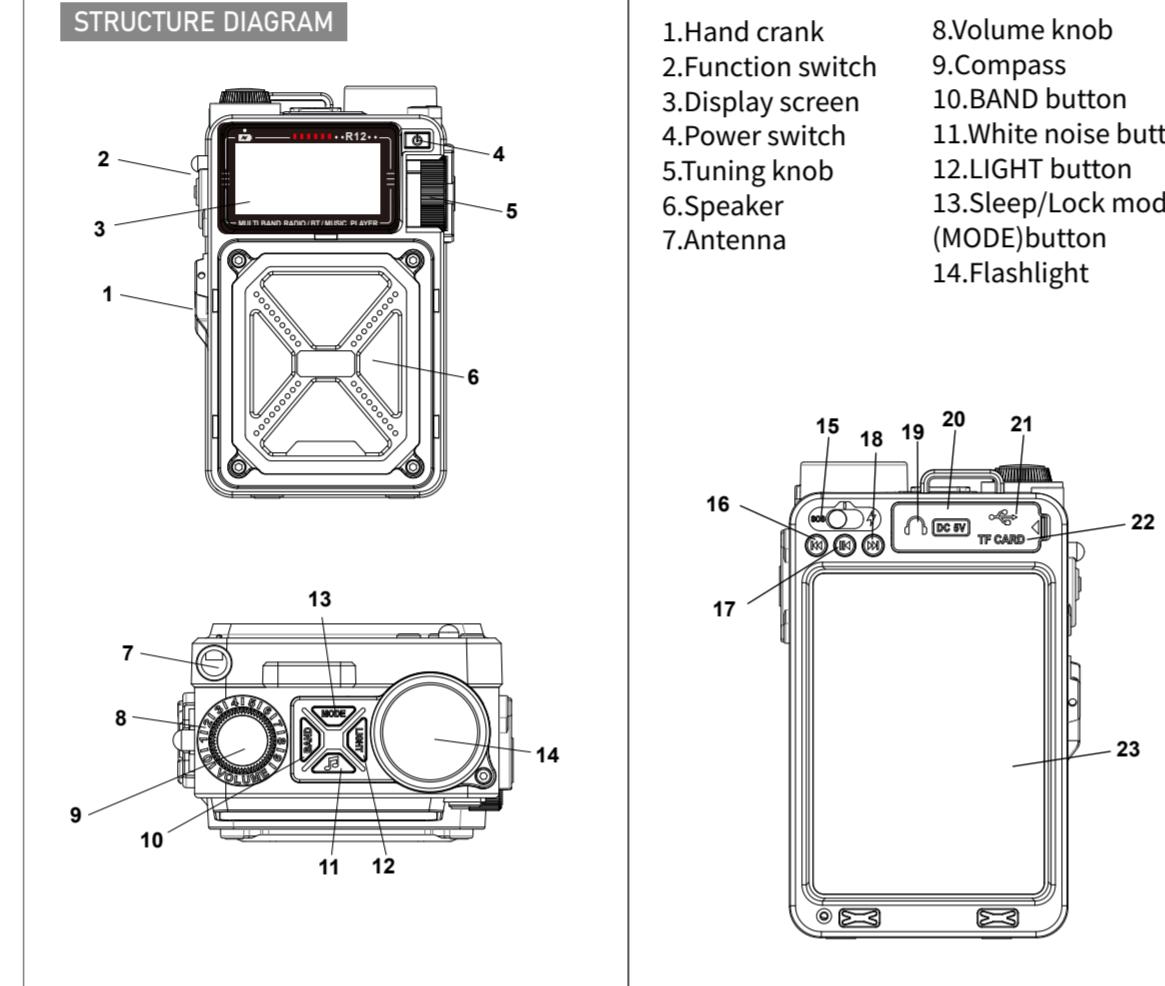
This device complies with FCC rules, Part 15 and it is designed to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and radiates radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FC RoHS CE

Made in China

<p>STRUCTURE DIAGRAM</p>  <p>-1-</p>	<p>1. Hand crank 2.Function switch 3.Display screen 4.Power switch 5.Tuning knob 6.Speaker 7.Antenna</p> <p>8.Volume knob 9.Compass 10.BAND button 11.White noise button 12.LIGHT button 13.Sleep/Lock mode (MODE)button 14.Flashlight</p> <p>15.SOS alert 16.Previous song button 17.Play/Pause button 18.Next song button 19.Earphone jack 20.USB port 21.Type-C charging port 22.Micro SD card slot 23.Solar panel</p> <p>POWER SWITCH 1.Long press the "U" button to turn on the radio. 2.Long press the "U" button again to turn off the radio.</p> <p>SLEEP MODE 1.After the product is turned on, short press the "MODE" button to set a timed shutdown. Each press increases the duration by 10 minutes, 10/20/30/40/50/60/70/80/90/OFF. 2.After the screen displays the time, no action will take effect within 3 seconds.</p>	<p>LOCKING MODE 1.In the power on state. 2.Lock: Long press the "MODE" button, and a key symbol will appear in the upper right corner of the screen, indicating that all buttons are locked (Except for Volume knob and Function switch) and cannot be operated. 3.Unlock: Long press the "MODE" button, and the key symbol in the upper right corner of the screen disappears, indicating that all buttons have been unlocked and can be operated.</p> <p>VOLUME KNOB The compass and the volume knob are integrated and the volume can be adjusted by turning the compass.</p>	<p>RADIO MODE</p> <p>A. Manual Tuning Mode</p> <ol style="list-style-type: none"> Turn on the radio and adjust the "Function Switch" to "RADIO" to enter the manual tuning mode and you will hear a "Radio MODE" sound. Press the "BAND" Button to select the FM/AM/SW/WB band. Rotate the tuning knob to select a radio station. Rotate the volume knob to adjust the volume level. <p>B. Digital Tuning Mode</p> <ol style="list-style-type: none"> Turn on the radio and adjust the "Function Switch" to "RADIO" to enter the manual tuning mode and you will hear a "Radio MODE" sound. Press the "BAND" Button to select the FM/AM/SW/WB band. Long press the "BT" button to automatically search station, when the station receive a signal it will automatically stop searching. Long press the "BT" button to automatically search and store as preset stations. Short press the "BT" button to call out the preset stations, you can switch the preset stations by "(BT) (BT)" button. <p>BLUETOOTH MODE</p> <ol style="list-style-type: none"> Turn on the radio and adjust the "Function Switch" to "BT" to enter the Bluetooth mode and you will hear a "Bluetooth mode" sound. 																										
<p>MICRO SD CARD/USB PLAYBACK</p> <p>1.Turn on the radio and adjust the "Function Switch" to "M-PLAY" to enter the "M-PLAY mode". The screen displays "TF" flash on the screen indicates that no data read. 2.Once insert Micro SD (TF) or USB can be played immediately, after successfully reading the data, the playing time of the song will be displayed on the screen. 3.Short press the "BT" can play/pause the song. 4.Short Press the "BT" button to switch to previous or next song. When you switch songs, the song number will be displayed on the screen. After the song number display on the screen for 3 seconds, the song playing time will be displayed on the screen.</p> <p>SOS ALERT FUNCTION</p> <p>1.Please push the switch on the back of the product to "SOS" position. This will activate the "SOS" alert sound with the flashlight flashing. 2.Push the button back to the middle position to turn off this function.</p>	<p>CHARGING & DISCHARGING FUNCTION</p> <p>A. Solar Charging</p> <ol style="list-style-type: none"> Put the solar panel directly towards sunlight. When the charging indicator lights turn red, it indicates that the solar panels charging the internal battery. The charging efficiency depends on the strength of sunlight. The stronger sunlight, the better the charging effect. Short press the "BT" can play/pause the song. Short Press the "BT" button to switch to previous or next song. When you switch songs, the song number will be displayed on the screen. After the song number display on the screen for 3 seconds, the song playing time will be displayed on the screen. <p>B. Hand Crank Charging</p> <ol style="list-style-type: none"> Turn the hand crank clockwise or anti-clockwise and the red charging indicator will light up to indicate that it is charging. Speaker has no sound: Hand crank at 130-150RPM for 1 minute, the flashlight can be used for more than 30+ minutes or play the radio (medium volume) for 3 minutes. <p>C. Type-C Input</p> <ol style="list-style-type: none"> Open the dust cover on the back of the product. There is a Type-C charging port and a USB output port on the back. Use the supplied Type-C charging cable to charge the radio, the charging indicator in the upper left corner of the screen will turn red and the battery symbol on the screen will flash while charging. The device has over-voltage protection, when the voltage of the adapter exceeds 6V will automatically stop the charging. Please shake the hand crank to activate the battery if the Type-C charging port has no response. <p>D. USB Output</p> <ol style="list-style-type: none"> Type-C charging port can output power and input power, external input DC 5V power supply can be used to charge the device battery, use dual Type-C charging cable connected to cell phone can output DC 5V 1A. Plug the charging cable (package includes) into the USB output port of the device and insert the other end into the charging port of your cell phone to charge your cell phone (Output DC 5V 1A). If your phone has a Type-C plug, you can use this device Type-C output to charge your phone directly. <p>NOTE:</p> <ol style="list-style-type: none"> 1.Please turn the hand crank 3-5 minutes to activate the internal battery before using the product. 2.The hand crank is normally used in emergency situations when the power is out. 	<p>NOTE:</p> <ol style="list-style-type: none"> If your phone due to the agreement problem can not be charged by this device when this device is turned off, you can turn on the device to charge your phone. When in Radio mode, the system will turn off the charging and discharging function because the radio will be interfered with current disturbance. <p>BATTERY INDICATOR</p> <ul style="list-style-type: none"> The battery symbol on the screen indicates the power level. 3 level indicate power: C>85% 2 level indicate power: 50%<C<85% 1 level indicate power: 30%<C<50% Blank indicate power: 15%<C<30% Flash indicate power: C<15% <p>NOTE:</p> <p>Low battery will affect normal use of the product, please charge it in time.</p> <p>POWER PROTECTION</p> <p>When there is an overload or short circuit inside the product, the protection chip will cut off the power to prevent damage to the battery. When the battery voltage is below 3.3V, the protection chip will cut off the power to prevent over discharge and protect the battery from damage.</p>	<p>SPECIFICATIONS</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>Frequency Range</td> <td>FM 87-108MHz/AM 520-1710kHz SW 5.7-17.9MHz WB 162.400-162.550MHz</td> </tr> <tr> <td>Bluetooth</td> <td>5.4</td> </tr> <tr> <td>White Noise</td> <td>8 kinds of natural sound</td> </tr> <tr> <td>Size</td> <td>81x52x132mm/3.2x5x2in</td> </tr> <tr> <td>Weight</td> <td>About 352g/0.77lb</td> </tr> <tr> <td>Maximum Power</td> <td>About 14W</td> </tr> <tr> <td>Operating Voltage</td> <td>3.3V-4.2V</td> </tr> <tr> <td>Speaker</td> <td>4Ω 5W (internal magnetic type)</td> </tr> <tr> <td>LED Flashlight</td> <td>1W/70LM</td> </tr> <tr> <td>Battery Capacity</td> <td>4000mAh / 3.7V</td> </tr> <tr> <td>Type-C Charging</td> <td>5V 2A(Fully charged 3-5 Hours)</td> </tr> <tr> <td>Battery Life</td> <td>>3 years (daily average of 3 hours) /500 times cycle charging</td> </tr> <tr> <td>Operating Temperature Range</td> <td>-10°C ~ +60°C</td> </tr> </table> <p>WARRANTY</p> <ol style="list-style-type: none"> This product has a full 12-month warranty against manufacturing defects. The warranty period begins from the date of purchase. <p>PACKAGE INCLUDES</p> <ul style="list-style-type: none"> • Radio x1 • User Manual x1 • Type-C Cable x1 • Packaging Box x1 	Frequency Range	FM 87-108MHz/AM 520-1710kHz SW 5.7-17.9MHz WB 162.400-162.550MHz	Bluetooth	5.4	White Noise	8 kinds of natural sound	Size	81x52x132mm/3.2x5x2in	Weight	About 352g/0.77lb	Maximum Power	About 14W	Operating Voltage	3.3V-4.2V	Speaker	4Ω 5W (internal magnetic type)	LED Flashlight	1W/70LM	Battery Capacity	4000mAh / 3.7V	Type-C Charging	5V 2A(Fully charged 3-5 Hours)	Battery Life	>3 years (daily average of 3 hours) /500 times cycle charging	Operating Temperature Range	-10°C ~ +60°C
Frequency Range	FM 87-108MHz/AM 520-1710kHz SW 5.7-17.9MHz WB 162.400-162.550MHz																												
Bluetooth	5.4																												
White Noise	8 kinds of natural sound																												
Size	81x52x132mm/3.2x5x2in																												
Weight	About 352g/0.77lb																												
Maximum Power	About 14W																												
Operating Voltage	3.3V-4.2V																												
Speaker	4Ω 5W (internal magnetic type)																												
LED Flashlight	1W/70LM																												
Battery Capacity	4000mAh / 3.7V																												
Type-C Charging	5V 2A(Fully charged 3-5 Hours)																												
Battery Life	>3 years (daily average of 3 hours) /500 times cycle charging																												
Operating Temperature Range	-10°C ~ +60°C																												