



Operating Instructions:

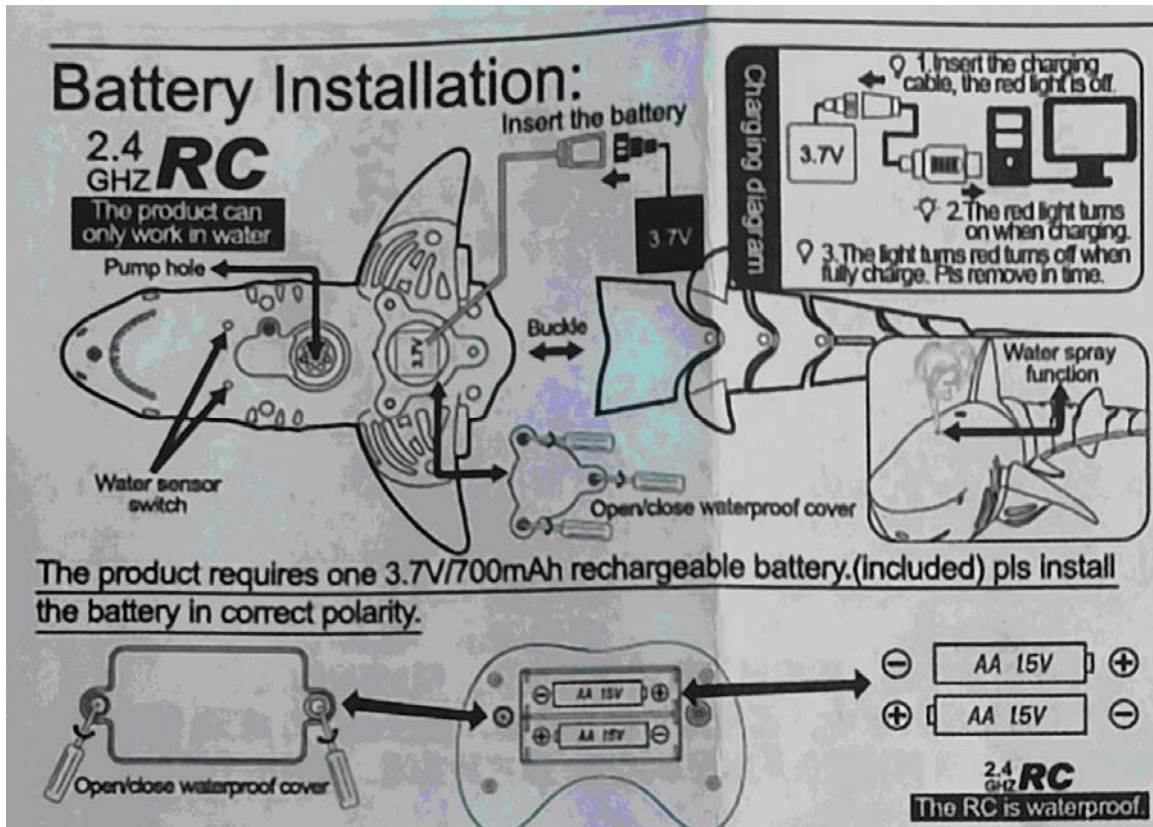

Remote control requires 2x1.5V "AA" non-rechargeable batteries .(not included) please install the battery in correct polarity.

- Open the waterproof cover Loosen the screw counterclockwise with a Phillips screwdriver, and tap the main body in the opposite direction to make the waterproof cover come out naturally.
- Close the waterproof cover. Cover the waterproof cover, and use a Phillips screwdriver to tighten the screws clockwise.
- Tighten the screws to ensure the waterproof function when re-install the cover.
- If the battery compartment is gotten with water due to wrong operation, please dry and replace new battery.
- When replacing the battery, make sure that the battery compartment is dry.

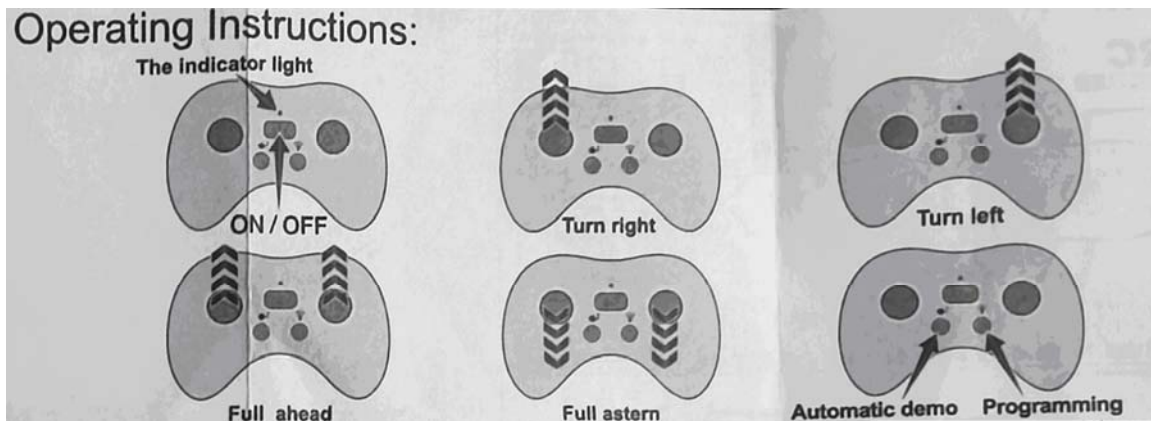

1. Method 1: put the product into water ,lights on the back of the shark will turn on then start the RC until Its light turns of after flashing ,That means match successfully.
2. Method 2: start the RC,and the red light turns on and keeps flashing, then put the shark into water ,its eye light turns on the RC red light turns off. That means match successfully. (Note: if the RC red light keeps flashing which means match fail, Then take the product out of water and turn off the RC, then operate according to the method above until match successfully.)
3. Automatic demonstration: Press the automatic demonstration button, the product will automatically cruise for 100 seconds.
4. Water spray function: press the button gently to open or close the water spray function.



BATTERY CONSIDERATIONS

- 1 This product uses one 3.7V/700mAh rechargeable lithium battery, and the remote control uses two 1.5V "AA" non-rechargeable batteries.
- 2 The battery should be taken out and Installed in correct polarity and voltage to avoid short circuit.
- 3 Non-rechargeable batteries cannot be charged.
- 4 Rechargeable batteries must be charged under adult supervision.
- 5 The rechargeable battery should be removed from the toy before charging.
- 6 Different types of batteries or old and new batteries cannot be mixed.
- 7 Only batteries that are the same as or equivalent to the recommended batteries can be used.
- 8 The exhausted battery should be taken out of the toy. If it is not used for a long time, please take out the battery from the toy.
- 9 The power terminals should not be short-circuited.
- 10) Never connect to the power sources which are more than recommended.
- 11) The wire, plug, shell and other parts of the charger should be checked regularly during use. If damaged stop using until repaired.
- 12) When the charger is connected to the battery, its light turns red, then turn off when the charger is plugged into a computer or mobile to charge And it will turn red again while fully charged.



WARNING

- **Children should only use under adult supervision. Never play alone in the water or by the pond.**
- **Small parts not for children under 3 years old.**



CAUTION

- Children toys. It can swim in the water by 2.4GHz wireless remote control.
 - Match automatically. Only control one to one when match successfully.
 - When matching, please make the RC and product as near as possible.
 - This product has the function of sensing water, and the motor will stop running after the product is taken out of the water.
 - Both this product and the remote control are waterproof. Remote control distance: 30 to 40 meters in a clear environment.
 - Only operate in tranquil, clean water. A shallow pool is recommended.
 - After each use, please wipe with a towel and let it dry completely,
 - Do not operate near concrete walls, which may interfere with transmission.
- This product is designed to use in fresh water, avoid operating in salt water too long.
- Up to 10 players can play at the same time.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This Equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.