 


Gendome POWER BANK

MICRO

User Manual

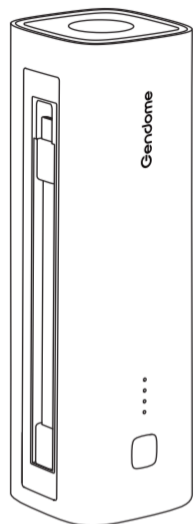

Compatible with multipletypes of devices




Product Specifications


15000mAh Two-way Fast Charging Portable Power Bank

Model:	Micro30
Material:	Aluminiumlegierung
Capacity:	15000mAh (3.2V/48Wh)
Battery:	LiFePO4
Output OUT1:	5V=3A/ 5V=4.5A/ 9V=2A/ 12V=1.5A
Output OUT2:	5V=3A/ 9V=2.22A/ 12V=1.67A
Output OUT3:	5V=3A/ 9V=2A/ 12V=1.5A
Output Watch Charger:	1W
Output OUT1+OUT2/3/Watch:	5V=3A MAX
Input IN:	5V=3A/ 9V=2A
MAX Output Power:	22.5 W
Rated Energy:	3.2 V/48 Wh
Net Weight:	1.03lbs / 0.467kg
Dimension(W*D*H):	1.85*2*6.14 inch 47*50*156mm
Function:	It integrates multiple fast charging protocols such as 5V/3A, 9V/3A, 12V/3A, etc. It can charge various electronic products such as multi-model mobile phones of Apple, Samsung, Huawei, digital cameras, Bluetooth headphones, iPads, portable power banks, laptops, small fans, etc. under the sun.

 Product introduction

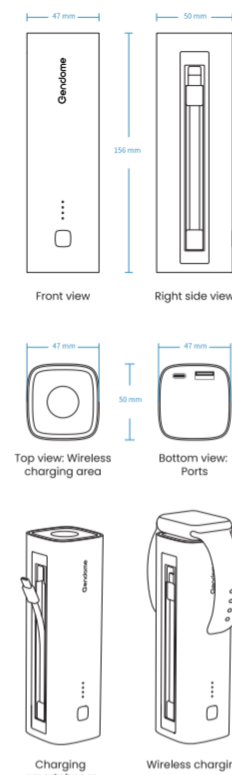

User Instructions

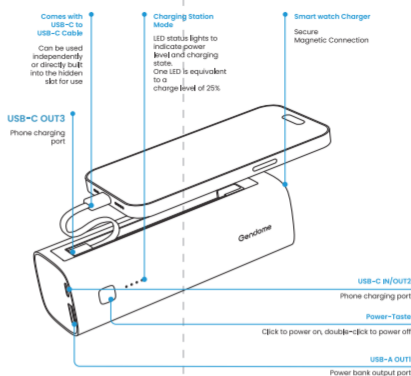 

01. How to Power on

1. Click to power on;
2. Connect a device to automatically start.

04. Charge the Power Bank

1. Please use a charging cable and charger that match the voltage and current of the product to charge the power bank;
2. Use the charging cable of your digital device, connect the Type-C connector to the "IN/OUT2" input interface of the power bank;
3. Connect the USB-A connector to the charger port. The last LED light will start flashing, indicating that the power bank is being charged;
4. When the power bank is fully charged, the LED light will stop flashing and remain steady.

06. Low Battery Warning

When the battery level is approximately below 5%, the LED lights will flash simultaneously, indicating low battery status. Please recharge.

02. LED Indicator Instructions

1. The remaining battery level is visible only when device is powered on;
2. If no device is connected for 30 seconds, it will enter sleep mode and the LED lights will automatically turn off.

03. Operating Environment

1. Storage temperature: -10°C - 50°C;
2. Charging temperature: 0°C - 40°C;
3. Too high or low temperature (exceeding ±5°C) may cause device failure.

05. Charge a Digital Device with the Power Bank

1. Check if the charging voltage of the digital device matches the output voltage of the power bank;
2. Use the original charging cable of the digital device. Connect one end to the digital device and the other end to the output port of the power bank. It will automatically enter the charging state;
3. Press the power button once to start wireless charging for smartwatches.

07. Power Off and Reset Function

1. Press the button twice to turn off the output of the power bank and allow it to enter sleep mode. The power bank will not enter sleep mode when being charged;
2. Long press the power button for 10 seconds to force software reset.

Important Notes

1. Please fully charge the power bank prior to first use;
2. To ensure the proper use of the power bank, please use the correct cables and accessories. Before charging digital devices, please confirm their input voltage/current;
3. Do not use chargers with higher input voltage/current than the power bank;
4. It is strictly prohibited to drop, impact, disassemble, modify, or attempt self-repair of the power bank, to avoid damaging its protection system and causing battery overheating, fire, or explosion;
5. Do not place the power bank in damp areas, immerse it in water, or expose it to heat sources that are flammable. Do not use the power bank after it has been immersed in water;
6. Do not leave the power bank inside a vehicle, as exposure to high temperatures from sunlight may damage the product or cause it to catch fire or explode;
7. Do not insert any foreign objects into the metal holes of the product to avoid short circuits or damage;
8. If any abnormalities such as battery swelling, leakage, or deformation occur, then discontinue use;
9. If the power bank experiences strong impact or severe compression, falls from a height of over 1 meter, or exhibits shell deformation or bulging, then discontinue use;
10. To avoid long-term storage degradation, please fully charge the power bank at least once every three months.

- Intended for safe use at altitudes up to 2,000m and below.
- Intended for use only in non-tropical climate conditions.

Risk of Fire and Burns.
Do Not Open, Crush, Heat Above 55°C or Incinerate, Follow Manufacturer's Instructions.

WARNING
Please use this product according to the enclosed manual. Ignoring the manual may result in fire or other damages.
Keep this product out of reach of children.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference

in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.