

KA215 美国说明书

尺寸：100*130CM

封面157G铜板纸，彩色印刷，封2封3留白

内页：80G书纸，黑白印刷

BIGASUO

Karaoke Machine

User Manual



Model:KA215

CATALOG

OPERATING INSTRUCTIONS.....	1
PRODUCT CONTENTS.....	2
SPEAKER DESCRIPTION.....	3
MICROPHONE DESCRIPTION.....	5
DETAILED USAGE GUIDE.....	6
PRODUCT ATTRIBUTES.....	9
FQA.....	10
FCC WARNING STATEMENT.....	11

Thank you for purchasing our products! This manual provides important information that will help you safely operate this karaoke machine.

Please read this user manual carefully before using this product. Thank you!

If you have any problem with the product, please don't hesitate to email us at:

us-karaoke-215@eitack.com

We will reply to you within 24 hours and give you the best solution.

OPERATING INSTRUCTIONS

All the instructions should be read carefully before operation and follow the instructions.

- * The speaker should be situated away from heat sources such as radiators, and not exposed to moist air or water.
- * Place the machine in a stable place to prevent it from falling down.
- * Do not use the machine with attachments not approved by the manufacturer.
- * Check the machine for damage before each use. Please don't attempt to repair the machine if you are not professional.
- * Disconnect the power cable from the outlet and switch it off before cleaning the machine. Please only use a soft cloth, with no harsh abrasives or chemicals to clean, as they will damage the appearance.
- * The power cable of the speaker should be unplugged from the socket, and the power switch should be turned off when not in use for a long time.
- * Please don't leave the speaker and the microphones in a state of exhaustion for a long time, otherwise the battery will be seriously depleted.
- * Do not turn on the microphones while they are charging.
- * When the microphone is turned on, Do not point the microphone to the machine straightly to avoid howling.

 
PRODUCT CONTENTS




1 x Karaoke Machine



2 x Rechargeable
Wireless Microphones



1 x 3.5 mm AUX Cable

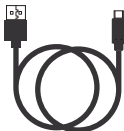 

1 x Charging Cable for Karaoke
Machine and Microphones



 
4 x Foam Microphone Cover



1 x User Manual

Note: Please check the product packaging carefully, if any accessories are missing, please contact the after-sales service personnel by email at us-karaoke-215@eitack.com

SPEAKER DESCRIPTION

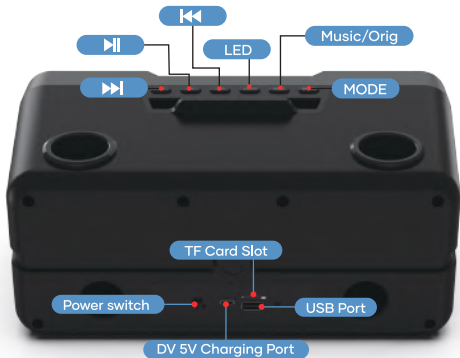

Mode : Short press to switch playback mode: Bluetooth/SD/AUX/USB

Music/Orig : Short press to switch between music and accompaniment

LED : Long press to turn on/off the light, short press to switch the light color

⏮ : Short press to switch to the previous song

⏸ : Short press to pause/play

⏭ : Short press to switch to the next song

Rotary button: Rotate to adjust the volume of the speaker

Note:

The volume of the speaker can be adjusted by the volume rotatable button. At the same time, the sound key of the connected playback device (mobile phone/iPad/TV) can also control the volume of the speaker.

When you adjust the volume rotatable button to the maximum, if the sound is still low, please increase the volume via the sound key of your playback device (mobile phone/iPad/TV).

Instructions for use

As you power on, Bluetooth mode is the default. You could search for the Bluetooth device named "BIGASUO" on your phone/iPad for connection. It will be converted to TF card mode when you insert the TF card. It will be converted to USB mode when you insert the USB. It will be converted to AUX mode when you insert the AUX cable. When inserting the TF card and USB at the same time, press the "MODE" button to convert the mode.

Singing instruction

When the speaker is turned on, the wireless microphone is connected to the speaker by default after turning it on. Just turn on the wireless microphone power switch "ON / OFF" and you can sing in any mode of the speaker. When you sing, you can adjust the reverb effect through the "ECH" button of the wireless microphone and adjust the voice volume through the "VOL-/VOL+" button. The volume is adjusted according to your personal preference to achieve the desired singing effect.

MICROPHONE DESCRIPTION



Power Button : Long press to turn on/off the microphone

VOL- /VOL+ : Press the buttons to adjust the volume of the microphone.

ECH- /ECH+ : Short press the buttons to adjust the reverb effect on your singing.

EQ : Short press the "EQ" button to switch 6 different EQ effects (pop, rock, classical, bass, treble, standard).

A ⇌ B :

Short press the "A ⇌ B" key to change frequency.

Long press 2 seconds to switch "CHA" and "CHB" frequency band. When the two microphones are in the "CHA" and "CHB" frequency band respectively, the microphone can be a duo. When both microphones are in the same frequency band, only one microphone can be used.

DETAILED USAGE GUIDE

How to charge the machine?

Use the included charging cable to plug into the DC 5V charging port on the back of the speaker to charge.

How to charge the microphones?

There are two ways to charge:

1. Use the included charging cable to plug into the DC 5V charging port on the bottom of the microphone to charge.

 
 


2. When the speaker is plugged into the DC power supply, the microphone can be directly placed in the microphone placement slot on the speaker to be charged. While charging, the top bar of the battery icon on the display will flash, then stop flashing when the battery is full. Be sure to charge fully before each use.



How to implement a duo?

Long press 2 seconds the "A ⇌ B" button to switch the frequency band "CHA" and "CHB". One microphone is set to the "CHA" frequency band, and the other is set to the "CHB" frequency band, then you can use the two microphones to sing together.

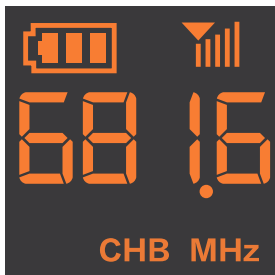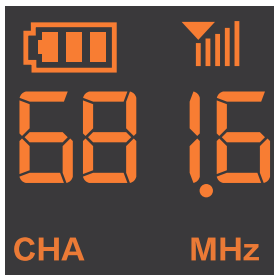

How to connect to Bluetooth?

Short press the "MODE" button to switch playback options to Bluetooth, open the Bluetooth connection setting of your playback device, and simply search for the machine name "BIGASUO" and click to connect.

How to use SD mode?

Plug your TF card into the TF card slot on the back of the machine. Playback will begin immediately.

How to start AUX mode? (Playing music from an AUX-compatible device like MP3 Player, Phone, or TV)

Plug the AUX cable into the designated slot on the back of the machine to activate AUX mode. Then, plug the other end of the adapter into the designated inputs on your device and play music.

How to use USB mode? (Playing music from a USB drive)

Plug a USB stick into the USB port on the back of the machine and your music will begin playing automatically.

How to clean?

Turn the machine and microphones off and unplug them from the charging adapter. Gently wipe the outside of the machine using a clean dry cloth. Keep all vents, buttons, and openings free of lint and dirt. Do not immerse the machine in water and do not use any harsh cleaners.

How to store?

Charge the machine and microphones so that they are ready for next use. Make sure that the machine is clean and dry.

Store the machine in a cool dry place away from damaging machine parts.

PRODUCT ATTRIBUTES

Speaker Power	2*15W
Power input	TYPE-C 5V /2A
Bluetooth transmission distance	10 meters
Support interface	TYPE-C charging port, USB multimedia interface, TF card multimedia interface, AUX audiointerface.
Materials	Plastic and Stainless Steel

FAQ

Questions	Solution
The battery icon on the microphone screen is blinking.	The microphone battery is low or depleted.
The microphone will not turn on.	Charge before use.
The machine will not turn on.	The battery is depleted. Be sure to charge the machine after each use and, when charging the microphones in the charging docks, keep the machine plugged in.
Two microphones can't duet?	Ensure that each microphone is on a separate frequency band. This is represented by "CHA" or "CHB" in the bottom left corner of the microphone LED screen. (To switch channels, hold down the A \approx B button for two seconds). One microphone is set to the "CHA" frequency band, and the other is set to the "CHB" frequency band, then you can use the two microphones to sing together.

- * If any of these issues persist or if any part of the machine becomes damaged, discontinue use and consult a licensed electrician for repair.
- * Do not attempt to modify or repair the machine yourself. If you have any problem with the product, please don't hesitate to email us at:

us-karaoke-215@eitack.com

We will reply to you within 24 hours and give you the best solution.

FCC WARNING STATEMENT

FCC Statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- (3) The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning:

The device has been evaluated to meet the general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

BIGASUO

KARAOKE MACHINE USER MANUAL

MODEL:KA215