


Bidet Toilet Seat

Please read this manual carefully
before use and keep it properly

Model: WLG3-505V-US WLG3-505D-US
 WLG4-505V-US WLG4-505D-US
 WLJG3-505V-US WLJG3-505D-US
 WLJG4-505V-US WLJG4-505D-US

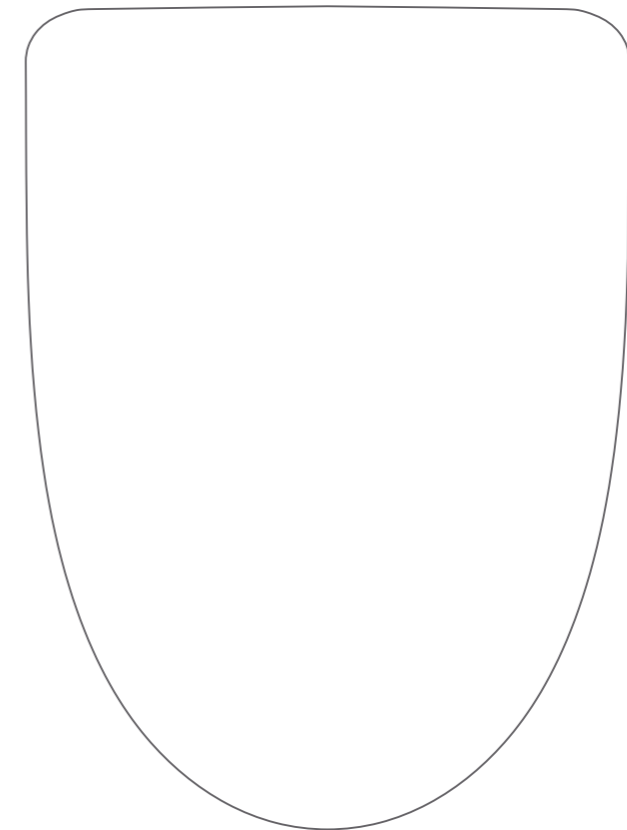

Correct specifications depend on the actual model.
All specifications are subject to change without prior notice.

Content

Important safeguards	3-4
Functional differences of different models	5
Safety precautions	6-10
Part name	11-12
Product installation	12-16
Confirmation before use	17
How to use	18-20
Function description	21
Cleaning procedure	22
Not in use for long time	23
Quick judgment and maintenance for the trouble	24-26
Technical parameters	27
Service/maintenance guide	28
Warranty service card	29-30

Before starting installation work, read the manual carefully.
If you encounter any problems in installation or performance, please be sure to contact us.
Our contact information is on the bottom page of the manual.
There is a guarantee in this manual, so please keep it properly and take it out for reading when necessary.

■ IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING

GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

DANGER– Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided — if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the connection should be made by qualified service personnel. **CAUTION:** Risk of property damage. If it is necessary to use an extension cord, a single cord may be used provided that the “Type” begins with “SJ”, the cord is a 12 gauge, grounded (12/3), is no longer than 25 feet (7.6 meters), and is plugged into a GFCI* electrical outlet. Promptly replace an extension cord that exhibits any sign of damage.

DANGER– To reduce the risk of electrocution:

1. Do not use while bathing.
2. Do not place or store product where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquid.
4. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons.

1. Close supervision is necessary when this product is used by, on, or near children or invalids.
2. Use this product only for its intended use as described in this manual. Do not use attachments

not recommended by the manufacturer.

3. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.

4. Keep the cord away from heated surfaces.

5. Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

6. Never use while sleeping or drowsy.

7. Never drop or insert any object into any opening or hose.

8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

9. Connect this product to a properly grounded outlet only. See Grounding Instructions.

10. Unplug this product before filling. Fill (reservoir) with water only unless otherwise specified by manufacturer. Do not overfill (or specify filling instructions).

SAVE THESE INSTRUCTIONS

■ IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)

WARNING – To reduce the risk of fire, electric shock, or injury:

1. Do not leave Appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
3. Use only as described in this manual. Use only manufacturer's recommended attachments.
4. Do not use with damaged cord or plug. If Appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
5. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run Appliance over cord. Keep cord away from heated surfaces.
6. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
7. Do not handle plug or Appliance with wet hands.
8. Turn off all controls before unplugging.

SAVE THESE INSTRUCTIONS

Please use the new hose assembly included with the product. Do not reuse old inlet hose.

WARNING: IF CONNECTION IS MADE TO A POTABLE WATER SYSTEM, THE SYSTEM SHALL BE PROTECTED AGAINST BACKFLOW

Functional differences of different models

Please confirm the model you purchased first, and then check the corresponding function.
The model and specification can be found on the nameplate at the rear of the machine.

○ indicates that the function is available and the blank indicates that no such function.



Functions		Models			
		WLG3-505V-US WLG3-505D-US	WLG4-505V-US WLG4-505D-US	WLJG3-505V-US WLJG3-505D-US	WLJG4-505V-US WLJG4-505D-US
Basic functions	Seat heating	○	○	○	○
	Water heating	○	○	○	○
	Rear/Female Wash	○	○	○	○
	Warm air drying		○		○
Additional functions	Deodorization	○	○		
	Auto lid open/close	○	○		
	Lid slow close	○	○	○	○
	Auto flushing				
	Smart Remote Control	○	○	○	○
	Leakage protection switch	○	○	○	○
	Moving wash	○	○	○	○
	Massage	○	○	○	○
	Laxative	○	○	○	○
	Sterilization of electrolyzed water				
	Antibacterial seat	○	○	○	○
	External filter	○	○	○	○
Energy saving	○	○	○	○	








SAFETY PRECAUTIONS

In order to prevent hazards and property losses caused by users and others, please read the safety precautions in detail to use this product correctly.

The following information is related to safety, please pay special attention!

- The logo and its meaning are described below:

 Warning	It means that if you ignore this sign and misoperate, you may cause serious injury or death.
 Caution	It means that if this sign is ignored and mis-operated, personal injury or financial loss may be caused.

Sign	Description
	This sign means: Enforce obedience.
	This sign means: Prohibit
	This sign means: No disassembly or refit
	This sign means: Keep dry
	This sign means: No touching with wet hands.
	This sign means: Ground Connection.
	This sign means: No high temperature and flammable objects.

WARNING

Do not splash the product with water.



May cause fire or electric shock.



※Reminder : Children, people with physical (intellectual) defects and lack of experience or common sense should be accompanied by special personnel when using this product.
This product must be connected with cold water supply (water inlet temperature is 1-40 °C), otherwise it may burn or machine failure.

WARNING

If you ignore this sign and operate incorrectly, it may cause danger!



Check whether the power socket is grounded.

- This product must be well grounded and can only be connected to the special 120V, 60Hz, 10A circuit with grounding fault short circuit or grounding leakage protector.



Ground connection
The appliance have to be earthed.



Remove the dust on the plug and completely insert the plug into the socket.

- Pull out the plug and clean it with a dry cloth.



Enforce obedience




It is only suitable for AC voltage of 120V (60Hz).

It is forbidden to use too much load on the same socket.

- May overheat or cause fire.



Prohibit

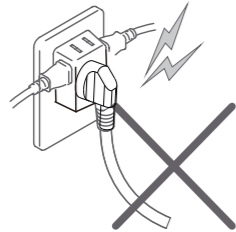


Do not use loose sockets.

- May cause fire or electric shock.



Prohibit

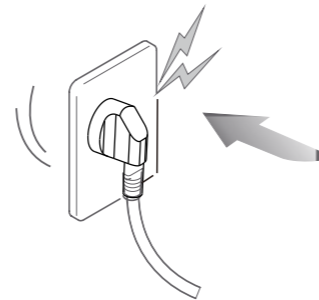


Do not plug/unplug the power plug when your hands are wet.

- May get electric shock hazard.



No Wet Hand

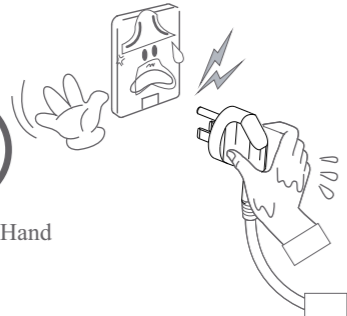


Do not pour water or detergent on the body or power plug.

- May cause fire or electric shock.



Keep dry

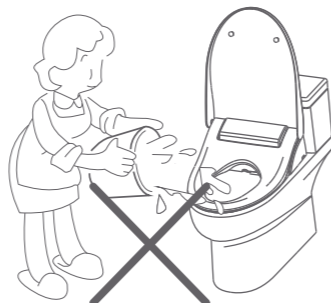

WARNING

If you ignore this sign and operate incorrectly, it may cause danger!



Do not pull the power plug or power cord at will.

- May cause fire or electric shock.



Prohibit



Ensure that the product uses tap water, and do not use other water sources other than tap water that do not meet the sanitary standards.

- May cause skin infection.
- May cause machine failure.



Prohibit



Please pull out the plug before cleaning the product.

- May get electric shock hazard.



Pull off the plug.




Do not disassemble or refit the product by yourself.

- May cause fire or electric shock.



No disassembly

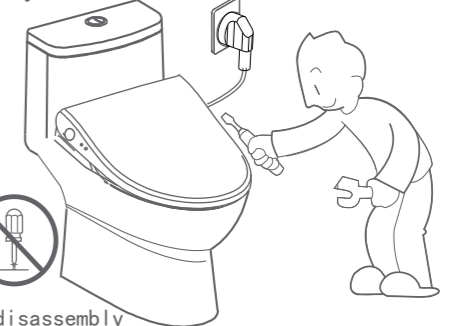

Do not put high temperature and inflammables near the product.

- May cause fire.



No high temperature




Do not bend or twist the water hose.

- May be leaking.



Prohibit

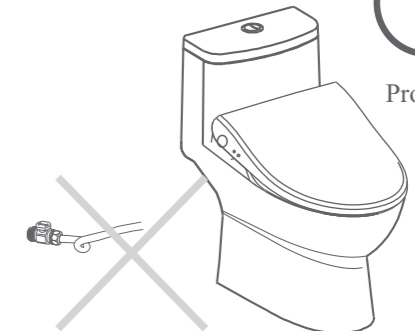


WARNING

If you ignore this sign and operate incorrectly, it may cause danger!



Do not place heavy objects on the seat ring or cover.

- May damage the product.

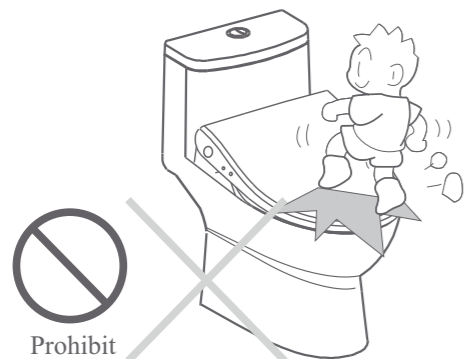

Prohibit

Do not use the following items to clean this product. Benzene, paint thinner, decontamination powder, nylon brush, etc.

- May damage the product.



Prohibit

Do not close the seat cover and seat ring with force.

- May damage the product.




Prohibit

When replacing the power cord, observe the following:

- If the power cord is damaged, contact the retail store where you purchased this product or the nearby customer service center.
- Only authorized technicians can replace the power cord.



Enforce obedience.

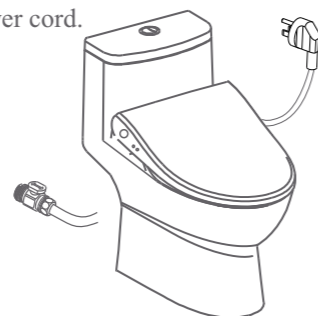


WARNING

Please follow the following guidelines




Do not expose the product to direct sunlight.

- May causes discoloration, plastic corrosion and damage.

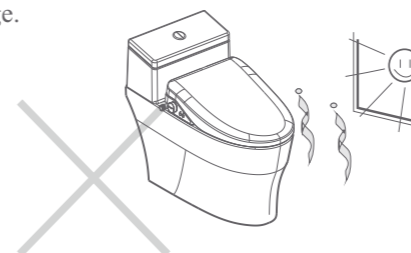

Do not use DC or AC power supply with voltage not 120V.

- May cause product fault.

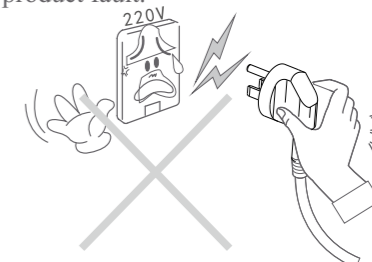


When using the product, make sure you don't lean against the cover.

- The cover may be damaged.




Do not pour urine on the body and nozzle.

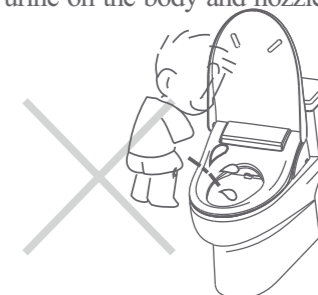


Part name

The figure on the right is applicable to the following models

WLG3-505V-UL/WLG3-505D-UL
 WLG4-505V-UL/WLG4-505D-UL
 WLJG3-505V-UL/WLJG3-505D-UL
 WLJG4-505V-UL/WLJG4-505D-UL

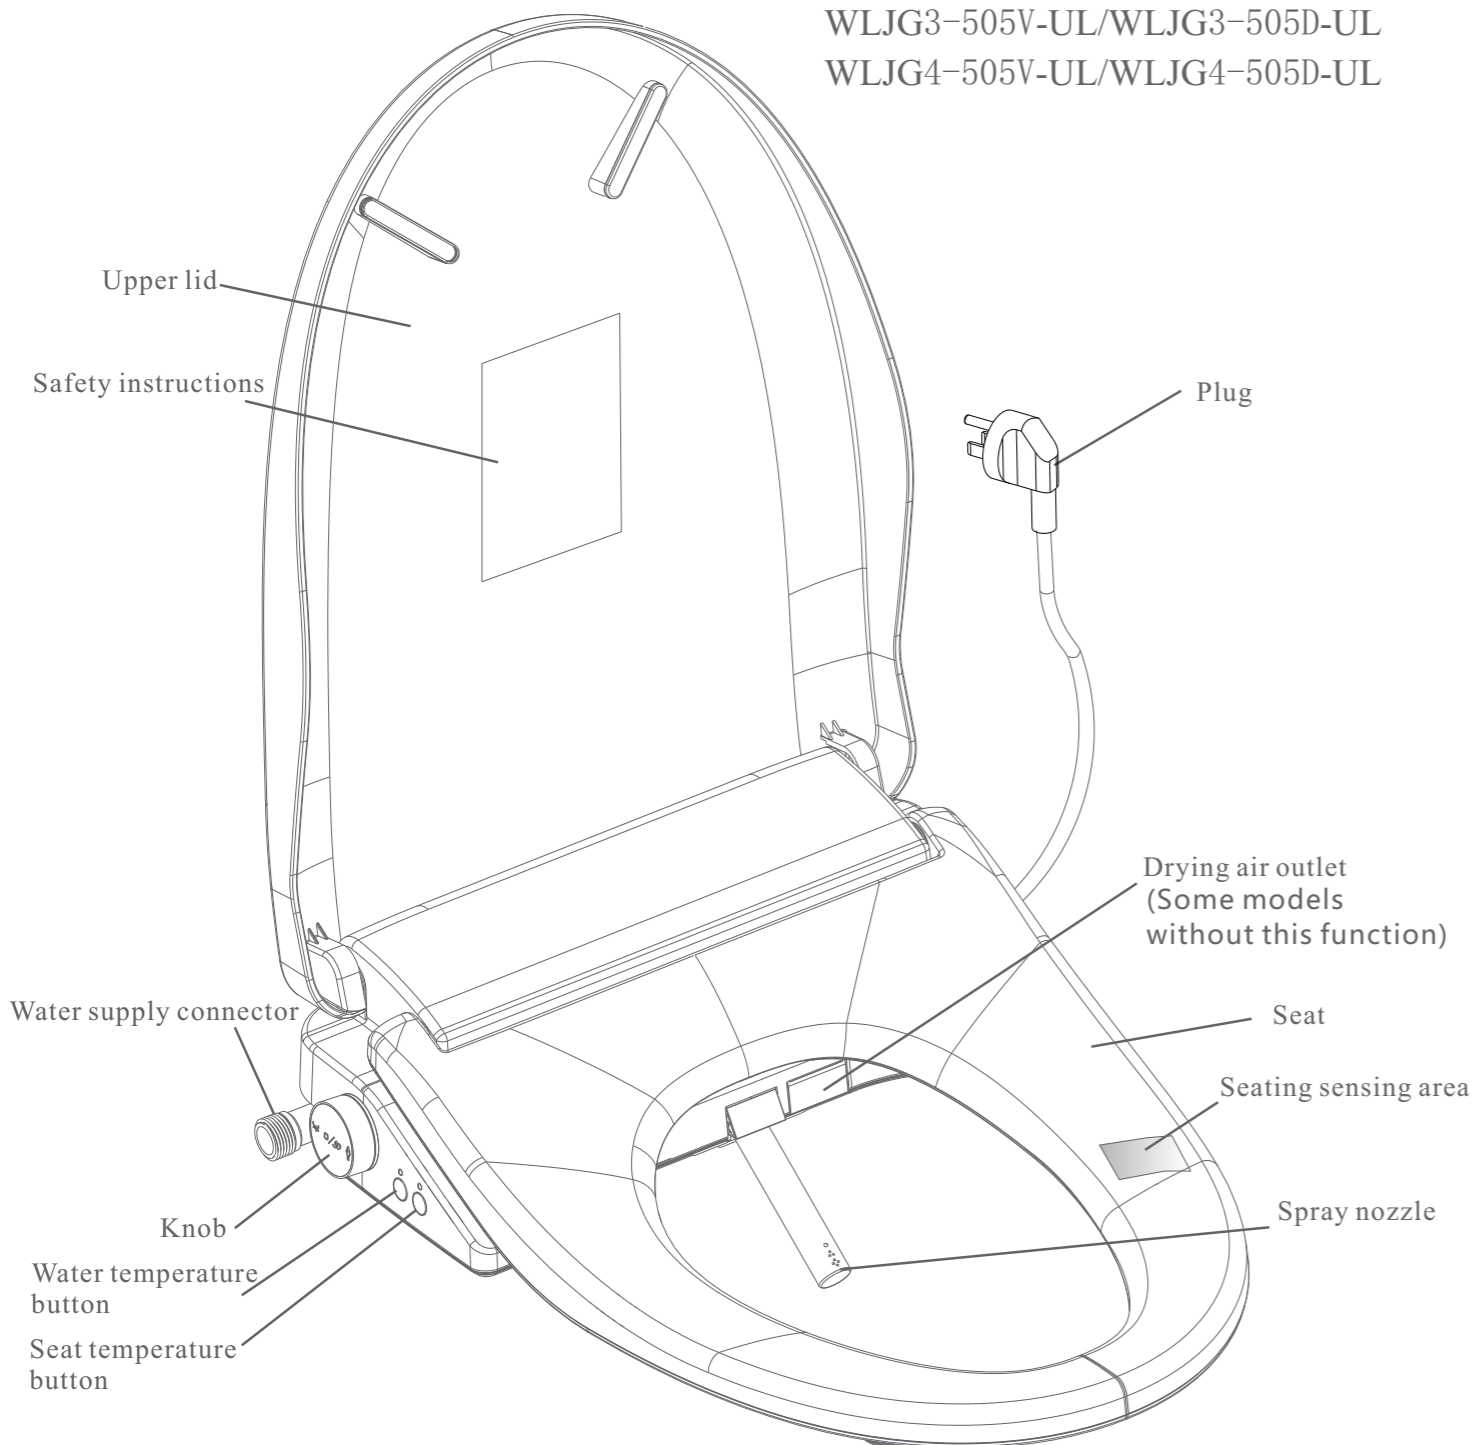

Part name

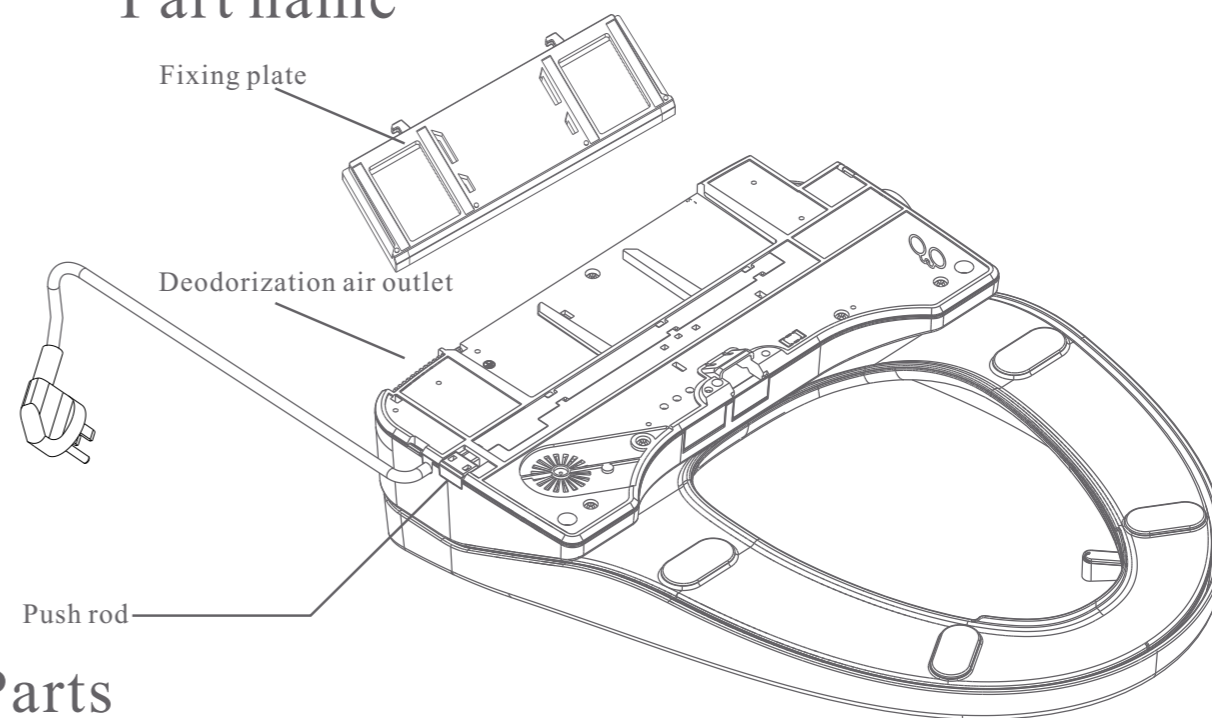


Parts


NO.	Name	Quantity	Sketch	Remark	NO.	Name	Quantity	Sketch	Remark
1	Main part	1pcs			6	Remote control accessories	1pcs		This part is not available for some models
2	Accessories					Remote control			
	Fixing plate	1pcs				Fixing plate	1pcs		
	Adjust Block	2pcs				Expander body	2pcs		
	Expansion bolt	2pcs				Screw	2pcs		
3	Waterway accessories	1pcs			7#batteries	1pack			
	Waterway accessories	1pcs							
	External filter	1pcs		Optional					
4	User's manual	1pcs							
5	Installation cardboard	1pcs							

Product installation

Size requirements of adapter cover

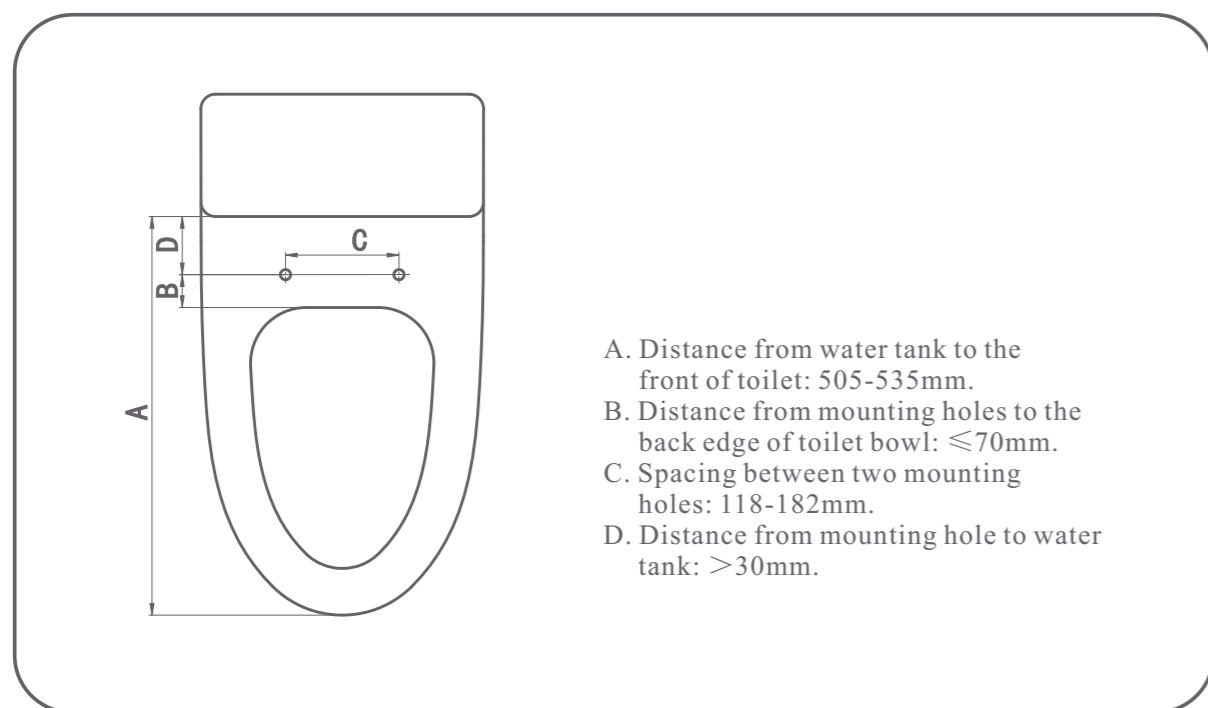


Preparation before installation

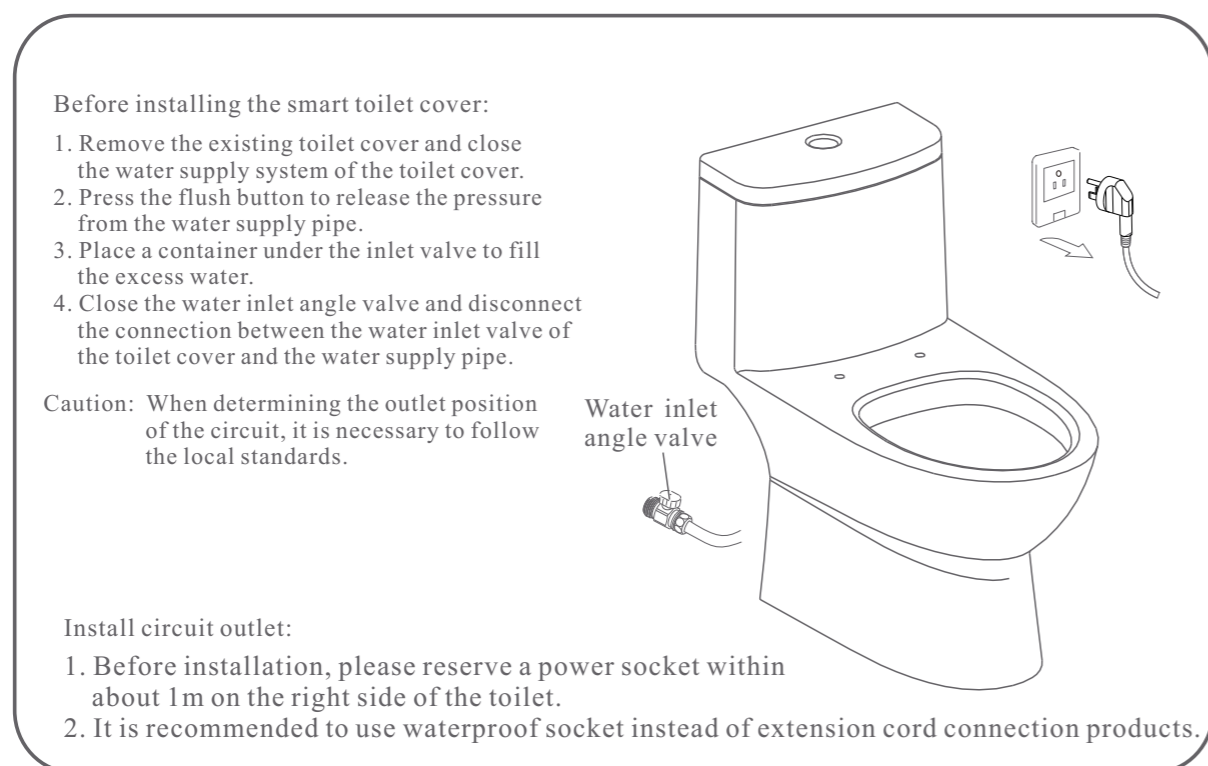


※All ceramic body outline drawings in this manual are for demonstration only.

Product installation

Install the fixing plate

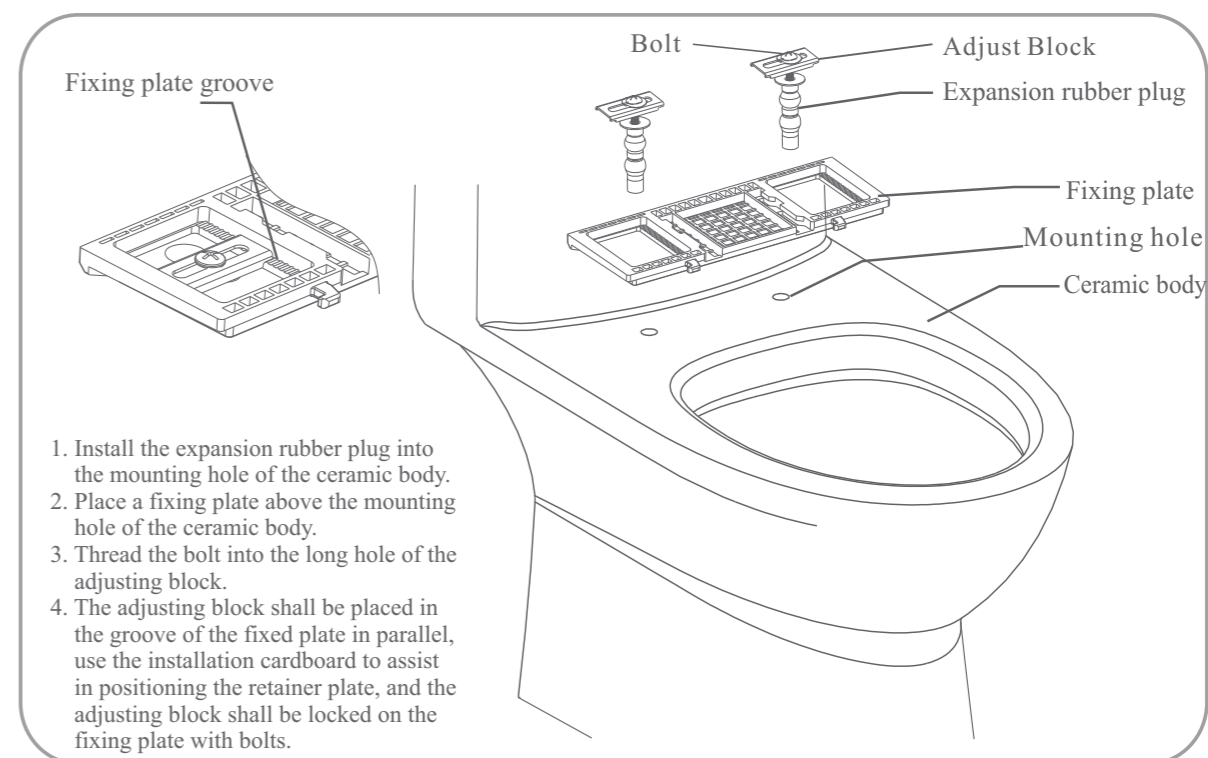

Install the toilet lid

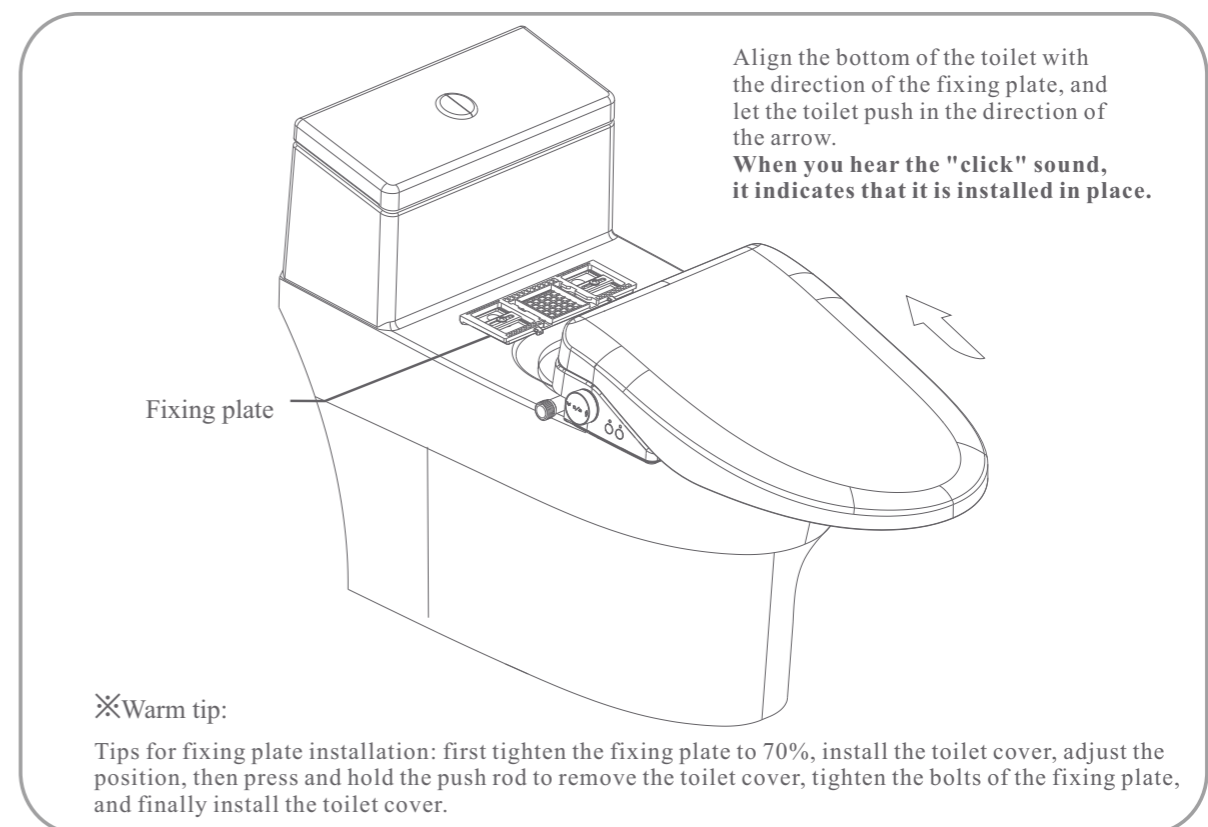


Product installation

Remote control installation

(Some models do not have control remote).



Installation method I

1. Remove the EVA adhesive sticker on the back of the remote control base.(as shown in Figure 1).
2. Stick the remote control base at the verified position.(as shown in Figure 2).
3. After the base is installed, put the remote control on the base as shown in the figure.(as shown in Figure 5 and Figure 6)

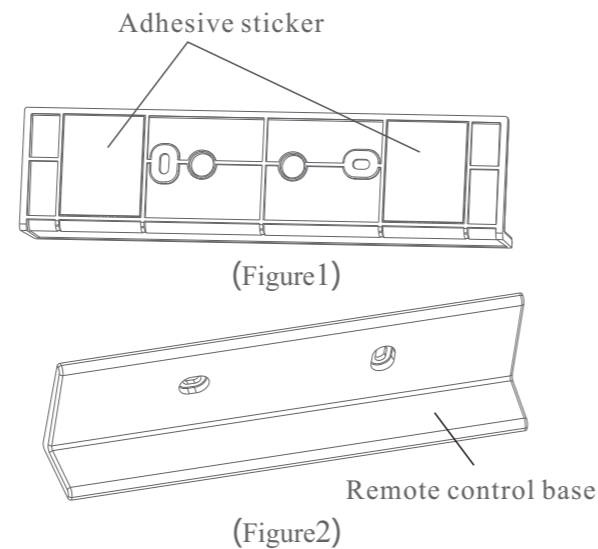


Installation method II

1. Facing the fixing hole of the remote control base, drill two expansion pipe holes with diameter of 6 on the wall and insert the expansion pipe.(as shown in Figure 3)
2. Install the remote control base and fix it with screws.(as shown in Figure 4)
3. After the base is installed, put the remote control on the base as shown in the figure.(as shown in Figure 5 and Figure 6)

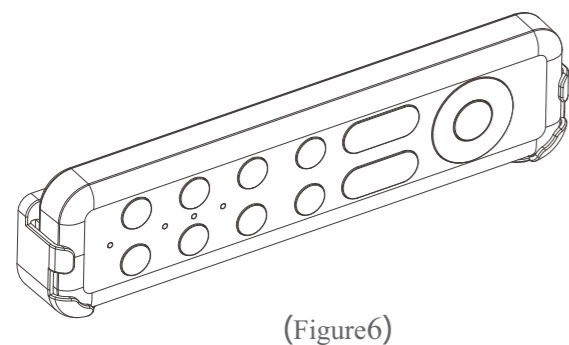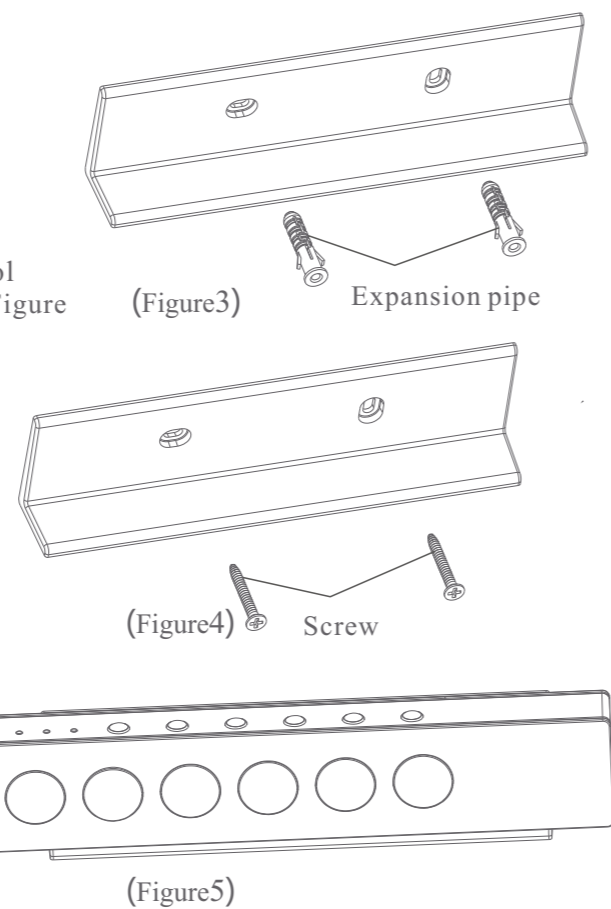


Product installation

Power on and water supply

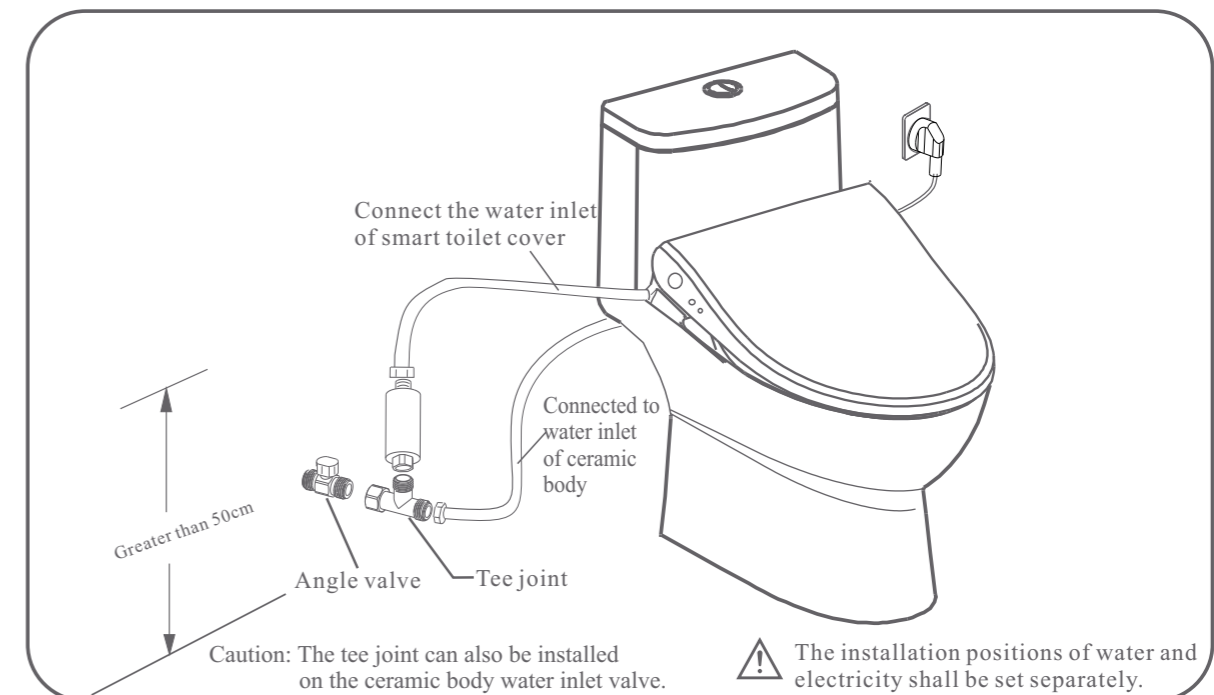

Connect the water supply

Connect the external water source with the water inlet with the equipped hose and filter screen.

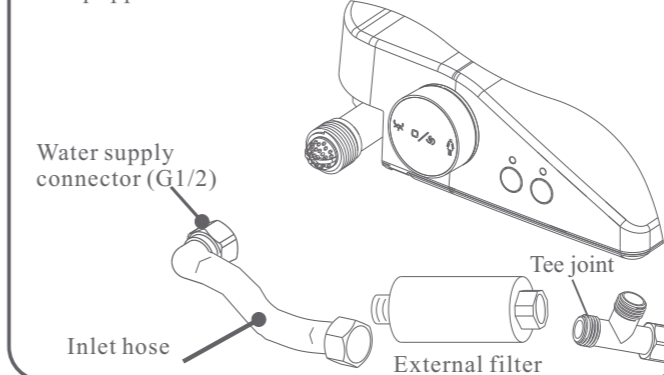

CAUTION

The plug shall be connected to an effectively grounded socket. Otherwise, electric shock may be caused in case of power failure or leakage.



Turn on electricity

1. Install 120V (more than 10A) socket at a position above 50cm from the ground.
2. The socket shall be installed where the water is not easy to splash.
3. Use a grounded socket.
4. Insert the power plug of the product into the socket.



WARNING!

Please connect the power supply according to the product power supply requirements, otherwise it may cause product fault.



Confirmation before use


Open valve

Open the inlet valve to provide water for the whole machine.

Confirmation and commissioning


1. Check power supply.

Confirm that the power plug is plugged in tightly and the indicator light on the plug is on, indicating that the system has been powered on. If the indicator light is not on, you can press the "reset" button on the plug to power on. After power on, you can hear the "tick" sound of the system buzzer.

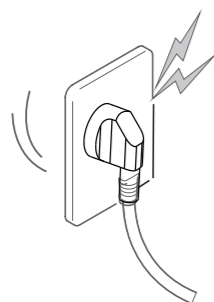


2. Human-body seating sensor

In the area shown in the figure, someone raises the seat sensing. The system function can be enabled only when the system senses that someone is seated.

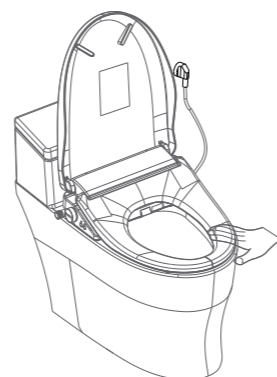


3. Check basic functions

When the human body seating sensing is on, press the "♂" or "♀" function on the quick panel to start the corresponding function.

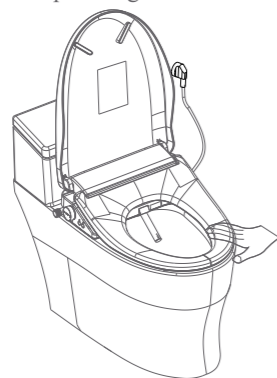

4. Check the drying function

When the human body is seated in the conduction state, press the "☰" function on the quick panel to start the corresponding function.

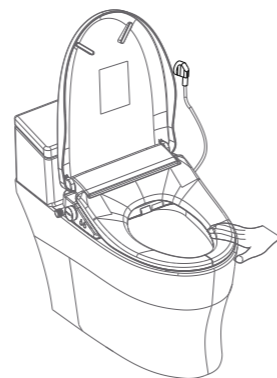

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:


- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.


How to use

Quick use of knob

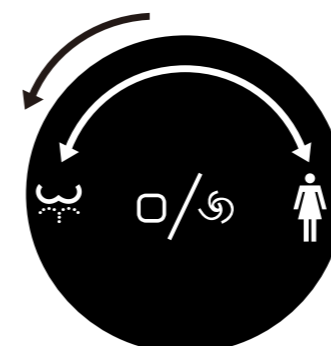

Seated

Turn backward to start rear wash function, and turn again to reduce water pressure.

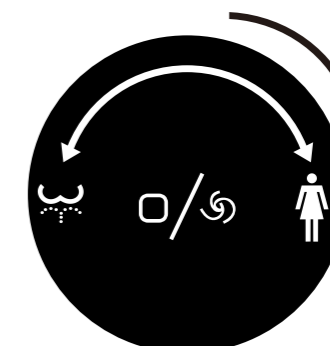

Seated

Turn forward to start the female wash function, and turn again to increase the water pressure.





Seated

Long press for 2 seconds to facilitate defecation (some models do not have this function), rotate again to water pressure gear cycle.

In non cleaning state: Press once to start the drying mode.

In the cleaning state, press once to stop the current mode, and press again to start the drying mode.

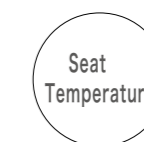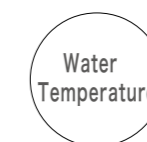

How to use the butto

Water temperature button: Short press the button to switch the water temperature to level1, level2, level3, off, and cycle in turn.

Long press the button to switch the nozzle moving or fixed cleaning state when using the rear wash/female wash function .

Seat temperature button: Short press the button to switch the seat temperature to level1, level2, level3, off, and cycle in turn.

Long press the button to switch the nozzle position to level1, level2, level3, level2, level1, and cycle in turn when using the rear wash/female wash function.

How to use

■ Stop	● Press the stop button to end the running function such as "rear wash", "female wash", "air drying" and "pulse wash".
■ Rear Wash	● When the seat ring senses by its sensing are that someone is sitting, and press the Rear Wash button in stop or other modes, it will start the washing function after a beep, and stop after 90 seconds. If the person leaves the seat ring during the function is running, the function will be stopped.
■ Female Wash	● When the seat ring senses by its sensing are that someone is sitting, and press the Female Wash button in stop or other modes, it will start the washing function after a beep, and stop after 90 seconds. If the person leaves the seat ring during the function is running, the function will be stopped.
■ Power Wash	● When the seat ring senses by its sensing are that someone is sitting, and press the Power Wash button in stop or other modes, it will start the washing function after a beep, and stop after 90 seconds. If the person leaves the seat ring during the function is running, the function will be stopped.
■ Wind temperature	● Press the water pressure button to change the water pressure of "rear wash" and "female wash" modes. The water pressure has three levels.
■ Water temperature	● Press the water temperature button to increase the water temperature in the "rear wash" and "female wash" modes. It has three levels and stand-by mode. 3 level is the highest and stand-by mode means all the indicated lights are off.
■ Seat temperature	● Press the seat temperature button to change the temperature of the seat ring. The seat ring temperature has 3 levels and stand-by mode. Level 3 is the highest and stand-by mode means all the indicated lights are off.
■ Lid open/clos	● Press the lid open/close button to open the toilet lid, and then press the button again to close it. Press for 3s to start or stop the auto lid open/close function.
■ Recommended mode	● Press the recommended mode to use the preset setting.
■ User mode	● Press the user button for 2 seconds to memorize the current water temperature, air temperature, seat temperature, nozzle position and water pressure. Press the user button to use the memory setting.
■ ECO	● Press the ECO button to start power-saving function (the buzzer rings once); press the button again to stop the power-saving function (the buzzer rings twice for a short time). The seat temp. will be 28°C in the ECO mode.
■ Nozzle cleaning	● Press the nozzle cleaning button, and the nozzle will come out. Then the cleaning hole will spray water to clean the nozzle for 10 seconds. Press stop button to stop it when it is running.
■ Massage laxative	● When the "rear wash" or "female wash" function is started, press the massage button to start or stop this massage function, and the water temperature changes alternately at 32-38 °C.
■ Child wash	● Press the Child Wash button in stop or other modes, it will start the washing function after a beep, and stop after 90 seconds. In the child wash mode, the water pressure is level 1, the position is level 3, the water temperature is level 1, and the seat ring is level 1 (People don't have to sit on the toilet seat when use this function).
■ Deodorization	● When nobody is sitting on the toilet seat, press the deodorization button and the deodorization fan will run for 5 minutes.
■ Night ligh	● Turn on or turn off the decorative light of the control knob.
■ Code matching	● Press and hold the "Female wash" button on remote control for 3 seconds, and the three indicators on the remote control will flash red. At the same time, the machine is powered on, and the buzzer will make a long beep to indicate that the code is successfully paired. Otherwise, repeat the above actions again.
■ Air Drying	● When the seat ring senses by its sensing are that someone is sitting, and press the Air Drying button in stop or other modes, it will start the drying function after a beep, and stop after 3 minutes. If the person leaves the seat ring during the function is running, the function will be stopped.
■ Recommended mode	● Press the recommended mode to use the preset setting.



(Some models without this function)

How to use


■ Nozzle position	● Press the nozzle position button to move the nozzle forward in the "rear wash" and "female wash" modes. It has three levels from 1 to 3 indicated lights on. Each time you press it, the nozzle moves forward for one level, and then returns to the level after the level 3.	(Some models without this function)
■ Wind temperature	● Press the wind temperature button to change the air outlet temperature in the "air drying" mode. The outlet air temperature has 3 levels and stand-by mode. 3 level is the highest and stand-by mode means all the indicated lights are off.	
■ Nozzle forward	Press this button in "Rear wash""Female wash" mode, the nozzle will move forward by one level, up to three levels.	
■ Nozzle backward	● Press this button in "Rear wash""Female wash" mode, the nozzle will move backward by one level, up to three levels.	

How to use the control remote

The function of the remote controller shall be subject to the actual object.

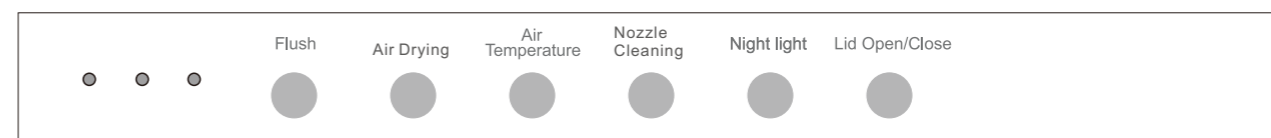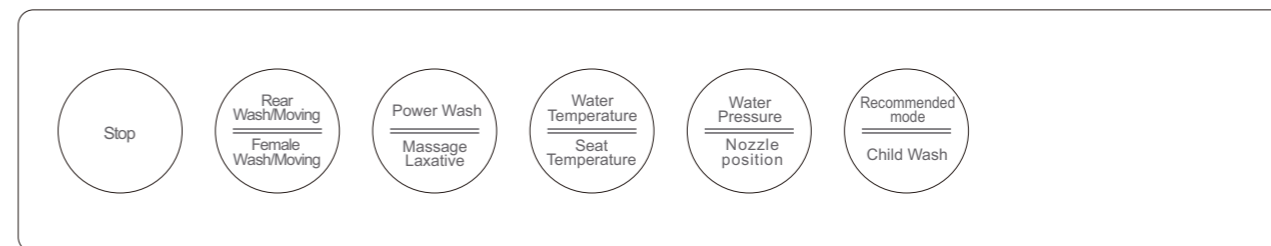

The function of the remote controller shall be subject to the actual object.

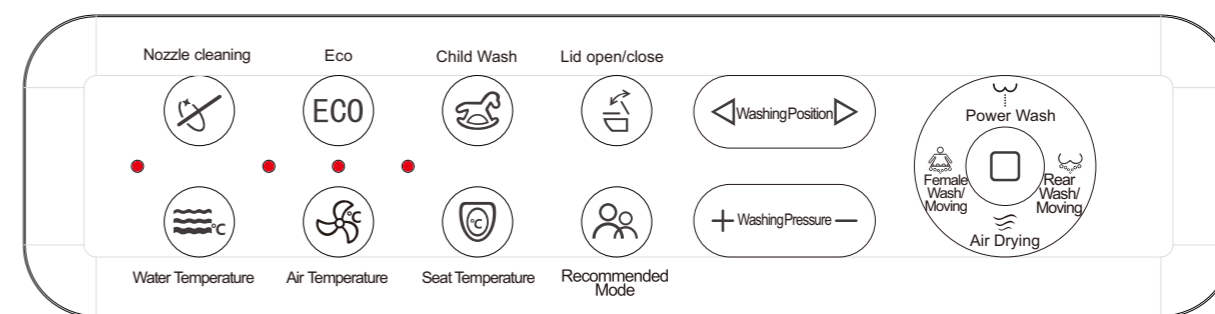

Function description

(Some models without this function)


Function	Name	Description
Basic Function	Rear Wash	Wash people's anus
	Female Wash	Special wash for women
	Pulse Wash	Special wash for Constipation
	Warm Air Drying	Blow warm air to dry people's hip
	Water Pressure	Adjust the water volume and pressure
	Nozzle position	Adjust the washing position
	Moving Washing	Moving the nozzle forth and back while washing
Convenient Function	Water Temperature	Adjust the water temperature
	Seat Temperature	Adjust the seat temperature
	Wind Temperature	Adjust the air temperature
	Remote	Convenient to use all function by a remote
	Status Display	The decorative light of the knob glows white when no one is seated, red in rear wash function, blue in female wash function, and flashes red when a fault occurs
Shortcut Function	ECO	Save power when not in use
Care Function	Seat Heating	Make people not feel cold
	Lid Slow Close	The damping device is used to make the seat ring, the lid flips smoothly and the noise is small
	Decorative Light	Soft lighting
	Deodorization	Keep the air in the toilet fresh. Automatically turn on when seated, and turn off after 10 seconds when seat is empty
Safety Function	Overheating Protection	Thermal fuse to prevent the water temperature and seat temperature from being too high
	Leakage Protection	Leakage protection devices to prevent accidents
	Anti-scald System	After sitting for 15 minutes, the seat temperature will be automatically adjusted to level 1.
Secondary Function	Control Knob	The knobs and buttons on the side of the toilet lid can be used when the remote control fails
	Manual Flushing	Manual flushing during power outages
Clean Function	Troubleshooting	Sense abnormality and remind
	Nozzle self-cleaning	The nozzle will be cleaned by strong water pressure before and after use
	Nozzle cleaning	Clean the nozzle

Cleaning procedure

Product Cleaning


1. Nozzle Cleaning

Press the "nozzle cleaning" button on the panel of the remote control, and the nozzle will automatically come out to facilitate the user to clean. Use a soft cloth or soft bristled toothbrush to dip into the kitchen and wipe the nozzle with detergent. You can also remove the nozzle for cleaning. The method is holding the spray lance in one hand (not shaking) and pull out the spray nozzle with the other hand, and the spray nozzle will be taken out. After cleaning, it can be installed back. Finally, press the "stop" button, and the spray lance will return automatically.

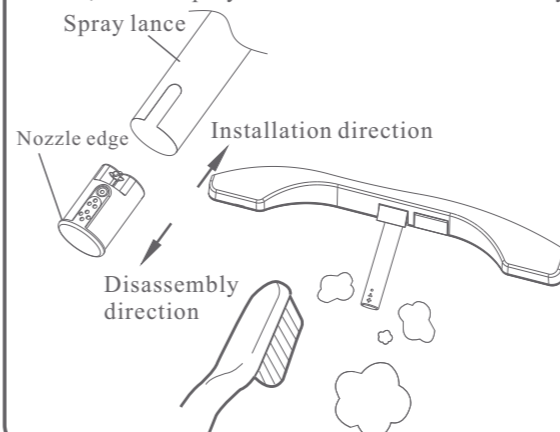


1. Power cut

Unplug the power plug before cleaning the product body.

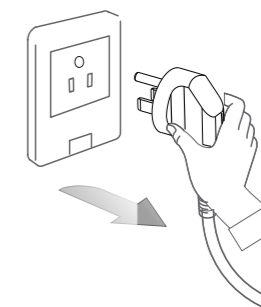


3. Clean the external parts of the product

Clean the product with a soft cloth and neutral detergent. Do not use hydrogen chloride cleaner, thinner, benzene, sandpaper, polishing machine, perfume and insecticide and other cleaning products.

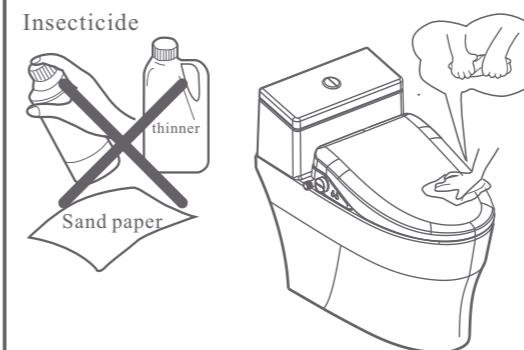




4. Clean the filter screen

When users feel that the water flow is less than normal during use, they can clean both ends of the filter screen with a brush. The product must be completely separated from the water supply hose during cleaning. If the product is connected to an external filter, please replace it regularly according to the water quality.

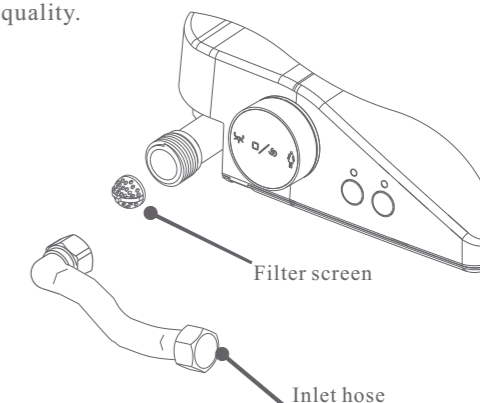

■ Not in use for long time

Drain and cut off the power supply

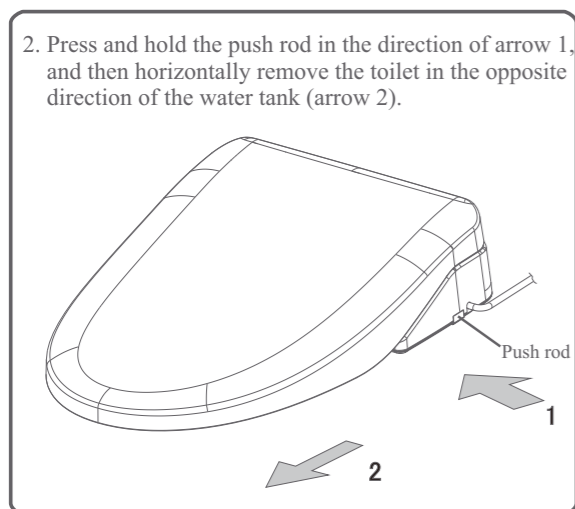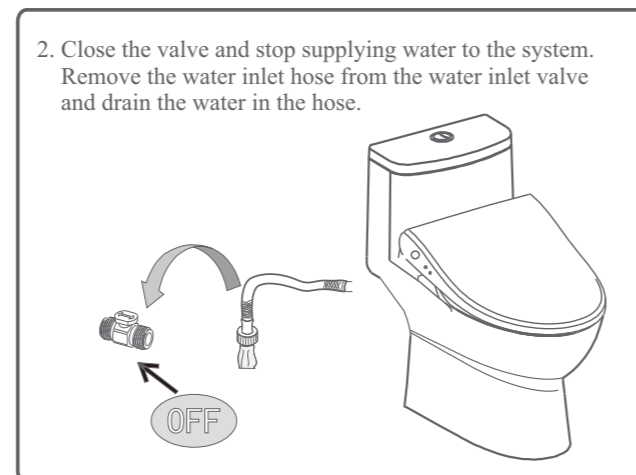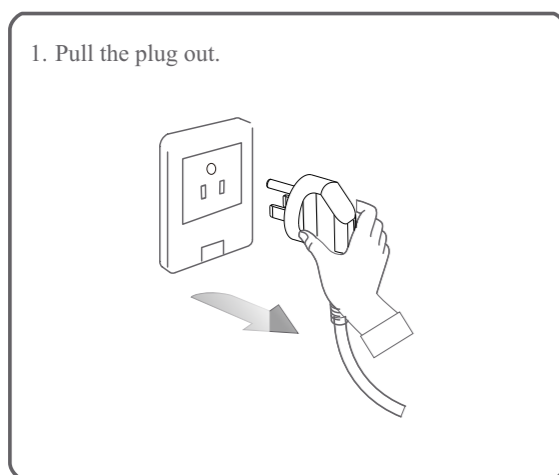

CAUTION

When using the product again, please confirm and test run (refer to the part Product Installation).



■ Quick judgment and maintenance for the troubles



If you think there is a fault, please read the following items first and take measures. If the fault cannot be solved, please contact the purchase place, exclusive store or our customer service center.

※Please unplug the power cord before maintenance.

⚠ CAUTION

- ※ When the power cord is damaged, it shall be replaced by the manufacturer, after-sales service center or professional personnel (with qualification certificate) to avoid safety accidents.
- ※ In case of water leakage, first rotate the handle of the inlet valve clockwise, close the valve and stop water supply.

! Important

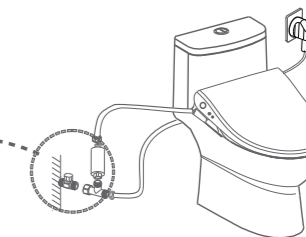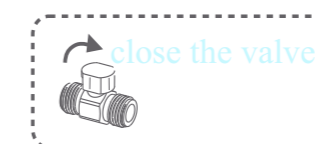


● Please confirm the following precautions before maintenance

Fault Problem	Checking	Solution
Power		
Function non-responding	<ul style="list-style-type: none"> ● Is there power outage? Is there power in the power socket? ● Is the main power turned on? 	<ul style="list-style-type: none"> ● Please wait until power is restored. Please turn on the power socket. ● Please turn on the main power.
Rear wash/Female wash/Pulse wash		
No water	<ul style="list-style-type: none"> ● Is water cut off? ● Is water valve closed? ● Did you not touch the sensing area? 	<ul style="list-style-type: none"> ● Please wait for water. ● Please open the water valve. ● Please sit on the sensing area.
Water pressure is decreasing	<ul style="list-style-type: none"> ● Is the warm water switch off or the water temperature setting is low? ● Is the filter or external filter clogged? 	<ul style="list-style-type: none"> ● Turn up the water pressure by control knob or remote control. ● Clean the filter; Change the external filter regularly
Water temperature is low	<ul style="list-style-type: none"> ● Is the warm water switch off or the water temperature setting is low? 	<ul style="list-style-type: none"> ● Adjust the water temperature by control button or remote control
Stop spraying water after 90s of washing	<ul style="list-style-type: none"> ● Just a setting. Not a fault problem 	<ul style="list-style-type: none"> ● Use the washing functions again

Quick judgment and maintenance for the troubles

Fault Problem	Checking	Solution
Water stop during washing	<ul style="list-style-type: none"> Probably that the human body doesn't touch the sensing area of the seat ring 	Adjust sitting position to make sure sitting on the sensing area
Seated sensing area of the seat ring		
It activates the washing or deodorizing function without being seated.	<ul style="list-style-type: none"> Is the seat be splashed with water or has a wet towel on it? 	<ul style="list-style-type: none"> Please wipe the water off with dry towel; Please take the wet towel away.
Auto flush function		
Auto flush is not activated	<ul style="list-style-type: none"> Auto flush module not installed or not installed correctly; Some models doesn't have this function. 	<ul style="list-style-type: none"> Please install the auto flush module according to the instruction above.
Seat heating		
Seat temperature is low	<ul style="list-style-type: none"> Is the warm seat switch off or the seat temperature setting is low? Is it in ECO mode? 	<ul style="list-style-type: none"> Adjust the water temperature by control button or remote control; Please wait for 5 mins after seated. Or turn off ECO mode.
ECO function		
ECO function is not activated	<ul style="list-style-type: none"> Is power outage or the power cord be unplugged? Is the battery on the remote control depleted? 	<ul style="list-style-type: none"> Press the ECO button on the remote control for activating the function Replacement battery.
Remote control		
Remote control not responding	<ul style="list-style-type: none"> Is the battery on the remote control depleted? Is the battery installed incorrectly? Probably that the human body doesn't touch the sensing area of the seat ring? 	<ul style="list-style-type: none"> Replacement battery. Please install the battery correctly. Adjust sitting position to make sure sitting on the sensing area.

Quick judgment and maintenance for the troubles

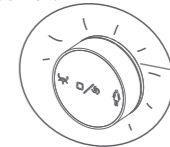Fault Problem	Checking	Solution	
Deodorization			
Deodorization is not activated	<ul style="list-style-type: none"> Probably that the human body doesn't touch the sensing area of the seat ring. 	<ul style="list-style-type: none"> Adjust sitting position to make sure sitting on the sensing area. 	
Warm air drying			
Air temperature is low	<ul style="list-style-type: none"> Is the air temp. setting low? 	<ul style="list-style-type: none"> Adjust the air temp. by remote control. 	
Function stops during drying	<ul style="list-style-type: none"> Normally it stops after 3 mins of drying 	<ul style="list-style-type: none"> Use this function again. Adjust sitting position to make sure sitting on the sensing area 	
Air drying is not activated	<ul style="list-style-type: none"> Probably that the human body doesn't touch the sensing area of the seat ring 	<ul style="list-style-type: none"> Adjust sitting position to make sure sitting on the sensing area 	
Others			
Dirt not cleaned	<ul style="list-style-type: none"> Is the water valve fully open? Is the water valve filter blocked? Water pressure too low when sharing water with bathroom. 	<ul style="list-style-type: none"> Open the water valve Clean the filter 	
Water is dirty	<ul style="list-style-type: none"> The external filter is used over 6 months. 	<ul style="list-style-type: none"> Replace a new filter 	
Water pipe connection leaking	<ul style="list-style-type: none"> Is the nut of the connecting pipe not tightened? 	<ul style="list-style-type: none"> Tighten it 	
If there is any abnormal situation other than the above table, please contact the seller.			
 Knob Light			
Troubleshooting			
Alert	Knob light alert	Buzzer	Fault description
Seat temp. sensor alert	<ul style="list-style-type: none"> Flash red once 	1 beep	<ul style="list-style-type: none"> Sensor open or short circuit will alarm and stop seat heating
Air temp. sensor alert	<ul style="list-style-type: none"> Flash red twice 	1 beep	<ul style="list-style-type: none"> Sensor open or short circuit will alarm and stop air drying
Water temperature sensor alarm	<ul style="list-style-type: none"> Flash red three 	1 beep	<ul style="list-style-type: none"> The outlet water temperature is greater than 45 °C. (After 3 subsequent alarms, it returns to normal if there is no abnormality)

WARNING

- Do not disassemble, repair or refit the product by yourself.
- May cause electric shock, fire or failure.



Technical parameters

Model	WLG3-505V-US WLG3-505D-US WLJG3-505V-US WLJG3-505D-US	WLG4-505V-US WLG4-505D-US WLJG4-505V-US WLJG4-505D-US
Rated power	120V~ 60Hz	
Rated power	1220W (The inlet water temperature is 15 °C, the outlet water temperature is at the maximum level, the water pressure is 0.2MPa, the water pressure is at the maximum level, and 30 seconds before the Rear wash operation).	
Power line length	1.2m	
Warm water heating mode	Instant heating	
Water temperature	The temperature adjustment range is about 30 °C ~ 39 °C	
Safety device	Flow monitoring sensor, water temperature sensor, bimeta temperature control switch, temperature fuse.	
Wind temperature	Adjustable temperature range (room temperature~55°C)	
Drying heating power	—	250W
Seat ring surface temperature	Adjustable temperature range (room temperature~40°C)	
Seat ring heating power	40W	
Water supply pressure	0.15MPa-0.75MPa	
Environment temperature	1-40°C	
Product size	L505xW375xH112mm	
Product weight	WLG3-505V-US 4.3kg WLG3-505D-US	WLG4-505V-US 4.5kg WLG4-505D-US
	WLJG3-505V-US 3.8kg WLJG3-505D-US	WLJG4-505V-US 4.0kg WLJG4-505D-US

The bar codes on our products and outer boxes are only for internal use, not for other purposes.

Zhongshan Donlim Weili Cleaning Technology Co.,Ltd. reserves the right of final interpretation of this manual.

We reserve the right to change specifications without prior notice.

Service/maintenance guide

Before requiring maintenance, please confirm the items of "when considered to be faulty".

- Warranty service card
 - This manual is attached with warranty service card. Relevant information must be filled in when purchasing. Keep them properly when they are confirmed to be correct.
 - The warranty period is 1 year from the date of installation.
- Market supply period of spare parts for maintenance.
 - The market supply period of spare parts for maintenance is 5 years from the date of production.
- When maintenance is required during the warranty period.
 - After reading the manual again and confirming that the product is still abnormal, please contact the customer service center for maintenance.
 - Warranty shall be provided when maintenance is required.

Contents to be provided during liaison.

- Address, name and telephone number
- Name of a part
- Number
- Maintenance convenience date
- Installation date

- For products beyond the maintenance period, when maintenance is required.
 - Please negotiate with the buyer first
 - After maintenance or normal use, the products will be repaired at a charge according to the requirements of customers.

It is advisable to regularly check (charge).

- In order to use the products more safely, longer and faster, the company recommends that the products installed for more than 3 years should be inspected regularly.

The maintenance cost is obvious (When maintenance is required).

The maintenance fee consists of [technology fee], [accessories fee] and [visiting fee].

[Technical fee] refers to the cost of checking faults, repairing and replacing accessories and checking after repair.

[Accessories cost] refers to the cost of accessories used in maintenance.

[Visiting fee] refers to the cost incurred by technicians to and from the location of the fault.

■ Warranty service card

Product name		Product model	
Manufacturing No.		Purchase Date	
Seller		Telephone	
Province	City	Dealer (affix one's seal)	

Product warranty instructions

1. Warranty certificate: the formal invoice and Three Guarantees certificate of purchase are the warranty certificates that you enjoy the national "Three Guarantees" and the company's standard services. Please keep them properly. When you need services, please take the initiative to show them to the service organization certified by the company.

2. The warranty period is 1 year.

3. Warranty ordinance

-In case of failure after normal use according to the instructions, free warranty can be carried out within the warranty period.

-The warranty parts only refer to the parts configured when the company's temperature regulating and heating toilet cover leaves the factory.

-To the extent permitted by law, the company can choose to provide you with the promised warranty service by means of repair, replacement and return.

-Any organization or personnel is outside the service commitment. Let you buy other products and their affiliated software, and make any additional commitments to you and the company will not be responsible.

-The company does not bear the cost and risk of customers taking and delivering products.

-If you use the product beyond the warranty period, the company will provide paid services in accordance with the charging standard for paid services.

-Although it is within the warranty period, the following situations need to be repaired at a charge.

a. Faults and damages due to careless use, customers' negligent operation and failure to repair or transform in authorized service and maintenance institutions.

b. Failure or damage caused by fire, earthquake, flood, lightning and other natural disasters.

c. Install additional products or parts to the product according to the user's requirements, resulting in the failure or damage of the product.

d. Failure or damage of this product caused by places other than ordinary homes (such as public places).

e. Failure or damage due to the use of non specified power supply (voltage, frequency).

Customer keep it as a precaution.

■ Warranty service card

Maintenance record

Repair date	Maintenance record

Warranty card

Product name		Product model	
Manufacturing No.		Purchase Date	
Seller		Contact Number	
Customer Name			
Customer address			
Dealer	(affix one's seal)		

FCC WARNING

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.