

PASSAU

User Manual
SOUNDBAR



Model: S28R

Please read this manual carefully before starting to operate the unit. This prevents malfunctions and lets you experience all features of your new equipment.

1. POWER : Turns on standby mode.
2. INPUT: Navigates between AUX/BT/USB mode.
3. VOLUME {-,+} :Increase/decrease the volume.
4. ⏮ : Skip to the previous track.
5. ⏭ : Skip to the next track.
6. ▶/⏸ : Play/Pause the BT/USB mode.
7. TRE {-,+} : Increase/decrease treble.
8. BASS {-,+} : Increase/decrease bass.
9. EQ : Choose audio output sound field effect.
10. 🔊 : Mute the sound.

AC POWER
IMPORTANT NOTES

 
- 1.Make sure the power supply is proper and never handle the power cord or its plug with wet hands when plugging into, or unplugging from an outlet.
1.Ensure that the main power switch is in the “OFF” position before connecting the AC power cord to the power supply to avoid damage to the unit.
3.A damaged power cord can easily cause an electric shock or fire hazard; Never use a power cord after it has been damaged.

BATTERY INSTALLATION

- 1) Open the battery case.
2) Insert two batteries without the polarity reversed.
3) Close the battery case.
4) Keep within 5 meter range, 30 degree angle while aiming at the unit.


Precautionary note:

Remove the battery when the unit is not being used for a long period of time.

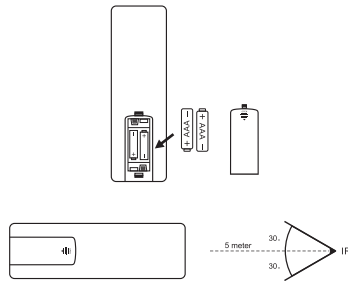


4

 DESCRIPTION OF SOUND BAR PVC LENS

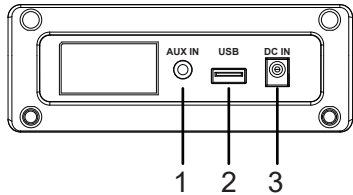

- 1.AUX IN
2.USB, Support USB flash disk, format: MP3/WMA
3.DC power input, power specification: 13V/1.8A

 DESCRIPTION OF SOUND BAR PVC LENS

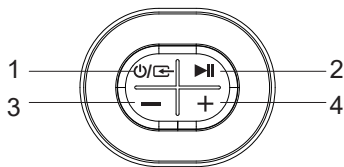

1. ⏻ : Standby/Power On/INPUT selection key: Short press this key to power on/INPUT selection (INPUT selection sequence: AUX→BT→USB); long press to standby..
2. ▶/⏸ : Play/Pause/Mute key: In BT/USB mode, press this key to play music, press again to pause playback. In AUX mode, press this key to mute, press again to cancel mute.
3. ⏮ : Volume down key: In USB/BT mode, short press this key to select the previous song, long press it to decrease the volume. In AUX mode, long press/short press this button will decrease the volume..
4. + : Volume up key: In USB/BT mode, short press this button to select the next song, long press to increase the volume. In AUX mode, long press/short press this button will increase the volume.

5

Dear Customer,
Thanks your trust and congratulations on getting one of the best sounbar on the market!
Please refer to the notes below and follow the instructions to ensure that you use the sounbar correctly and have a good experience with this product.
If you got any question on using this soundbar or other issue, please send us a seller message in our Amazon store. You can also contact our support team: cici@miisso.com , We will provide a fast solution within 24 hours. Problems are often due to some steps missing or just changing one setting to solve.
Please don't worry since it has 12-month warranty and lifetime service, feel free to tell us if you have any question.

SAFETY INSTRUCTIONS

- Read these instructions before using the product.
- Read all warnings carefully.
- Follow all instructions carefully.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install the speaker system near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power card from being waled on or pinched particularly at plug points and the point where they exit from the unit.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, be cautious while moving the car-unit combination to avoid injury from tip-over.

EXPLANATION OF THE SYMBOLS ON THE DEVICE

- ⚡ CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER(OR BACK)NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
- ⚡ The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
- ! The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which there receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
To maintain compliance with FCC' s RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

PACKAGE CONTENTS

1. Soundbar :1unit
2. Audio Cable :1unit
3. User Manual :1unit
4. Remote Control :1unit

UNIT OPERATION

- 1.Power-on: Insert the adapter (DC13V/1.8A) that comes with the machine, the machine enters standby, and the LED indicator flashes red light.
2.AUX mode: Press the power button or the remote control INPUT button to enter AUX mode, and the LED indicates red light, and then connect an external audio source to play music through the 3.5mm audio cable that comes with this machine. In AUX mode, the volume/treble and bass, and other functions are available to be adjusted.

 
2

3. BT mode: After the machine enters standby mode, short press the power button on the panel or the remote control power button to start the machine, and the machine enters the default BT mode , while the LED indicator flashes blue light, then search the BT “S28R Lite” to connect.
4. USB mode: Press the power button or the remote control INPUT button to enter USB mode, and the LED indicates red light and blue light at the same time, connect the corresponding audio source or insert a USB flash disk to play music, and the USB mode has priority function, that is, regardless of In what mode, when the USB flash disk is inserted, the USB flash disk will play first.

SPECIFICATIONS

Output Power: 40W
Driver Unit :2.25"*2
S/N:.>=80dB
Distortions≤1%
Power supply:DC13V/1.8A

DESCRIPTION OF THE REMOTE CONTROL

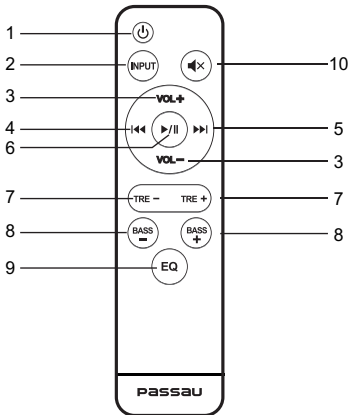

3