



Portable Wireless Speaker

User's Manual

Matters Needing Attention

In order to use the player correctly and ensure that performs well, please read and observe carefully:

1. Do not hit the host severely.
2. Do not touch benzene, thinners and other chemicals. Please keep away from strong magnetic and electric fields.
3. Please avoid direct light or heating appliances.
4. Do not disassemble, repair, or modify by yourself.
5. Please sort and properly dispose of waste packaging, batteries, and old electronics.
6. Do not expose the product to rain or damp rings to prevent fire or electric shock.

Precautions for the Charger

1. Insert one end of the power cord into the [5V] socket of the machine, and insert the other end of the USB into a matching plug or computer. The "red light" is on when charging, and it goes out when it is fully charged.
2. It is recommended that the product try not to play

while charging, so as not to charge for a long time and shorten the battery life.


3. Do not put water containers next to the charger, so as to avoid water splashing and causing short circuit of the charger, resulting in overheating, leakage and malfunction.
4. Do not put heavy objects on the power cord or try to modify the powercord, otherwise it may cause electric shock or fire.
5. It is forbidden to use other types of chargers, as they will affect the battery life or damage the machine.
6. The machine has a built-in charging protection circuit, which can be connected to a computer or charger for a long time, about 3-4 hours fully charge the battery, the battery life time will vary depending on the light usage time or the volume level.
7. When the battery power is low, the system will automatically shut down. Please charge in time. If you do not use the machine for a long time, please charge it at least once a month to protect the battery and prolong its life.

Speaker Connection

- 1. Wireless speaker connection:** Turn on the speaker device, turn on the wireless connection function of the mobile phone, and search for the wireless device "BB-02". (No need to enter a password, connect directly).
- 2. TWS connection:**
 - 2.1.** When the new machine is dual-connected for the first time, you need to long press the TWS button for both machines, when you hear "TWS cleared", it means pairing is in progress. When the pairing is successful, you will hear "TWS paired". (under normal circumstances, the pairing is successful within 6 seconds, but the greater the environmental interference, the longer the pairing time)
 - 2.2.** If the two devices have been connected, turn off and on again, the machine will automatically interconnect, no need to re-connect.
 - 2.3.** TWS is disconnected or reconnected, the host needs to be operated (the host means: the one that can be controlled by Bluetooth is the host, and the one that needs to be paired is the slave).

3. Other connections: The machine automatically detects and recognizes the external device when it is turned on, and enters the wireless connection AUX mode after it is turned on. The TF card or USB is inserted and automatically recognizes the playback. The latter has the priority principle, and the playback mode can also be switched by itself; the audio signal line does not switch automatically, through [M] Key to switch to play in AUX mode.

Key Description

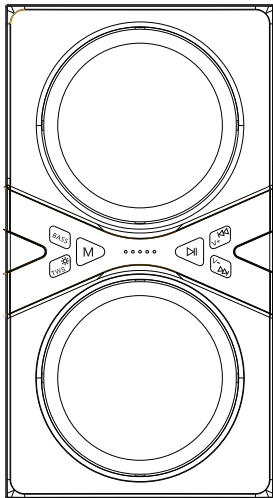

V+

Long press,
increase the volume



Play previous song

V-

Long press,
reduce the volume



Play next song

BASS

Turn on the bass



Change lighting effect

TWS

Long press,
turn on the TWS

M

Change playback mode



Pause playback

Jack Description

MIC

Microphone Interface $\varnothing 6.5$

DC 5V

Power Port

TF

TF Card Port

AUX


Auxiliary Audio

USB

USB-Type C Port

ON/OFF

ON is on/OFF is off

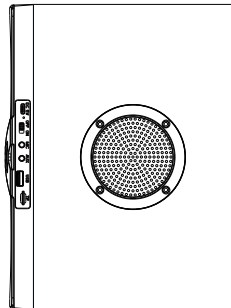

Basic Parameters

Speaker type	Portable Wireless Speaker	Item Weight	6.4lb
Exterior design	Cuboid	Item Color	Black
Light Type	RGB/LED	Charging Cable	USB-Type C
Active/Passive	Active	Product Dimensions	10.9*6*7.9inches
Control Method	Button	Soundtrack System	1.0
Features	Wireless Connection Electronic Devices, Support TF Card, AUX,USB,MP3 Music Playback		

Technical Parameter

Frequency Response	45Hz-20KHz	Signal-to-Noise Ratio	≥100db
Output Power	80W	Impedance	3Ω
Speaker Unit	4inches*2 3inches*2	Distortion	1%
Transmission Distance	33Foot	Play Time (50%volume)	16-18h
Power Supply	DC5V/2A Lithium Battery	LED Light Play Time	12-14h
Battery Capacity	5000mAh /7.4v	Charging Time	5-6h
Audio Interface	3.5mm AUX	Connection Version	5.0

Package List

- 1 x Wireless Portable Speaker
- 1 x AUX 3.5mm Audio cable
- 1 x USB-Type C cable
- 1 x User manual

Questions and Answers

Q: The product shuts down automatically?

A: The battery is low, please charge it in time, it is recommended to use it after six hours of

charging.

Q: The product cannot be charged?

A: Please use the charging cable delivered by this machine to make sure that the voltage of the connected USB interface is normal.

Q: There is no sound from the product speaker?

A: Make sure in the TF/wireless connection/AUX mode, in the playback state, and adjust the volume to an appropriate level.

Q: There is no sound in the product AUX?

A: 1. Please use this machine to distribute the audio cable, and select the correct audio output interface.

2. Insert a TF card or USB disk, it will not automatically enter the AUX mode, you must press the [M] key to switch AUX mode.

3. Whether the volume of the external audio source device is turned on.

Q: The product can't connect automatically?

A: 1. Only the paired devices will automatically connect.

2. If the wireless connection device is turned on after 10 seconds after the speaker enters the wireless connection, the speaker will not automatically connect.

Q: There is no sound from the wireless portable speaker?

- A: 1. Please confirm whether the wireless connection has been successfully connected.
2. Whether the volume of the connected device or connected device is turned on.

After-Sales Service

We promise that if the product has quality problems, it will be returned for half a year, guaranteed for one year, and free consultation for life. Welcome your consultation.

If you are satisfied with our service, please comment on our service. Thank you for your participation and recognition. This will be our greatest motivation.

If the product or service you are not satisfied, please contact us in time so that we can know the specific problem you encounter and provide you with a better solution.

We are happy to help you answer any questions of the product. Welcome to write to us and scan the QR code for consultation. of course, you can also come to our official website to browse, we will provide friendly support.

We and other buyers really need your sincerely advice of our products, If time permits, please share your thoughts . We will prepared some surprise for you as well.

Thanks again!

Enterprise Mailbox: customer_service@dindinmodern.com

Official website: <https://www.facebook.com/profile.php?id=100071282434406>

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.