

User manual

One Press the key to browse

Above

Special functions of the remote control

Some special functions are embedded in the remote control. The motion sensing class detects the remote control operation and turns on the backlight. The hidden key can extend the function of more control items when the 123 key is pressed. Use the USB Type-C connector to charge the battery.

Motion sensing

The remote control has a built-in motion sensor. When you pick up the remote control as usual and tilt the remote control button toward you, The backlight is turned on for a few seconds. The motion sensing function is on by default, and you can turn it on by pressing and holding the OK and colored keys for 3 seconds. To perform this function again, press and hold OK and the colored key for 3 seconds.

Hide key

There is a 123 key in the middle of the remote controller for turning on/off the hidden key mode. When the 123 key is pressed to turn on the hidden key mode, The numeric keys 0 through 9 and the media playback control keys will be illuminated and will trigger the function. If you press the 123 key again to turn off the hidden key mode or turn off automatically, the remote control will be able to see the general key operation.



1- (Standby/On)

Turn on the display or return to standby mode. Press and hold for three seconds to restart the

monitor.

- 2- VOICE microphone
- 3 AMBILIGHT

Choose one of the Ambilight styles.

3- (SOURCES)

Opens or closes the [Input Source] menu.

4- CDASHBOARD)

Activate the dashboard on the side of the screen to access settings, device controls, notifications, and more.

5- • Google Voice Search) Start Google Voice Search.

Middle



1- Guide () Turn the guide on or off.

2- OK key

Confirm the selection or setting. Open the program list when watching the display.

- 3- Arrow/navigation keyNavigate up, down, left or right.
- 4- OPTIONS(+)

Opens or closes the Options menu. Long press to open the program consultation.



Switch back to the program you last selected.

Return to the previous menu.

Return to the previous Application/Internet page.

6-Volume/ (mute) ◀×

Move up or down to adjust the volume. Press the middle of the button to mute or restore the sound.

7-123 key

The hidden function keys can be turned on or off, and the keys can be switched in different operation periods.

8-Quick Cover/MENU ()

Open the [Quick Menu] containing the general display function. Press and hold the menu key to display the game control bar when the game advisory number is detected and the game mode is enabled.

9-word key (hidden key, press key 123 to use)

Programs can be selected directly

10 -AD

Access [Audio Description], toggle on or off.

11-TV ()/EXIT TV

Switch back to watching TV or stop the interactive TV app. However, this feature may not work on some applications; How this works depends on the third-party TV app.

This key will change to the word key 0 after pressing the 123 key

12- (HOME)

Open the main menu. Press and hold to access the dashboard.

13- (Program)

Move down or move up to switch to the next or previous program in the program list. Open the next or previous page in the teletext/teletext display. Press the middle of the button to open the program list.

Below



1-COLOR KEY — — —

Directly select the option. Press the blue key to open the instructions.

2 - NETFLIX

- If you have a Netflix subscription, you can use Netflix on this monitor. Your monitor must be connected to the Internet.
- To start

Netflix, available in

Turn on Netflix immediately by pressing NETFLIX while the display is on or on standby. www.netflix.com

Launch the Amazon Prime Video app.

4-/Green Key / Eco

Press the End Class Setup message to enter the ECO Setup menu. Press and hold to set the ECO menu directly. Press and hold several times to trigger the starting ECO setting menu, and the information will no longer be displayed.

- 5- Play (Hide key, press 123 to use)
 - Play, used to play.
 - Pause, used to pause playback
 - Reverse, for reversing
 - Quick turn, for forward quick turn
- 6- YouTube Launch YouTube App
- 7- (Application)

Launch your Applications page to display a list of applications that are either pre-installed or have been followed by the user.

Two. Pair the remote control to the TV

This remote uses Bluetooth @ and IR to send commands to the TV.

- You can use this remote control for most operations via IR (infrared)
- To use advanced operations such as voice search, the TV remote control must be paired (connected).

When you start the initial TV installation, the TV invites you to press the Home + Back button to configure the remote control.It is recommended to complete the configuration when installing the TV for the first time.

Remark

- 1-Once the remote control has successfully entered pairing mode, the LED ring around the microphone on the front of the remote control will begin to flash
- 2- During pairing, the remote control must remain close to the TV (within 1 meter) to ensure successful operation.
- 3-If the TV does not activate the voice control field after pressing, it indicates that the configuration

has failed.

4-It is recommended that you wait until the television is fully booted and all background programs are active before entering the configuration mode. Ince a flash notification message containing further instructions may appear too late and have a negative impact on the pairing process.

Pairing or repairing

If the pairing between the TV and the remote control is interrupted, you can do it again.

You can press the Home + Back key, or press and hold the PAIR (SOURCES) key for 3 seconds to pair. Alternatively, you can go to Settings > Remote control and accessories > Remote control settings > Pairing your remote control and follow the onscreen instructions. A message is displayed

when the configuration is successful.

Remote control software

Settings > Remote Controls and Accessories > Remote Controls Settings > Remote ControlsConsultingAfter pairing the remote controls,You can check the current remote control software version.

Settings > Remotes and accessories > Remote control settings > Update remote control software. Check for updates to the available remote control software.

Three. Voice search

 
You can search for movies/videos, music, and anything else on the Internet just by using your voice. You can speak into the microphone on the remote control.

You must pair the remote control with the TV before using voice search. Use voice:

1

-Press and hold the key on the remote control, the blue light on the remote control will light up,

the search field will turn on, and the microphone will be activated. lacktriangle



the search. Search results may take a little time to display. \P



3- In the list of search results, you can select the item you want to view.

IV. IR Sensor

This display can receive remote control commands using IR (infrared) to transmit commands. If you use this type of remote control, be sure to point the remote control at the infrared sensor on the front of the monitor.



Do not place any object in front of the monitor IR sensor to avoid blocking the IR signal.

Five. Battery and cleaning

Replace the battery

Please refer to the Quick Start Guide included in the product packaging for more information on remote control batteries. If you press the remote control button and the display does not respond, it may be because the battery is dead.

When replacing the battery, open the battery compartment on the back of the remote control.

- 1-Push the battery cover in the direction indicated by the arrow
- 2-Replace with a new battery. Make sure that the + and-ends of the battery are properly aligned.
- 3-Put the heavy pool cover back on and push it back into place until it clicks. If you do not use the remote control for a long time, remove the batteries. Follow disposal instructions to safely dispose of used batteries

Six. Warning:

Low-power radio frequency devices that have obtained an inspection certificate are not approved. The company, firm, or user shall not change the frequency, increase the power, or change

the characteristics and functions of the original design without authorization. The use of low-power radio frequency devices shall not affect flight safety or interfere with legitimate communications; When interference is found, it should be stopped immediately. And when it is improved to no interference, it can continue to be used. The aforesaid legal communication means the radio communication operated in accordance with the provisions of the Telecommunications Administration Law. Low power radio frequency devices are subject to interference from legitimate communications or electrical equipment with industrial, scientific, or medical radio waves.

FCC

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.