
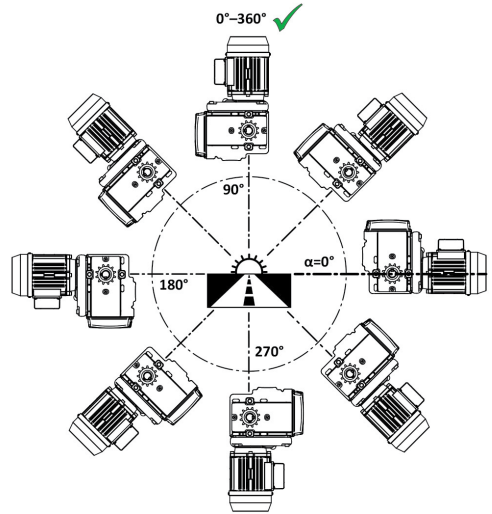


4.1 Mounting positions

- Refer to the illustrations and use only a permitted mounting position for installation!
- **After installation** interchange the plug in the highest position with the vent plug! This is **not** applicable to motor gearboxes that are filled with grease!



RW45-SD [grease lubrication]:

$315^\circ \leq \alpha \leq 180^\circ$ ✓ $180^\circ < \alpha < 315^\circ$ ✗

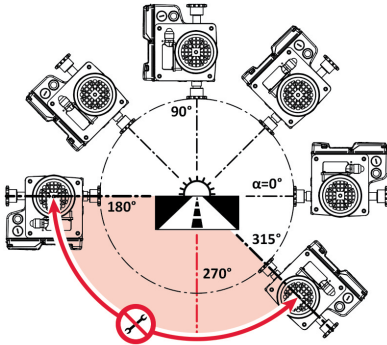


RW240/400/600-SD [oil lubrication]:

$0^\circ \leq \alpha \leq 30^\circ$ ✓ $30^\circ < \alpha < 150^\circ$ ✗
 $150^\circ \leq \alpha \leq 180^\circ$ ✓ $180^\circ < \alpha < 360^\circ$ ✗

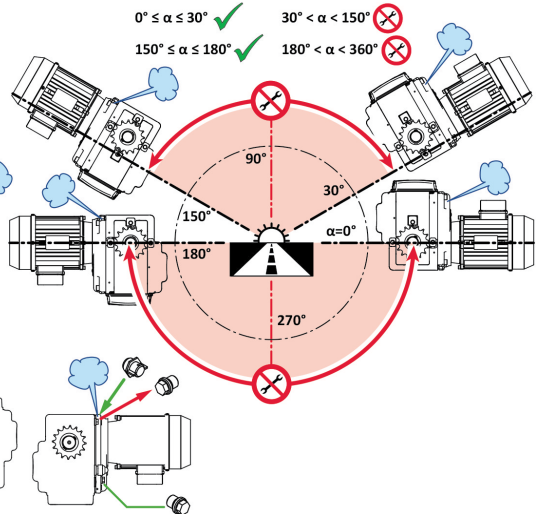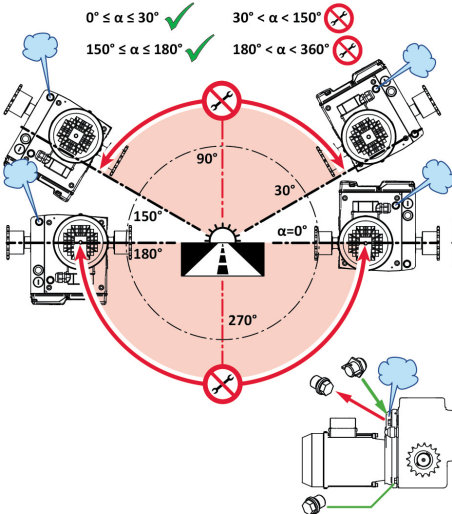


RW240-SD [grease lubrication]:

$315^\circ \leq \alpha \leq 180^\circ$ ✓ $180^\circ < \alpha < 315^\circ$ ✗

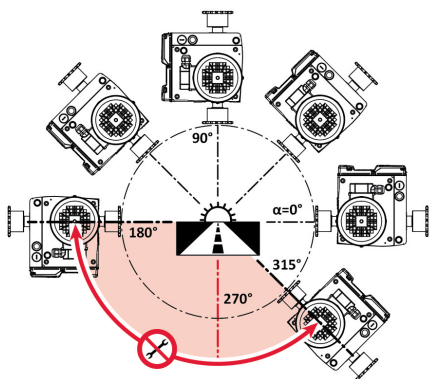


$0^\circ - 360^\circ$ ✓

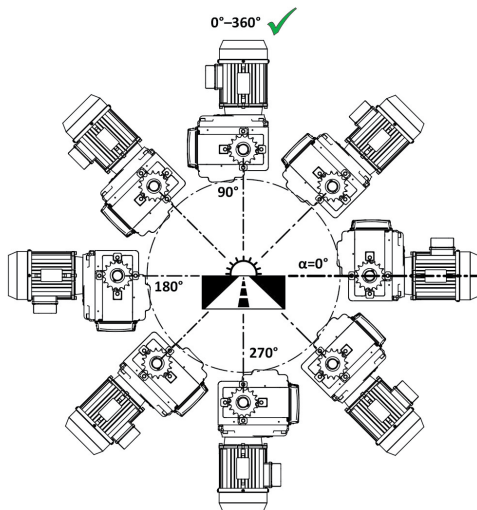

RW800-SD [oil lubrication]:

$0^\circ \leq \alpha \leq 30^\circ$ ✓ $30^\circ < \alpha < 150^\circ$ ✗
 $150^\circ \leq \alpha \leq 180^\circ$ ✓ $180^\circ < \alpha < 360^\circ$ ✗

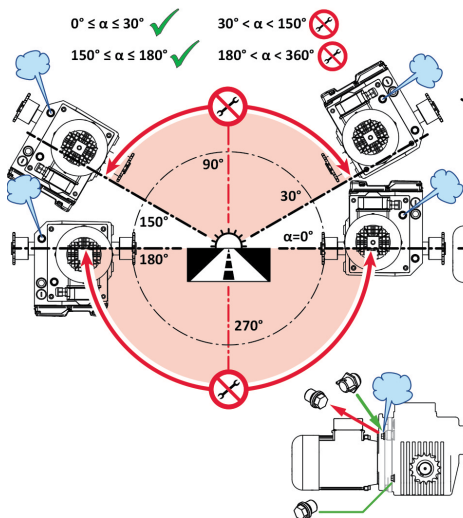

$0^\circ \leq \alpha \leq 30^\circ$ ✓ $30^\circ < \alpha < 150^\circ$ ✗
 $150^\circ \leq \alpha \leq 180^\circ$ ✓ $180^\circ < \alpha < 360^\circ$ ✗

