

**TRIPLTEK**



**MODEL T93 UNLOCKED**

# TRIPLTEK 9 User Guide Content

<b>User Manual</b>	<b>5</b>
<b>Read me first</b>	<b>5</b>
Assembling	6
Unpack	6
Installing a SD card	7
<b><u>Installing a SIM card for cellular service</u></b>	<b>8</b>
Turn on your device, reboot, and shut down	8
<b>Getting started</b>	<b>9</b>
Home screen	9
Task bar	9
Indicator icons	9
Notification panel	11
Auto rotation	12
Lock & unlock the screen	12
<b>Customizing your device</b>	<b>13</b>
1. Network & Internet	14
Wi-Fi	14
Activate the Wi-Fi feature	14
Find and connect to Wi-Fi	14
2. Other Wireless Connections	14
Bluetooth	15
Activate the Bluetooth feature	15
Connect to other Bluetooth devices	15
3. Apps & Notifications	15
4. Battery	15
5. Display	15
Screen time-out	16
6. System Navigation	16
7. Sound	16
8. Storage	16
9. Privacy	16
10. Location	16
<b><u>11. Security</u></b>	<b><u>17</u></b>

Set a screen lock	17
12. Passwords and accounts	17
13. Accessibility	17
14. Managing applications in the background	17
15. DuraSpeed	17
16. Side Key Function	18
Programming task for the Side button	18
17. System	18
<b>Reset options</b>	<b>19</b>
<b>Connectivity</b>	<b>20</b>
<b><u>USB Connection</u></b>	<b>20</b>
<b>Camera APP</b>	<b>21</b>
Taking a picture	21
Record a video	22
<b><u>Screen Video Capture Function</u></b>	<b>22</b>
<b>Play Store APP</b>	<b>23</b>
<b>Phone Function</b>	<b>23</b>
Phone APP	23
Answer a call	23
Decline or end a call	23
Call settings	24
Ringtone & Vibration	24
Dial pad touch tones	24
Voicemail	24
Display Options	24
Quick responses	24
Contacts	24
Add new contact	25
Edit a contact	25
Search for contacts	25
Text Message APP	25
View messages	25
Create and send SMS	25
Create and send MMS	26
Email APP	26
Set up your email	26
Web Browser	27

Browse web pages	27
Set homepage	27
Add bookmarks	27
View bookmarks and history	27
Customize browser	27
<b>Tool Apps</b>	<b>28</b>
Calendar	28
Alarm	28
File Manager	29
Sound Recorder	29
<b>External Charging Port</b>	<b>30</b>
HARDWARE SPECIFICATIONS:	31
INDUSTRIAL SPECIFICATIONS:	32
NETWORKING SPECIFICATIONS:	33
Safety Precautions	34
Aircraft	34
Vehicles	34
Electronic devices	34
Potentially explosive environments	34
Pacemakers and other medical devices	34
Operating environment	35
Areas with posted regulations	35
Care & Maintenance	35
<b>Warnings</b>	<b>36</b>
<b>FCC STATEMENT:</b>	<b>36</b>
RF warning statement:	36

# User Manual

## Read me first

- Please read this manual before operating your TRIPLTEK Tablet, and keep it for future reference.
- The descriptions in this manual are based on the default settings.
- Images and screenshots used in this manual may differ from the actual product.
- Available features and additional services may vary by device, software or cellular service provider.
- Our company is not liable for performance issues caused by third-party applications.
- The TRIPLTEK T93 is Google Play Protected Certificated from the Factory, Google APPs are pre installed.
- For more information using Android 12 OS visit [www.support.google.com/android](http://www.support.google.com/android)
- For more recent information about your TRIPLTEK please visit [www.tripltek.com/support](http://www.tripltek.com/support)

## Unpack

Check your product box for the following items

- TRIPLTEK 9
- User manual
- USB Fast Power Charger
- USB to USBc charging and data cable
- USB to USBc adapter
- Hand Strap and hardware

For additional accessories. Please visit the TRIPLTEK Website.

## Installing a SD card

For additional storage, you can install a SD card.

1. Press with the pin into the slot to extract the SIM card/ SD card Tray.
2. Place the SD card into the upper part of the Tray.
3. Place the Tray into the tablet all the way in.
4. Select: "Use for Portable Storage"

**Notice:** TRIPLTEK uses approved industry standards for memory sd cards, but some brands may not be fully compatible with your device.

## Installing a SIM card for cellular service

The TRIPLTEK 9 is an Unlocked device, which means it can be used in any cellular carrier that supports the 4G bands installed on it. You can see these bands on the **NETWORKING SPECIFICATIONS page**

In order to use the Phone function, install a micro SIM card from your preferred carrier, follow the instructions below.

1. Press with the pin into the slot to extract the SIM card/SD card Tray.



2. Place the SIM card into the lower part of the Tray facing the back of the TRIPLTEK(see picture).
3. Place the Tray into the tablet all the way in.

## Turn on your device, reboot, and shut down

To turn on your device, press and hold the power key. To reboot your device, press and hold the power key, select **“reboot”**. To turn off your device, press and hold the power key, select **“power off”**.



# Getting started









## Home screen














The home screen has multiple panels. Scroll left or right to the panels on the home screen, you can view indicator icons, widgets, shortcuts to applications, and other items. Swipe left to see other APPs installed on your device.

## Task bar

The task bar is shown at the top of the screen. It displays commonly used option buttons, battery level indicator, current time and other indicator icons of running apps.

## Indicator icons

Icon		Icon	
	Open Wifi Network		Airplane Mode
	Wi-Fi connected		New email
	Signal strength		New SMS/MMS
	BT connected		Call in progress

	Uploading data		Missed call
	Downloading data		Call on hold
	USB connection		Call Forwarding
	Alarm Set		Power level
	Music being played		Don't disturb
	Auto-rotate		Location Services
	Flashlight		