



USER GUIDE AND WARRANTY INFORMATION

www.jamaudio.com

HX-P540

HEY. HAVE WE SEEN YOU HERE BEFORE?

Register your speaker at www.jamaudio.com. Information about where you bought them and how you're using them is like gold for the people who make these speakers. Do them a solid, will ya?

Por manual de instrucciones e información de garantía en español visitenos en www.jamaudio.com

There are lots of cool Jam speakers. Check them all out at www.jamaudio.com

PACKAGE CONTENTS



Speaker



Quick Start guide & Legal card



Charging
Cord



Language
Selector Pin




Pouch

JUST CHARGE IT

Charging the speaker is so easy you've probably figured it out by now, but just in case, you've got two options: you can charge it using your computer or a wall outlet. The Rewind needs about 2 hours for 8 hours of party time.

1. The cord that came with the speaker—the one with the USB on one end and the Micro USB on the other—will work with your computer.

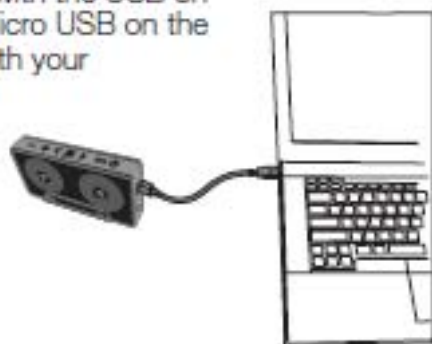


2. If you want to use the wall outlet, you'll need to pick up a power cord with a Micro USB the next time you're at the store, or use any USB AC adapter, including the one for your cell.





CONTROL YOUR DESTINY...OR AT LEAST YOUR SPEAKER

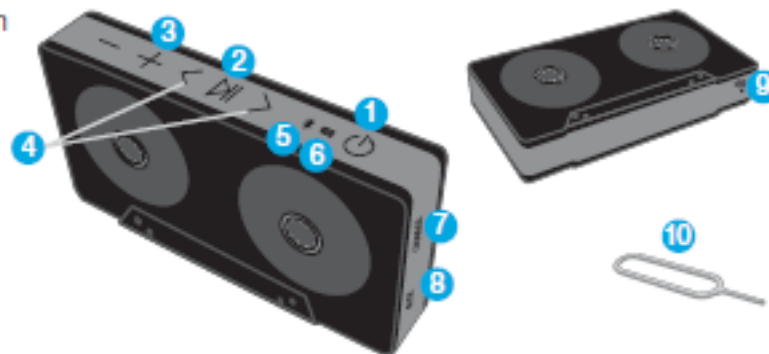1. Power button, press and hold for 3 seconds to power on
2. Push it to play, push it again to pause
3. Turn the music up or down
4. Skip back a track or jam on to the next song
5. Lets you know when *Bluetooth* is paired
6. Check out how much juice is in the battery
7. The power cord goes here
8. Here's where you hook it up old-school
9. Toggle between languages here
10. Language selector pin



ALLOW US TO SHED SOME LIGHT

	What It Looks Like	What It Means	
CHARGE	Flashing Red	Low Battery	
	RED (when charging)	Charging	
	OFF (when plugged in)	Ready to Party	
	Quick Flash BLUE	Pairing Mode	
	Slow Flash BLUE	Connected	
	RED	Line-In Mode	

BLUETOOTH® CONNECTION: IT'S A SETUP

Like any amazing couple, this one starts with a connection—one between your device and the speaker's *Bluetooth*. Here's how it works:

1. Make sure the smartphone, tablet or computer you're using with the speaker has *Bluetooth*.
2. Turn on the speaker and look for the little blinking light.
3. Do whatever your device needs you to do on its end.
4. Look for Jam Rewind in your device's *Bluetooth* list or click YES
5. Now hit PLAY on your speaker and crank it up—or down if you're lame.

The device and *Bluetooth* will find each other every time just as long as the speaker is set to *Bluetooth* and your device's *Bluetooth* is, you know—on.

If you're connecting to a computer, you may have some extra steps on that end. You'll have to get that information from the computer company.

Depending on your device you may be prompted to enter a pairing code. If prompted enter "0000" as the code.

Press and hold PLAY/PAUSE for 3 seconds to activate pairing mode.

Note: If you turn on your Rewind but haven't started the party yet, it will automatically power off after 2 minutes of unpaired inactivity.

Note: Once you've paired, if you pause the party for 15 minutes or more the Jam Rewind will automatically shut off to preserve battery power.

HOOKING UP OLD SCHOOL AUDIO, JACK

1. Plug one end of the cord into the speaker and the other into the headphone jack on your device.
2. Turn on the speaker.
3. Hit PLAY on your speaker and crank it up—or down if you're lame.

You'll have to play and pause the music from your device, not your speaker. No problem. You're there anyway, right?

HELLO? SPEAKERPHONE? YES!

When friends call asking to join the party—and you know they will—answer the phone without disconnecting from your JAM Rewind. Yes, that's right. Your speaker is a speakerphone too. How amazing is that? Here's how it works:

1. Make sure your phone and speaker are connected through Bluetooth.
2. Answering and ending a call works the same way: simply click the PLAY/PAUSE button on your Rewind.
3. If you'd rather not talk, hold down the PLAY/PAUSE button on your Rewind for three seconds to ignore the call.

THE COOLEST PART: The Rewind knows when a call is coming in and pauses the music before ringing. When you hang up, the music starts where it left off—and so does the party. If it's you making the call, just start dialing from your phone, and the Rewind automatically does its hands-free thing. Isn't it refreshing to know your speaker totally gets you?

CHECK OUT THE CHART BELOW FOR A GUIDE ON CALL HANDLING

Situation	Short Press Play/Pause Button	Long Press Play/Pause Button
1 st Incoming call	Pick-Up call	Reject call
On call	End call	Move call from speaker to device
2 nd Incoming call	Call 1 on Hold, Pick-Up call 2	Reject call 2
Both calls Active	Hang up call 1, Switch to call 2	Switch between 1 st call and 2 nd call

THE VOICE FROM WITHIN

When your JAM Rewind isn't rocking out, it can tell you all sorts of things it's doing: when it's powering on, ready to pair, paired, maximum volume, charging, incoming call, call ended, call rejected, and powering off.

Just like the global gadget it is, your speaker toggles between several languages or no language at all. Your speaker can parlay with you in English, Spanish, French, or Portuguese. But, making the change between language and tone is as simple as poking a paperclip, safety pin, or the pin included into the small hole on the bottom. Click though until the speaker starts speaking your language.

COMING CLEAN

A soft, dry towel is all you need to clean off your speaker. Using water, harsh cleaners, or anything else only starts messing with the mechanics inside. So, yeah, don't do it.

ONE YEAR LIMITED WARRANTY

For detailed Warranty Instructions and Information visit: <http://www.jamaudio.com/customer-support/warranty-1yr>

To obtain warranty service on your Jam product, contact a Consumer Relations Representative by telephone at 1-888-802-0040 or email cservice@jamaudio.com for assistance. Please make sure to have the model number of the product available. Representatives are available 8:30am - 7:00pm EST Monday-Friday.

STUFF THE GOVERNMENT MAKES US SAY

FCC Disclaimer:

Note: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by HMDX could void the user's authority to operate this equipment.

STUFF OUR LAWYERS MAKE US SAY

IMPORTANT SAFEGUARDS:

When using an electrical product, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

- **WARNING:** Do not place speakers too close to ears. May cause damage to ear drums, especially in young children.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by HMDX.
- HMDX is not liable for any damage caused to Smartphones, iPod/MP3 player or any other device.
- Do not place or store this product where it can fall or be dropped into a tub or sink.
- Do not place or drop into water or any other liquid.
- Not for use by children. THIS IS NOT A TOY.
- Never operate this product if it has a damaged cord, plug, cable or housing.
- Keep away from heated surfaces.
- Only set on dry surfaces. Do not place on surface wet from water or cleaning solvents.

Warning: This product contains chemicals known to the State of California to cause cancer, birth defects and other reproductive harm.

A MESSAGE FROM THE ENVIRONMENT

WARNING:

This product has an internal, non-replaceable lithium battery. Please dispose in accordance with your local, state, province and country guidelines.

This product contains small parts that may present a choking hazard for young children.

CAUTION: All servicing of this product must be performed by authorized Jam Audio Service Personnel only.

Note: The most up-to-date version of the Jam Rewind User Guide can always be found at www.jamaudio.com.

Por manual de instrucciones e información de garantía en español visitenos en www.jamaudio.com



© 2014-2015 HMDX. All Rights Reserved.

IB-HXP540B

Note : Cet appareil est conforme à la Partie 15 des règlements de la FCC et aux normes RSS de l'Industrie du Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer des interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent provoquer un fonctionnement indésirable.

Le fabricant n'est pas responsable des toutes interférences radio ou télévision causées par des modifications non autorisées apportées à cet appareil. De telles modifications peuvent empêcher l'utilisateur d'utiliser l'appareil.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES AND INDUSTRY CANADA LICENSE-EXEMPT RSS STANDARD(S). OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This radio transmitter (identify the device by certification number or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie II) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Antenna Type	Max. Antenna Gain(dBi)
PCB Printed Antenna	0