onn.

Onn 5.1.2 Atmos Soundbar



Model: 100002634

User Manual

Ver.01 Rev.19/11/2019

Ver.01 Rev.19/11/2019

SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

 
- read the operating instructions before you attempt to use the equipment. ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and
- in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections. consult your dealer if you are ever in doubt about the installation, operation of safety of your equipment. be careful with glass panels or doors on the equipment. route the mains lead so that it is not likely to be walked on, crushed, chafed, or
- DON'T remove any fixed cover as this may expose dangerous voltages. DON'T obstruct the ventilation openings of the equipment with items such as

subjected to excessive wear and tear or heat.

- ewspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment. DON'T allow electrical equipment to be exposed to dripping or splashing, or objects
- filled with liquids, such as vases. DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment. High temperatures can melt plastic and lead to fires.
- use makeshift stands and NEVER fix legs with wooden screws. To ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided and according to the instructions.
- use equipment such as personal stereos or radios that will distract you from the $\,$ requirements of traffic safety. DON'T listen to headphones at high volume, as such use can permanently damage your
- DON'T leave equipment switched on when it is unattended unless it is specifically stated that is designed for unattended operation or has a stand-by mode. Switch off using the ON/OFF switch on the equipment or at the mains socket, and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people. DON'T continue to operate the equipment if you are in any doubt about it working
- normally, or if it is damaged in any way switch off, remove the mains plug from the mains socket and consult your dealer.

ABOVE ALL NEVER let anyone especially children push anything into holes, slots or any other opening in the equipment – this could result in a fatal electric shock. NEVER guess or take chances with electrical equipment of any kind. It is better to

Ver.01 Rev.19/11/2019







DOLBY ATMOS: Apple AirPlay Bluetooth Bluetooth

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Dolby Atmos, and the Use of the Works with Apple badge means that an accessory has been designed to work specificall nology identified in the badge and has been certified by the developer to meet Apple performance standards.

Apple and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Walmart Inc. is under license. Other trademarks and trade names are those of their respective owners. The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Ver.01 Rev.19/11/2019

Safety Warnings

Retain the manual. If you pass the unit onto a third party make sure to include this manual. Check that the voltage marked on the rating label matches your mains voltage.

CAUTION (CAUTION CONTROL CONTR

laintenance
Ensure the unit is fully unplugged from the power supply before cleaning.

Do not use any type of abrasive pad or abrasive cleanir solutions as these may damage the unit's surface.
 Do not use liquids to clean the unit.

Aucune source de flamme nue, telle que des bougies allumées, ne doitêtre placé sur l'appareil.

CAUTION: Risk of explosion if the battery is replaced by

an incorrect type; CAUTION: replacement of a battery with an incorrect type that can defeat a safeguard; CAUTION: disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; CAUTION: leaving a battery in an extremely high temperatus surrounding environment that can result in an explosion

Ver.01 Rev.19/11/2019

No naked flame sources, such as lighted candles, should be placed on the apparatus.

The lightning flash with arrowhead symb within an equilateral triangle, is intended alert the user to the presence of uninsula "dangerous voltage" within the unit's end that may be of sufficient magnitude to constitute a risk of electric shock.

 Damage
 Please inspect the unit for damage after unpacking. Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer. Location of Unit
 The unit must be placed on a flat stable surface and should not be subjected to vibrations. Do not place the unit on sloped or unstab surfaces as the unit may fall off or tip over.

 lo reduce the risk of the, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing, No objects filled with liquids, such as vasses, should be placed on the unit.
 If you spill any liquid into the unit, it can cause serious damage. Swirch it off at the mains immediately. Withdraw the mains plug and consult your dealer. due to overneating, ensure that curtains and o materials do not obstruct the ventilation vents Do not install or place this unit in a bookcase, built-in cabinet or in another confined space Ensure the unit is well ventilated.

dapter plugged in the mains socket while for lo Unplug the unit from the mains socket before a Mains Adapter Cable

Service

How to get service Call 1-800-925-6278. contact: Walmart Inc. Walmart.com, Bentonville, AR 72716

Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.

- your unit requires service, the service location will be at the sole discretion of Walmart, Inc. At the sole discretion of Walmart, Inc., item will either be repaired at an Authorized
- Service Centre or directly exchanged for a new or refurbished/remanufactured unit. If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Walmart, Inc. will pay for return shipping.
- Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Deale which is evidence that the product is within the warranty period must be presented to obtain
- warranty service. PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER.
- Onn 5.1.2 Atmos Soundbar that has been modified or incorporated into other products. A unit purchased or serviced outside the USA. • A unit sold in "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults.
- Acts of nature or God, such as but not limited to earthquake or lightning damage. Special, incidental or consequential damages.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference put and not occur in a particular installation. If this equipment does cause harmful interference to radio or television recention, which can be determined by turning the equipment interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for interference to co-channel mobile satellite systems. FCC RF Radiation Exposure Statement Csution:To manintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons. working amblient O –35 C, O000 (Notage input range 100V–240V. Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ver.01 Rev.19/11/2019

Ver.01 Rev.19/11/2019

Warranty

The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE). The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg. Cd or Pb. then it means that the battery has a heavy metal content of more than 0.005% Mercury, or more than 0.002% Cadmium or more than 0.004% Lead.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment. We continually strive to improve our products; specifications may change without prior notice.

Walmart, Inc. Limited Warranty

For advice on where to purchase accessories, please contact the store where you purchased your

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE

APPLICABLE WARRANTY AND WARRANTY PERIOD SET FORTH ABOVE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

Using the OPTICAL Connection

 Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may no This warranty gives you specific legal rights, and you also may have other rights that vary from state

If you purchased your unit outside the United States or seek warranty coverage outside the

Jnited States: This warranty does not apply. Contact your store for warranty inforn

Use an OPTICAL cable (included) to connect the TV's OPTICAL socket to the soundbar's OPTICAL socket.

Ō

Bottom view of the unit

Ver.01 Rev.19/11/2019

onn.

Thank you for purchasing your new Onn 5.1.2 Atmos Soundbar We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues. Read all the safety instructions carefully before use and keep this instruction manual for future

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so

Unpacking

according to local regulations The following items are included:

HDMI Cable x 1, Length 6ft 2 x AAA

Length 4.92ft

User Manual Quick Start Guide

Ver.01 Rev.19/11/2019

Product Overview

Front View 1. Standby indicator 2. Front panel display 3. Remote control sensor


Remote control sensor: Receives signal from the remote control.

1 2 3 4 5 00000 2. D Source 3. VOL-

 Switches the unit between ON and OFF modes.
 Press to change source input from ARC→HDMI 1→HDMI 2→HDMI3→BT →AUX→OPTICAL→USB→ARC. 3. Decreases the volume.
4. Increases the volume.
5. Play/Pause function in USB/BT/Wifi(AirPlay 2) Mode.



7. HDMI IN 2 PORT

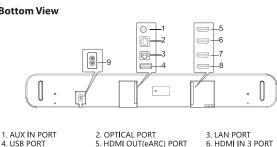

8. HDMI IN 1 PORT

Ver.01 Rev.19/11/2019

Rear View of Subwoofer

1. POWER Indicator Light up orange when the pairing succee 2. PAIR

Pair with the soundbar 4. **On/Off Switch** Switch the subwoofer On or Off

Remote Control

1. 也 Power Switches the unit between ON and OFF modes Mute the sound or resume the sound 3. I Previous/Next

4. ▲/▼ Up/Down
In channel control, Increase/Decrease the

volume for Treble/FL&FR/Center/Top L&R/Side L&R 5. ►II Play/Pause Press to start play/pause in USB/BT/WIFI playback

6. **Bluetooth mode**Press to enter Bluetooth mode, in this mode, long press to enter Bluetooth pairing mode

Press to Increase/Decrease volume, hold to Increase/decrease volume continually

ss to change source input from Optical \rightarrow USB \rightarrow AUX \rightarrow Optical Press to Increase/Decrease BASS level

10. Sound mode Press to change sound mode from Standard → Movie → Music 11. HDMI mode Press to change HDMI source, ARC→ HDMI 1→ HDMI2→ HDMI3→ ARC

12. 幸 Channel controls Press to enter each channel(FL&FR....) Ver.01 Rev.19/11/2019

Preparation **Battery Replacement for the Remote Control** 1. Press and slide the back cover to open the battery compartment of the remote control

2. Insert two AAA size batteries. Make sure the (+) and (–) ends of the batteries match the (+) and (-) ends indicated in the battery

3. Close the battery compartment cover

Ensure all audio connections of the unit are con before connecting to the AC socket.

Subwoofer connection

General Operation

Connect the AC cord to the subwoofer. Turn on the unit. The orange light on the rear panel will fash to indicate pairing mode, light will become solid once the subwoofer is paired to the soundbar.

1. When AC cord insert AC socket, open the rocker switch on the rear panel, the

orange light which is on the rear panel, flashing to show pairing, it will become sold light when subwoofer connect with soundbar automatically.

 When soundbar shut down or enter the standby mode, subwoofer also enter the standby mode automatically, the light is off. 3.If the subwoofer is not connected, display shows CHK SUB flashing in 20s and then back to the current channel, the fifth meter show '--' in 10S. 4.In case of subwoofer automatic pairing fails with soundbar, you should attempt to manual pairing.Hold Source and Vol+ on the soundbar together 3S,display CNCT SUB fast flashing, then hold PAIR button on the subwoofer 3S,

When you first connect the unit to the Power outlet, the unit will be in OFF mode. NO display on the LED screen.

1.Press ϕ on the unit or the remote control to switch the unit to ON mode .The screen display "WELCOME", the LED display will shut down without any operation in 10S, enter the dormant state, only the fifth meter of the screen retain the word "--"

go to standby mode. In standby mode there is a red led indicator will lit on

3.If no input ,no operation and silent state after 10 minutes, soundbar goes into

 $\ \, \text{4.Disconnect the mains plug from the Power outlet if you want to switch the unit off } \\$


Ver.01 Rev.19/11/2019

At same time, the red indicator slow flash to indicate wifi starting up lasting 15 minutes if network not set up and then off.And if it is set up before that, the indicator should be switched off as well once the device has been joined to the wifi network.

2.Press $\ensuremath{\boldsymbol{\upsilon}}$ again to shut down. The screen will display "GOODBYE" then off, system will

the subwoofer pairing and success after about 2S.

Connections **Using the AUX Connection** Use a 3.5mm to RCA stereo audio cable (not included) to connect the TV' s audio output socket to the soundbar's AUX IN socket

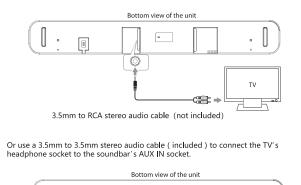


3.5mm to 3.5mm stereo audio cable

Using the HDMI Connection Connecting with a TV

If you connect this unit to a TV that supports HDMI CEC and eARC (Enhanced Audio Return Channel), you can enjoy the TV audio through the speakers of this unit without connecting the optical cable.

OPTICAL cable (included)

The eARC function enables an HDMI capable TV to send the audio stream to HDMI (eARC) of the unit. Use an HDMI cable(included) to connect the TV's eARC socket to the soundbar's

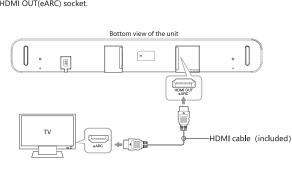


Ver.01 Rev.19/11/2019


Connecting with a TV and other devices 1. Connect HDMI IN socket on the back of the unit to HDMI OUT socket on the external device such as PS4 XBOX DVD player etc.

2. Connect HDMI OUT (eARC) socket on the back of the unit to HDMI IN (eARC) socket on the TV.

3. Set the input source to HDMI1,HDMI2 or HDMI3/eARC Press repeatedly HDMI Button on the remote control or Source Button on the unit until the function is selected. You can enjoy DOLBY ATMOS contents if connecting normally between this soundbar and your TV.


www.walmart.com

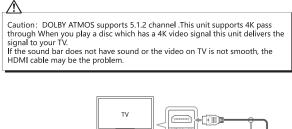

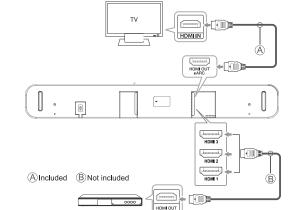


Using the LAN connection Use an LAN cable (not included) to connect the router's LAN socket to the soundbar's The following illustration is the example for connection of the system to your home network.

Ver.01 Rev.19/11/2019

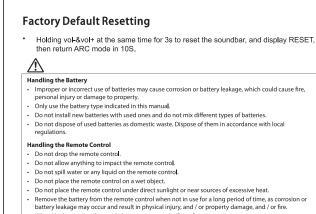

Remote Control Operation Range

The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 5 metres away and within a maximum of a 60° arc. Please note that the operating distance may vary depending on the brightness of

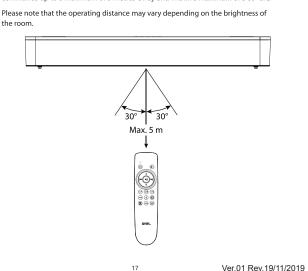

S-6064 PRODUCT GUIDE Ver.01 Rev. Unfold dimension: L540*W300mm

Material: 80g writing paper Printing: black, double sides Material Number: 47301171

Using the USB Connection

Use a USB flash disk connect to USB IN socket of soundbar


Establish Bluetooth connection 1. When unit power on, press

→ on soundbar change to Bluetooth mode, display "BT" lighting 3s.In this mode, long press £ 3s to enter Bluetooth pairing mode If hold £ on the soundbar 5s,will clear previous paired devices and goes to

2. When unit power on,press

n remote control change to Bluetooth mode, display "BT" lighting 3s. In this mode, long press to enter Bluetooth pairing mode, the display will show "PAIRING". 3. Select the Bluetooth search function on your device, your device should discover the soundbar which is called $\,$ Onn 5.1.2 $\,$ Soundbar.

5. After the speaker and your device are paired, you can stream music from your device

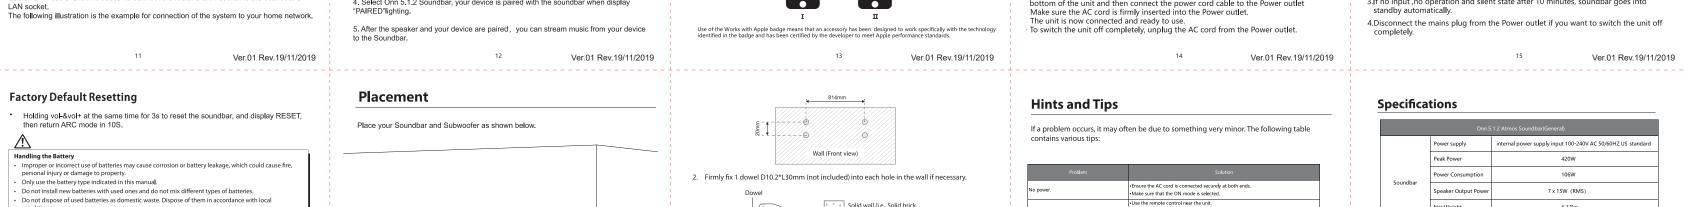

Note: Soundbar should not block the TV's remote control sensor.

Wall Mounting

Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the Soundbar. Additional tools (not included) are required for the installation

Drill 4 parallel holes(@8mm each according to wall type) in the wall. The distance between the left and right holes should be 814mm. And the distance between the upper and lower holes should be 20mm.

AirPlay 2 To control this AirPlay 2 enabled speaker, iOS 11.4 or later is required on your Set up your device in the Apple Home app located on your iPhone or iPad 1. Connect your iOS device to the WiFi 2. Follow the Apple Home app configure process I Open Apple Home app. **II** Click the "+" icon , select "Add Accessory" ■ Click "Don't Have a Code or Can't Scan" Search the device and when you find the device, click the device name. When prompted "Add Accessory to Network" click Allow

Waiting for network connection.



3. When Soundbar has connected to the network, Air Play music to Soundbar I Select one music player, such as Apple music app, Click the AirPlay icon.
 I Select the device name and click to connect, Play control when casting,like volume down/up, play/pause, prev/next etc.



Ver.01 Rev.19/11/2019

Selecting the Sound Effect

You can easily enjoy pre-programmed sound effects that are tailored to different kinds Press sound mode button repeatly on the remote control until the sound effect you want.

Sound effect	On display	Description
Standard	STD	You can enjoy optimized sound
Movie	MOVIE You can enjoy more immersive and cinematic surround sound	
Music	MUSIC	You can enjoy more good sound for

ecification					
Sound effect	Source	Input	Output		
Standard	HDMI AUX Optical	2.0Ch	5.1.2Ch		
		5.0Ch	5.1.2Ch		
		5.1Ch	5.1.2Ch		
		7.1Ch	5.1.2Ch		
	Bluetooth USB AirPlay	2.0Ch	3.1Ch		
		5.0Ch	3.1Ch		
		5.1Ch	3.1Ch		
		7.1Ch	3.1Ch		
Movie	HDMI AUX Optical	2.0Ch	5.1.2Ch		
		5.0Ch	5.1.2Ch		
		5.1Ch	5.1.2Ch		
		7.1Ch	5.1.2Ch		
Music	HDMI AUX Optical	2.0Ch	5.1.2Ch		
		5.0Ch	5.1.2Ch		
		5.1Ch	5.1.2Ch		

Connecting to the Power outlet Supply

· This unit is designed to operate with the provided AC cord. Connecting the unit to any other power source may damage the unit. Unwind the AC cord to its full length. Connect the end of the cable to the AC IN Socket at the bottom of the unit and then connect the power cord cable to the Power outlet Make sure the AC cord is firmly inserted into the Power outlet.

The unit is power consected and ready to use The unit is now connected and ready to use.

To switch the unit off completely, unplug the AC cord from the Power outlet.

Ver.01 Rev.19/11/2019

Specifications

internal power supply input 100-240V AC 50/60HZ US standard 106W Soundbar oeaker Output Power 7 x 15W (RMS) et Weight 6.12kg (W)41.8in x(D)5.66in x(H)3.6in w/rubber feet internal power supply input 100-240V AC 50/60HZ US standar ower supply Peak Power 400W 108W

7.4kg

(W)10.2in x (D)10.2in x (H)13in w/rubber feet

Features and specifications are subject to change without prior notice.

peaker Output Pov

Do not dispose of batteries with normal household waste.

let Weight

WARNING Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with)This product contains batteries. If the batteries is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away If you think batteries might have been swallowed or placed inside any part of the body, seek

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations.

For more information, please contact the local authority or your retailer where you purchased the

Warning: $Changes \ or \ modifications \ to \ this \ unit \ not \ expressly \ approved \ by \ the \ party \ responsible \ for \ compliance \ could \ void \ the \ user's \ authority \ to \ operate \ the \ equipment.$

BluetoothBluetooth mode: the screen display "BT"

MASTER VOLUME

LED Screen activity

Bluetooth is pairing: the screen display "PAIRING" Bluetooth is paired: the screen display "PAIRED" Bluetooth disconnected:the screen display "UNPAIRED" AUX IN: the screen display "AUX" Optical: the screen display "OPTICAL"
HDMI: the screen display "HDMI 1", "HDMI 2" or "HDMI 3"
ARC: the screen display "ARC"

Adjusting the Volume

Press VOL +/- on the unit or the remote control to adjust the volume (Volume range Min. ,1 to 39,Max) If you wish to turn the sound off, press $\P \times$ on the remote control. Press $\P \times$ again to

 $\begin{array}{ll} \textbf{SUB VOLUME} \\ \textbf{Short press} & \text{'SUB+'} \ / \ '\text{SUB-'} & \text{on the remote control to adjusting SUB volume} \\ \textbf{(Volume range Min.,-9 to 9,Max)} & . \end{array}$ You can adjust the sound level of treble and other Channel volume.

1. Press

button repeatedly on remote to select the channel you want to adjust.

2. Press

√

button to adjust the sound level.

Channel	Display	Range
reble	TREB	Min.,-9 ~ 9,Max.
ront left and right channels	FLnR	Min.,-5 ~ 5,Max.
op left and right channels	TLnR	Min.,-5 ~ 5,Max.
ide left and right channels	SLnR	Min.,-5 ~ 5,Max.

CEN

enter channel

Source change • WiFi streaming: Once detect signal from AirPlay 2, auto switch to WiFi mode

to play music. In standby mode, still can detect signal and wake up to stream

___

Bluetooth: In Bluetooth mode, once unit be paired with device, can play music, if WiFi is playing music, stop or pause WiFi playing first.

The above mark is in compliance with the Waste Electrical and Electronic Equipment

The above mark is no compliance with the waste electrical and ciectronic equipment Directive 2012/19/EU (WEEE). The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg. Cd or Pb, then it means that the battery has a heavy metal content of more than 0.005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead. In the unlikely event of a problem developing, please contact the store where you purchased

Min.,-5 ~ 5.Max.

Ver.01 Rev.19/11/2019

Warranty

All trademarks are the property of their respective owners and all rights are acknowledged.

your equipment.
We continually strive to improve our products; specifications may change without prior notice.

For advice on where to purchase accessories, please contact the store where you purchased your

Walmart, Inc. Limited Warranty

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT, NO VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC., IT'S AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE

 Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may no This warranty gives you specific legal rights, and you also may have other rights that vary from state

If you purchased your unit outside the United States or seek warranty coverage outside the Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

Ver.01 Rev.19/11/2019

4. Select Onn 5.1.2 Soundbar, your device is paired with the soundbar when display

Placement Place your Soundbar and Subwoofer as shown below.

Ver.01 Rev.19/11/2019

2. Firmly fix 1 dowel D10.2*L30mm (not included) into each hole in the wall if necessary. 3. Insert 1 screw TA 4*35mm (not included) into each dowel. Ensure that the wall brackets (included) is securely mounted .And insert 1 screw PM 6*12mm (included) into each threaded hole at the bottom of the soundbar. Caution:Ensure that the front panel should not face the wall during installation.

Maintenance Cleaning the Unit

Ensure the unit is fully unplugged from the mains socket before cleaning To clean the unit wine the case with a slightly moist lint-free cloth

Peel back the adhesive cover on the foot pad.

Press the pads firmly to ensure they are well secured.

the bottom of the soundbar.

 Do not use any cleaning fluids containing alcohol, ammonia or abrasives. Do not spray aerosol at or near the unit. **Attaching Self Adhesive Pads**

Ver.01 Rev.19/11/2019

Align and attach the adhesive side of the pad to the foot pad cutaway section on $% \left\{ 1,2,\ldots ,n\right\}$

Hints and Tips

If a problem occurs, it may often be due to something very minor. The following table

No power.	Make sure that the ON mode is selected.		
The remote control is not functioning.	Use the remote control near the unit. Point the remote control at the remote sensor on the unit. Replace the battery in the remote control with a new one. Remove any obstacles between the remote control and the unit.		
Loud hum or noise is heard.	The plugs and sockets are dirty. Wipe them with a cloth slightly moistened with an appropriate non-abrasive cleaning solution.		
Cannot connect to Wi-Fi	Make sure that the wireless network is not disturbed by microwave ovens, DECT phones, or other neighboring Wi-Fi devices. Make sure that the speaker and your device shar the same network. Make sure that your router/modem is on and that you are within range of it.		
Cannot find "Onn 5.1.2 Soundbar" on my Bluetooth - device.	Ensure the Bluetooth function is activated on your Bluetooth device. Ensure you have paired your unit with the Bluetooth device.		
Sound is not produced.	Adjust the volume. When you are using connection with a external device (set top box, Bluetooth device etc., adjust volume level of the device. Press mute button or adjust the volume level to cancel the mute function. Check the input source and select the correct input source.		
No woofer sound	Plug the power cord of subwoofer into the wall outlet securely. Connect the unit and the subwoofer.		
The USB device is not recognized	Make sure that the USB device is securely connected to the (USB) port. Check to see if the USB device or a cable is damaged.		
Cannot connect the unit to the Internet.	Check the wired or wireless LAN connection. Restart the router or wireless LAN router.		
HDMI connection cannot be	-Ensure the HDMI cable is connected securely at both ends.		

Ver.01 Rev.19/11/2019

Ver.01 Rev.19/11/2019

fold dimension: W90*H150mm (accordions)









