 


blackweb™

32" Smart Soundbar

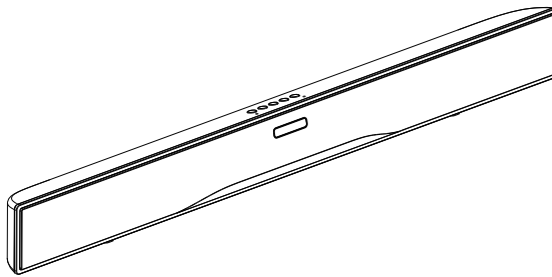

Model: BWC18SB001

SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

 
This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

- DO read the operating instructions before you attempt to use the equipment.
DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions.
DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
DO be careful with glass panels or doors on the equipment.
DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.
DO remove any fixed cover as this may expose dangerous voltages.
DO NOT obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc.
DO NOT place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment.
DO NOT use makeshift stands and NEVER fix legs with wooden screws.
DO NOT place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment.
DO NOT use makeshift stands and NEVER fix legs with wooden screws.
DO NOT listen to headphones at high volume, as such use can permanently damage your hearing.
DO NOT leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode.
DO NOT continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, remove the mains plug from the mains socket and consult your dealer.

- NEVER let anyone especially children push anything into holes, slots or any other openings in the equipment - this could result in a fatal electric shock.
NEVER guess or take chances with electrical equipment of any kind, it is better to be safe than sorry!

BATTERY SAFETY GUIDELINES. Includes icons and text for safe battery handling, such as 'Do not short-circuit the battery', 'Do not use damaged batteries', and 'Do not use batteries in fire or heat'.

Product Overview

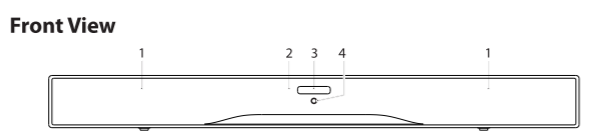

- 1. Speakers
2. LED Indicator
Power on
Show default input source led indicator at first time, afterwards, goes to last input source led indicator
Standby: LED indicator OFF
Bluetooth
Blue LED fast flash (Pairing mode)
Solid Blue (Connected)
Blue LED slow flash (Disconnect)
Aux-in: Solid Green
Optical in: Solid Red
Volume mute: Solid White
3. System Boost up: 4 RGB LEDs show white color slow breathing
Reach Max Volume: 4 RGB all show white fast flash for two times
Mic Mute: Microphone off: 4 RGB Orange
Factory Default Resetting: 4 RGB LEDs show white constant with fade in 0.5s
4. Remote Control Sensor
Receives signal from the remote control.



- 1. @ Button
Switches the unit between ON and OFF modes. (long press >2s)
2. Source Button
Selects the input source.
VOL - Button
Decreases the volume.
3. VOL + Button
Increases the volume.
4. # MIC MUTE Button
Press for Mic mute on or off
5. # MIC MUTE Button
Press for Mic mute on or off
6. Microphone

**Short press any buttons while an alarm/timer is sounding it will stop the alarm/timer.

Safety Warnings

- Read all the instructions carefully before using the unit.
Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
Unplug the unit from the mains socket before a lightning storm.
Check the voltage marked on the back of the unit.
Check that the voltage marked on the indicator will light up.
Please inspect the unit for damage after unpacking.

- Do not place the unit on or near appliances which may cause electromagnetic interference.
Do not use the unit in the remote control for this unit are easily swallowed by young children and this is dangerous.
Please dispose of batteries correctly by following the guidance in this manual.

- Children should be supervised to ensure that they do not play with the unit and the remote control.
Never let anyone especially children push anything into the holes, slots or any other openings in the case, this could result in a fatal electric shock.

- The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of unshielded 'dangerous voltage' within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (service) instructions in the manual accompanying the unit.

 
- To reduce the risk of fire, electric shock or personal injury, do not use the unit in the following conditions:
In the presence of flammable liquids, gases or vapors.
In the presence of explosive atmospheres.
In the presence of high humidity or high temperatures.
In the presence of high altitudes.
In the presence of high magnetic fields.

- Do not use the unit in the following conditions:
In the presence of flammable liquids, gases or vapors.
In the presence of explosive atmospheres.
In the presence of high humidity or high temperatures.
In the presence of high altitudes.
In the presence of high magnetic fields.

- Do not use the unit in the following conditions:
In the presence of flammable liquids, gases or vapors.
In the presence of explosive atmospheres.
In the presence of high humidity or high temperatures.
In the presence of high altitudes.
In the presence of high magnetic fields.

- Do not use the unit in the following conditions:
In the presence of flammable liquids, gases or vapors.
In the presence of explosive atmospheres.
In the presence of high humidity or high temperatures.
In the presence of high altitudes.
In the presence of high magnetic fields.

- Do not use the unit in the following conditions:
In the presence of flammable liquids, gases or vapors.
In the presence of explosive atmospheres.
In the presence of high humidity or high temperatures.
In the presence of high altitudes.
In the presence of high magnetic fields.

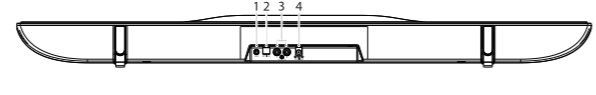

- 1. AUX IN Socket
2. OPTICAL Socket
3. AUDIO IN (L/R) Socket
4. DC IN Socket

Remote Control

- @ Button
Switches the unit between ON and OFF modes.
Button
Mutes the unit or resumes the sound.
VOL - Button
Decrease the volume.
VOL + Button
Increase the volume.
AUX Button
Switch to AUX mode.
Bluetooth Connection
OPTICAL Button
Switch to OPTICAL mode.
MIC MUTE Button
Short press to control music playback: prev. track, pause / play, next track.



- 1. @ Button
Switches the unit between ON and OFF modes. (long press >2s)
2. Source Button
Selects the input source.
VOL - Button
Decreases the volume.
3. VOL + Button
Increases the volume.
4. # MIC MUTE Button
Press for Mic mute on or off
5. # MIC MUTE Button
Press for Mic mute on or off
6. Microphone

Remove the Plastic Strip from the Remote Control

Remove the plastic strip from the battery if the battery is being used for the first time. It is located at the bottom rear of the remote control.

Battery Replacement for the Remote Control

- The remote control requires a CR2025, 3V Lithium battery.
Slide and hold the battery release tab.
Pull out the battery holder and remove the old battery.



Service

- Call 1-800-935-8278, contact: Walmart Inc., Walmart.com, Bentonville, AR 72716.
Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the unit's date of purchase, place of purchase and model/serial number ready.
Your information can be found on the back of your unit.
A representative will troubleshoot your problem over the telephone.
If it is determined that your unit requires service, the service location will be at the sole discretion of Wal-Mart Stores, Inc. based upon the Wal-Mart Stores, Inc. Limited Warranty Statement.

- At the sole discretion of Wal-Mart Stores, Inc., monitor will either be repaired at an Authorized Service Center or directly exchanged for a new or refurbished/remanufactured unit.
If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Wal-Mart Stores, Inc. will pay for return shipping.
Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.

- PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER.
A 32" Smart Soundbar that has been modified or incorporated into other products.
A unit purchased or serviced outside the USA.
A unit sold in "As Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults.
Acts of nature or God, such as but not limited to earthquake or lightning damage.
Special, incidental or consequential damages.

- FCC Statement:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
This device may not cause harmful interference.
This device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Use shielded cables.
Consult the dealer or an experienced radio/TV technician for help.

- Warning:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Replace with a new battery.
Insert the battery holder back into the remote control.

 
- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
Install the battery correctly in the battery compartment.
Normally the battery's positive polarity (+) will face up.
Use only the battery type indicated in this manual.
Do not use the type of battery as domestic waste.
Dispose of it in accordance with local regulations.
Small button cell batteries such as the one used in the remote control are easily swallowed by young children and this is dangerous.
Keep loose button cells away from young children and make sure that the battery is secure in the remote control.
Seek medical advice if you believe a battery cell has been swallowed.

- Handling the Remote Control:
Take care of your fingernails when you slide and pull the battery release tab.
Do not drop the remote control.
Do not allow anything to impact the remote control.
Do not spill water or liquid on the remote control.
Do not place the remote control on a wet object.
Do not place the remote control under direct sunlight or near sources of excessive heat.
Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
When the battery is exhausted, the remote control will not function.


- Remote Control Operation Range:
The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 5 metres away and within a maximum of a 60° arc.
Please note that the operating distance may vary depending on the brightness of the room.

Connections



Using the OPTICAL Connection

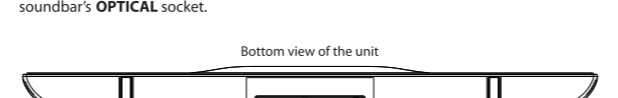

Using the AUX Connection

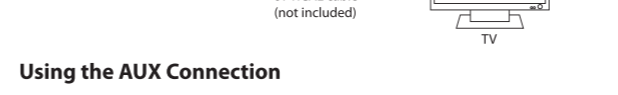 

 Using the 3.5mm to 3.5mm stereo audio cable connection

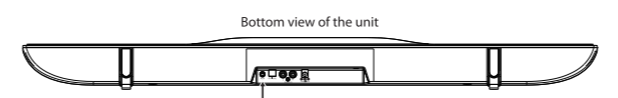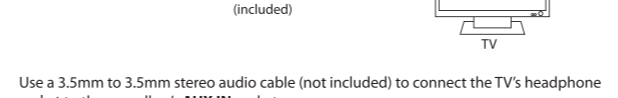

Maintenance

Cleaning the Unit

Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
Do not spray aerosol at or near the unit.

Attaching Self Adhesive Pads

- Peel back the adhesive cover on the foot pad.
Align and attach the adhesive side of the pad to the foot pad cutaway section on the bottom of the soundbar.
Press the pads firmly to ensure they are well secured.


Hints and Tips

If a problem occurs, it may often be due to something very minor. The following table contains various tips:

Table with 2 columns: Problem and Solution. Includes tips for power, remote control, loud hum, cannot connect to Wi-Fi, and functional abnormality.

Using the Audio Connection

 Use an RCA stereo audio cable (not included) to connect the TV's audio output socket to the soundbar's AUDIO IN (L/R) socket.

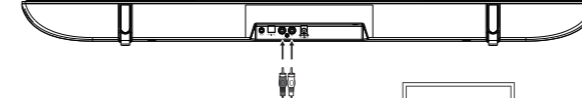

Do not use the unit in the following conditions:
In the presence of flammable liquids, gases or vapors.
In the presence of explosive atmospheres.
In the presence of high humidity or high temperatures.
In the presence of high altitudes.
In the presence of high magnetic fields.

Google Voice Assistant

Just start with 'OK Google', then ask it questions or tell it to do things like this: 'Play some jazz', 'Turn up the volume', 'Set a 15 minute timer for pizza', 'Do I need an umbrella today?'

 


Google Chromecast Built-in

Follow the three steps below to enjoy this feature:
1. Connect phone or tablet to the same Wi-Fi network as your speaker using the Google Home App.
2. Cast podcasts, music, and more from 100+ Chromecast-enabled apps. Tap the Cast button in a Chromecast-enabled app to play music on your speaker.
3. Tap the Cast button in a Chromecast-enabled app to play music on your speaker.

Establish Bluetooth connection

The speaker is equipped with Bluetooth to allow wireless playback from any Bluetooth-enabled phone or tablet.

- When unit power on, press source button on soundbar change to bluetooth mode, and then short press this button about 2s to enter Bluetooth pairing mode.
If long press this button >5s, will clear previous paired devices and go to pairing mode.
Click the device name you entered during Google Home App setup on your device to pair with the speaker.
After the speaker and your device are paired, you can stream music from your device to the speaker.

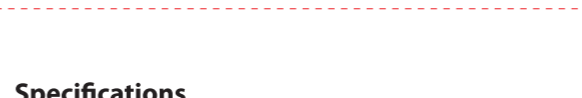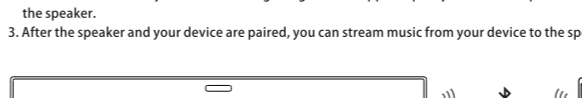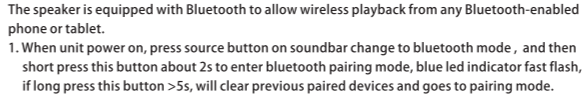

Specifications

Table with 2 columns: Specification and Value. Includes Model, Mains Adapter, Peak Power, Power Consumption, Speaker Output Power, Net Weight, and Dimension.

Features and specifications are subject to change without prior notice.

WARNING

Do not ingest the battery. Chemical Burn Hazard. The remote control supplied with this product contains a button cell battery. If the button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. Do not use the remote control when not in use. Do not use the remote control when not in use. Do not use the remote control when not in use.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

 


The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). The mark indicates the equipment is not to be disposed of as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg, Cd or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than 0.004% Lead.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment. We continually strive to improve our products; specifications may change without prior notice. For advice on where to purchase accessories, please contact the store where you purchased your equipment.

All trademarks are the property of their respective owners and all rights are acknowledged.

Connecting to the Mains Supply

- This unit is designed to operate with the provided mains adapter.
Connecting the unit to any other power source may damage the unit.
Unwind the mains adapter cable to its full length. Connect the end of the cable to the DC IN socket at the bottom of the unit and then connect the mains adapter to the mains socket.
Make sure the mains adapter is firmly inserted into the mains socket. The unit is now connected and ready to use.
To switch the unit off completely, unplug the mains adapter from the mains socket.

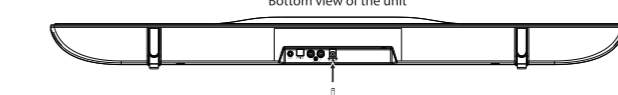
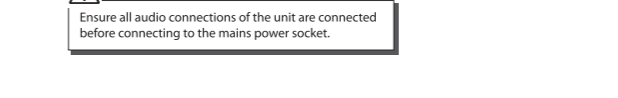
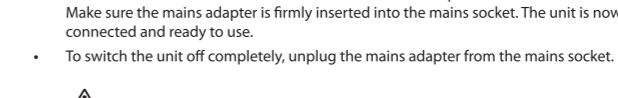


Wall Mounting

Drill 2 parallel holes (Ø 8 mm each according to wall type) in the wall. The distance between the holes should be 445 mm.

Firmly fix 1 dowel (Ø 12x30mm (not included)) into each hole in the wall if necessary.

Insert 1 screw TA 4x40mm (not included) into each dowel. Be sure to leave a 6mm gap between the wall and the screw's head. Lift the unit on the heads of the screws and slot it into place.

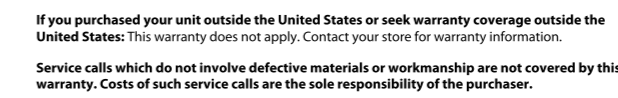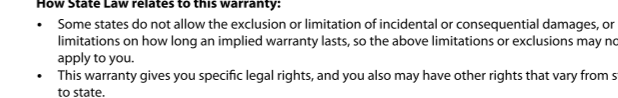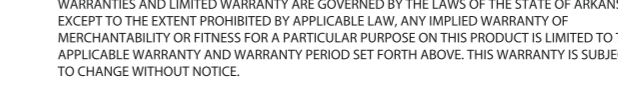

General Operation

When you first connect the unit to the mains socket, the unit will be in POWER OFF mode. The LED indicator will not light up. Press @ on the unit or the remote control to switch the unit on ON mode. The LED indicator will light up Red.

- Press @ to switch the unit back to POWER OFF mode. The LED indicator will not light up.
Disconnect the mains plug from the mains socket if you want to switch the unit off completely.

When the unit is idle for approximately 90 minutes, it will automatically switch to Standby mode.

Selecting Modes

Press source on the unit or the remote control to switch between AUX and OPTICAL and BLUETOOTH mode. The LED indicator will light up green if in AUX mode and red if in OPTICAL and blue if in BLUETOOTH mode.

Optical is default mode when unit is switched on at first time.

Adjusting the Volume

- Press VOL +/- on the unit or the remote control to adjust the volume.
If you wish to turn the sound off, press @ on the remote control. Press @ again to resume normal listening.

Google Cast Stream

- Install Google Home app into phone, follow instruction of application for wifi setup and music streaming process.

Source change

- WiFi streaming: Once detected signal from Google cast, auto switch to WiFi mode to play music. In standby mode, still can detect signal and wake up to stream music.
Bluetooth: In Bluetooth mode, once unit is paired with device, can play music, if WiFi is playing music, stop or pause WiFi playing first.
Aux in/Optical In: In AUX/Optical connection, Bluetooth is disabled; if you wake up with 'OK Google', then change to WiFi mode.

Factory Default Resetting

When speaker power on, hold the Mic mute button for 15s, the speaker will reset factory default setting.

W-2226 快速安装指南_V13.0_15Aug18

展开尺寸：450X300mm,成形尺寸150X90mm (风琴折法)

材质：80克书写纸

印刷：单黑双面印刷

