

INSTRUCTION MANUAL



# **ONA18SB001**

## **ONN 2.0 MINI SOUNDBAR**





# Contents

---

<b>Some Dos and Don'ts on the Safe Use of Equipment .....</b>	<b>4</b>
<b>Safety Warnings.....</b>	<b>6</b>
<b>Support .....</b>	<b>8</b>
<b>Unpacking.....</b>	<b>9</b>
<b>Product Overview .....</b>	<b>10</b>
Front View .....	10
Top View .....	10
Bottom View.....	10
<b>Remote Control.....</b>	<b>11</b>
<b>Remove the Plastic Strip from the Remote Control .....</b>	<b>11</b>
<b>Battery Replacement for the Remote Control .....</b>	<b>11</b>
Handling the Battery.....	12
Handling the Remote Control .....	12
<b>Remote Control Operation Range.....</b>	<b>12</b>
<b>Connections .....</b>	<b>13</b>
Using the OPTICAL Connection .....	13
Using the AUX Connection.....	13
Using the Audio Connection.....	14
Using the Bluetooth Connection.....	14
Connecting to the Mains Supply.....	15
<b>General Operation .....</b>	<b>16</b>
Selecting Modes .....	16
Adjusting the Volume.....	16
<b>Maintenance .....</b>	<b>16</b>
Cleaning the Unit .....	16
Attaching Self Adhesive Pads.....	16
<b>Hints and Tips .....</b>	<b>17</b>
<b>Specifications.....</b>	<b>17</b>
<b>Notes for battery disposal.....</b>	<b>18</b>
<b>Warranty .....</b>	<b>19</b>

## SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

.....

- DO read the operating instructions before you attempt to use the equipment.
- DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.
- DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
- DO be careful with glass panels or doors on the equipment.
- DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.

 
.....

- DON'T remove any fixed cover as this may expose dangerous voltages.
- DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.
- DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases.
- DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment. High temperatures can melt plastic and lead to fires.
- DON'T use makeshift stands and NEVER fix legs with wooden screws. To ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided and according to the instructions.
- DON'T use equipment such as personal stereos or radios that will distract you from the requirements of traffic safety.
- DON'T listen to headphones at high volume, as such use can permanently damage your hearing.
- DON'T leave equipment switched on when it is unattended unless it is specifically stated that is designed for unattended operation or has a stand-by mode. Switch off using the ON/OFF switch on the equipment or at the mains socket, and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.
- DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way – switch off, remove the mains plug from the mains socket and consult your dealer.

.....


### ABOVE ALL

- NEVER let anyone especially children push anything into holes, slots or any other opening in the equipment – this could result in a fatal electric shock.
- NEVER guess or take chances with electrical equipment of any kind. It is better to be safe than sorry!

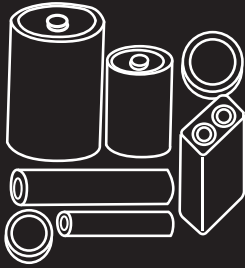


## BATTERY SAFETY GUIDELINES

 Used correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused – resulting in leakage or, in extreme cases, fire or explosion. Here are some simple guidelines to safe battery use designed to eliminate any such problems.

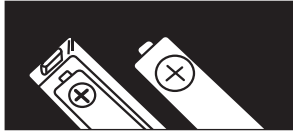

 Take care to fit your batteries correctly, observing the plus and minus marks on the battery and appliance. Incorrect fitting can cause leakage or, in extreme cases, fire or even an explosion.

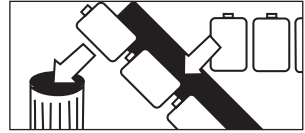


Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types, since this can result in leakage or, in extreme cases, fire or even an explosion.



Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion.



 Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time. Otherwise the batteries may leak and cause damage.

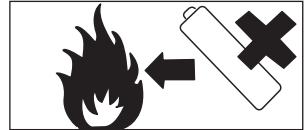

Never dispose of batteries in fire as this can cause them to explode. Please recycle dead batteries; do not put with the normal household waste.



Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. They may leak, cause fire or even explode. There are special rechargeable batteries which are clearly marked as such.



Supervise children if they are replacing batteries themselves in order to ensure these guidelines are followed.



Remember that small button cell batteries such as used in some hearing aids, toys, games and other appliances, are easily swallowed by young children and this can be dangerous.



Keep loose button cells away from young children.



Make sure battery compartments are secure.



Seek medical advice if you believe a cell has been swallowed.

# Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

## Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

## Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.

## Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

## Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

## Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

## Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

## Safety

- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket before a lightning storm.

## Mains Adapter

- The mains adapter will continue to draw electricity from the mains supply when plugged in the mains socket. In the interests of safety and to avoid unnecessary energy consumption, never leave the adapter plugged in the mains socket while for long periods of time. Disconnect the adapter from the power supply.

## Mains Adapter Cable

- Make sure the unit or unit stand is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and create a safety hazard.

## Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

## Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Please dispose of batteries correctly by following the guidance in this manual.

## Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

## Safety

### Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### CAUTION

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- The plug of Mains adapter is used as the disconnect device, the disconnect device shall remain readily operable.
- The product is designed to use in moderate climates.

### Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

## Service

### How to get service:

- Call 1-800-925-6278(1-800-WALMART).
- Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
- A representative will troubleshoot your problem over the telephone. If it is determined that your unit requires service, the service location will be at the sole discretion of Wal-Mart Stores, Inc based upon the Wal-Mart Stores, Inc Limited Warranty Statement.
- At the sole discretion of Wal-Mart Stores, Inc, monitor will either be repaired at an Authorized Service Centre or directly exchanged for a new or refurbished/remanufactured unit. If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Wal-Mart Stores, Inc will pay for return shipping.
- Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.
- PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER.
- A Mini bar that has been modified or incorporated into other products.
- A unit purchased or serviced outside the USA.
- A unit sold in "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults.
- Acts of nature or God, such as but not limited to earthquake or lightning damage.
- Special, incidental or consequential damages.

### FCC Statement:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:( 1 )this device may not cause harmful interference.(2)this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure.
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.



Thank you for purchasing your new ONN Soundbar.

We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

 
Read all the safety instructions carefully before use and keep this instruction manual for future reference.

## Unpacking

---

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

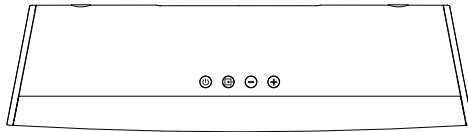

Main Unit



Remote Control



3.5 to 3.5mm  
Stereo Audio Cable



Power Adapter




Instruction Manual

# Product Overview

 
---

## Front View




1. Speakers
2. LED Indicator
  - Dim red when the unit is in **STANDBY** mode.
  - Lights up white in **AUX IN** or **AUDIO IN** modes.
  - Lights up green in **OPTICAL** mode.
  - Lights up blue in **BLUETOOTH** modes.
3. Remote Control Sensor
  - Receives signal from the remote control.

## Top View

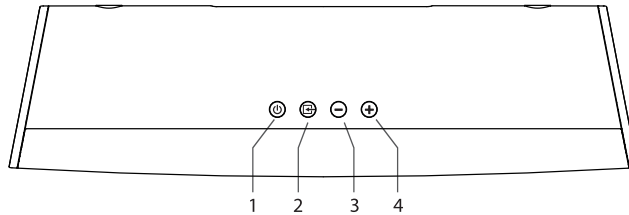 

1. **⏻** Button
  - Switches the unit between **ON** and **STANDBY** modes.
2. **SOURCE** Button
  - Selects the input source.
3. **VOL -** Button
  - Decreases the volume.
4. **VOL +** Button
  - Increases the volume.


## Back View

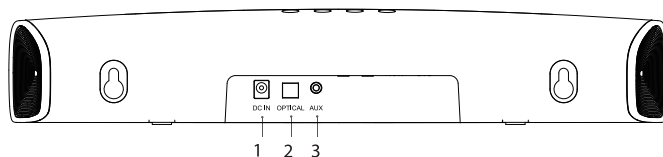 

1. **DC IN** Socket
2. **OPTICAL** Socket
3. **AUX IN** Socket


## Remote Control

 1. **⏻** Button Switches the unit between **ON** and **STANDBY** modes.
2. **VOL -** Button Decreases the volume.
3. **AUX** Switch to Aux input.
4. **⏮** Skip to previous track in Bluetooth mode.
5. **⏸** Button Mutes the unit or resumes the sound.
6. **VOL +** Button Increases the volume.
7. **📶** Bluetooth Connection Switch to Bluetooth mode, press and hold to enable bluetooth pairing if there is an existing connection then disconnect the devices, unit will enter pairing mode.
8. **OPTICAL** Skip to next track in bluetooth mode.
9. **▶||** Switch to optical mode.
10. **▶||** Press to play/pause music.

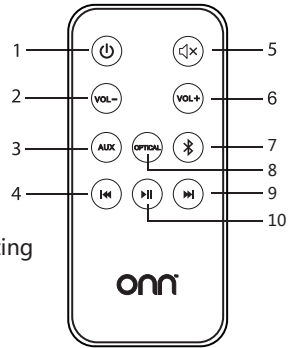

## Remove the Plastic Strip from the Remote Control

 
Remove the plastic strip from the battery if the battery is being used for the first time. It is located at the bottom rear of the remote control.

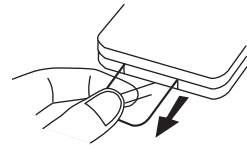

## Battery Replacement for the Remote Control

The remote control requires a CR2025, 3V Lithium battery.

 1. Slide and hold the battery release tab in the direction of the arrow.
2. Pull out the battery holder and remove the old battery.
3. Replace with a new battery.
4. Insert the battery holder back into the remote control.

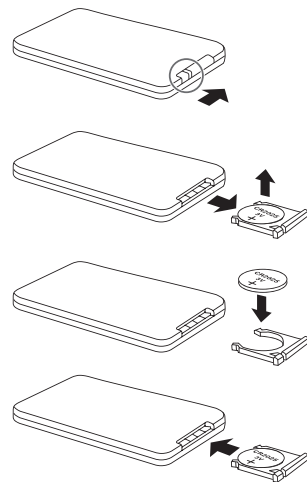

## Handling the Battery

 
- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Install the battery correctly in the battery compartment. Normally the battery's positive polarity (+) will face up.
- Use only the battery type indicated in this manual.
- Do not dispose of the used battery as domestic waste. Dispose of it in accordance with local regulations.
- Small button cell batteries such as the one used in the remote control are easily swallowed by young children and this is dangerous. Keep loose button cells away from young children and make sure that the battery is secure in the remote control. Seek medical advice if you believe a battery cell has been swallowed.

## Handling the Remote Control

- Take care of your fingernails when you slide and pull the battery release tab.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- When the battery is exhausted, the remote control will not function.

## Remote Control Operation Range

- The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 5 metres away and within a maximum of a 60° arc.
- Please note that the operating distance may vary depending on the brightness of the room.

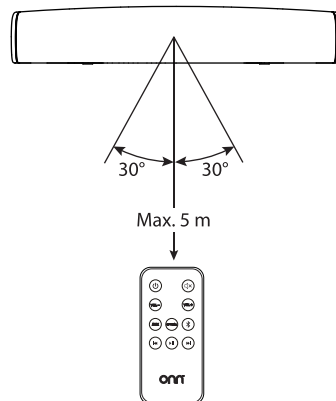


## Connections

---


### Using the OPTICAL Connection

 Use an optical cable (not included) to connect the TV's **OPTICAL OUT** socket to the soundbar's **OPTICAL** socket.

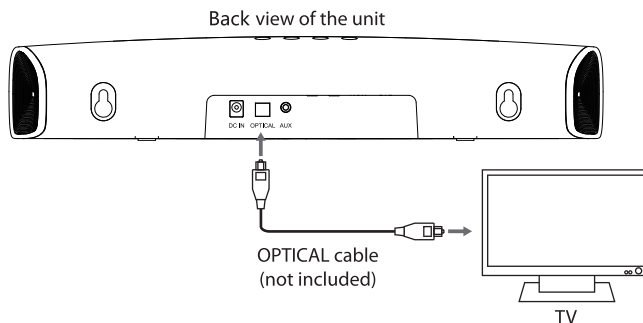


### Using the AUX Connection

 Use a 3.5mm to RCA stereo audio cable (not included) to connect the TV's audio output sockets to the soundbar's **AUX IN** socket.

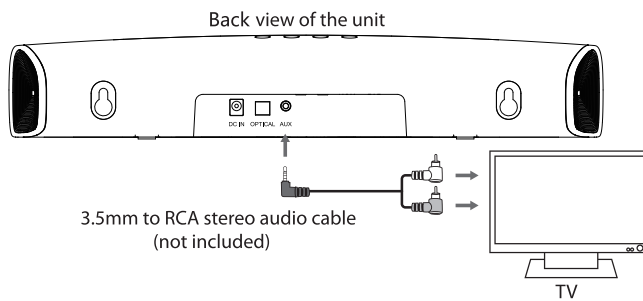

 Use a 3.5mm to 3.5mm stereo audio cable (included) to connect the TV's headphone socket to the soundbar's **AUX IN** socket.

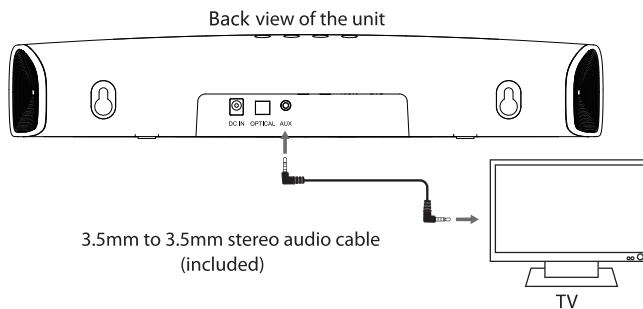

## Using the Bluetooth Connection

- Keep the distance of the Soundbar and your mobile phone, PC, tablet or other Bluetooth enabled device within 1 meter. The closer, the better.
- Ensure Bluetooth is enabled on your device and that your device is discoverable.
- Select the Bluetooth mode on the soundbar:
  - Using the remote control, press the Bluetooth button. The indicator light on the soundbar will be flashing blue.
  - Alternatively, Press the source button on the Soundbar until the indicator light is flashing blue.
- Select pairing mode:
  - Using the remote control, press and hold the Bluetooth button for 3 seconds until blue indicator light is flashing rapidly.
  - Alternatively, press and hold the source button on the Soundbar for 3 seconds until the blue indicator light is flashing rapidly.
- Select the Bluetooth search function on your device. Your device should discover the Soundbar which is called "ONA18SB001".
- Select "ONA18SB001". Your device is paired with the Soundbar when the blue indicator light stops flashing and becomes solid.

 


## Connecting to the Mains Supply

- This unit is designed to operate with the provided mains adapter.
- Connecting the unit to any other power source may damage the unit. Unwind the mains adapter cable to its full length. Connect the end of the cable to the **DC IN** Socket at the back of the unit and then connect the mains adapter to the mains socket. Make sure the mains adapter is firmly inserted into the mains socket. The unit is now connected and ready to use.
- To switch the unit off completely, unplug the mains adapter from the mains socket.



Ensure all audio connections of the unit are connected before connecting to the mains power socket.

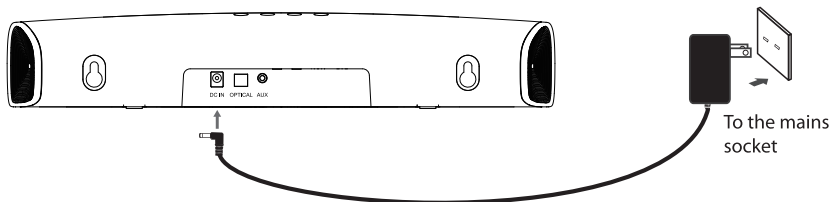


## Wall Mounting




- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the Soundbar.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

 
1. Drill 2 parallel holes (Ø 8 mm each according to wall type) in the wall. The distance between the holes should be 280 mm.

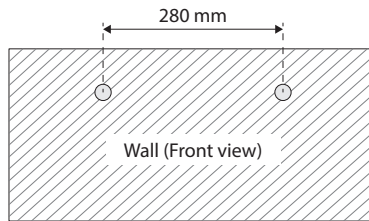

 2. Firmly fix 1 dowel D10.2\*L30mm (not included) into each hole in the wall if necessary.

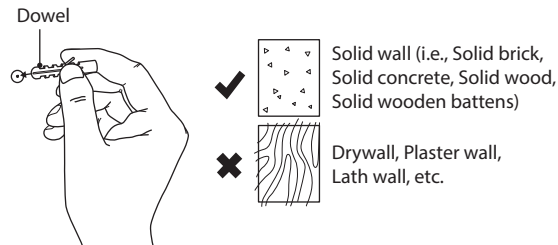

 3. Insert 1 screw TA 4\*40mm(not included)into each dowel. Be sure to leave a 6mm gap between the wall and the screw's head. Lift the unit over the heads of the screws and slot into place.

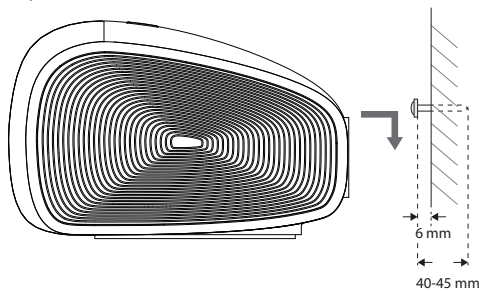

## General Operation

---

When you first connect the unit to the mains socket, the unit will be in **STANDBY** mode. The LED indicator will dim red.

- Press **⏻** on the unit or the remote control to switch the unit to **ON** mode. The LED indicator will light up green.
- Press **⏻** to switch the unit back to **STANDBY** mode. The LED indicator will be dim red.
- Disconnect the mains plug from the mains socket if you want to switch the unit off completely.



When the unit volume is close to mute or is idle for approximately 15 minutes, it will automatically switch to Standby.

## Selecting Modes

Press **SOURCE** on the unit to switch between **OPTICAL** and **BLUETOOTH** and **AUX** mode.

The LED indicator will light up green if in **OPTICAL** mode and blue if in **BLUETOOTH** and white if in **AUX** mode.



Optical mode is the default mode first time the unit is switched on.

## Adjusting the Volume

- Press **VOL +/-** on the unit or the remote control to adjust the volume.
- If you wish to turn the sound off, press **⏻** on the remote control. Press **⏻** again to resume normal listening.

## Maintenance

---

### Cleaning the Unit



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.



## Hints and Tips

---

If a problem occurs, it may often be due to something very minor. The following table contains various tips:

Problem	Solution
No power.	<ul style="list-style-type: none"><li>• Ensure the mains adapter is connected securely at both ends.</li><li>• Make sure that the <b>ON</b> mode is selected.</li></ul>
The remote control is not functioning.	<ul style="list-style-type: none"><li>• Use the remote control near the unit.</li><li>• Point the remote control at the remote sensor on the unit.</li><li>• Replace the battery in the remote control with a new one.</li><li>• Remove any obstacles between the remote control and the unit.</li></ul>
Loud hum or noise is heard.	<ul style="list-style-type: none"><li>• The plugs and sockets are dirty. Wipe them with a cloth slightly moistened with an appropriate non-abrasive cleaning solution.</li></ul>



If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

## Specifications

---

Model	<b>ONA18SB001</b>
Mains Adapter	Input AC 100-240V ~50/60Hz, 1A Output DC 15V, 2.0A
Power Consumption	2.5W
Speaker Output Power	2 x 12.5Wrms @ 1% THD
Net Weight	1.5kg
Dimension	411mm(W) x 111mm(D) x 72mm(H)

Features and specifications are subject to change without prior notice.

 **WARNING**

Do not ingest the battery, Chemical Burn Hazard  
(The remote control supplied with) This product contains a button cell battery. If the button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention

**Notes for battery disposal**

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.



The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE).

The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg, Cd or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment.

We continually strive to improve our products; specifications may change without prior notice.

For advice on where to purchase accessories, please contact the store where you purchased your equipment.

All trademarks are the property of their respective owners and all rights are acknowledged.

# WalMart, Inc. Limited Warranty

### LIMITATION OF WARRANTY

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY AND WARRANTY PERIOD SET FORTH ABOVE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

### How State Law relates to this warranty:

- Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

**If you purchased your unit outside the United States or seek warranty coverage outside the United States:** This warranty does not apply. Contact your store for warranty information.

**Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.**

onn™

[www.walmart.com](http://www.walmart.com)