



AppStar Tablet

USER GUIDE



Important: Please charge the tablet for at least 10 hours before using it for the first time.
For more information, please visit www.binatoneappstar.com

1. PRODUCT FEATURE	1
1.1 WELCOME	1
1.2 WHAT IS IN THE BOX?	2
1.3 OVERVIEW OF THE PRODUCT	3
1.3.1 APPSTAR Learning Tablet	3
1.3.2 Status Indicators	4
1.4 HOW TO OPERATE	4
1.4.1 Using the Touch Screen	4
1.4.2 Using the G-Sensor	6
1.4.3 Using the Home and Volume Keys	8
1.4.4 Using the Game Keys	8
1.4.5 Using the Camera Keys	8
1.5 GETTING STARTED	9
1.5.1 Connect the Power Adapter	9
1.5.2 Power On	10
1.5.3 Power Off	10
1.5.4 Lock/Unlock Screen	10
1.5.5 Connect to Computer	10
1.5.6 Multi-Media File Folder	11
1.5.7 Inserting Micro SD Card	11
1.5.8 Reset APPSTAR	12
2. STARTING WITH APPSTAR	13
2.1 USING APPSTAR FOR THE FIRST TIME	13
2.1.1 Select Language	13
2.1.2 Set Wi-Fi	13
2.1.3 Set Date and Time	13
2.1.4 Set Parent Password	14
2.2 LOGIN	14
2.2.1 Create Account	15
2.2.2 Delete Account	16
2.2.3 Login Account	16
2.2.4 Forgot Password	17

2.3 GREETING	17
2.4 MAIN MENU	18
2.4.1 Learning	19
2.4.2 Games	19
2.4.3 e-Books	19
2.4.4 Camera	19
2.4.5 Video Recorder	19
2.4.6 Music	20
2.4.7 Conny App	20
2.4.8 Kids' App	20
2.4.9 My Favorites	20
2.4.10 Tools	21
2.4.11 Conny Store	23
2.4.12 Wi-Fi	23
2.5 NETWORK MODULE	24
3. PARENT CONTROL	25
3.1 WEBSITE FILTERING	25
3.2 APPLICATION MANAGER	26
3.3 SYSTEM SETTINGS	27
3.3.1 Tablet Settings	27
3.3.2 Change Parent Password	27
3.3.3 Factory Data Reset	28
3.4 APPSTORE	28
3.5 ANDROID	28
4. IMPORTANT INFORMATIONS	29
4.1 SAFETY INSTRUCTIONS	29
4.2 APPSTAR TECHNICAL SPECIFICATIONS	30
4.3 TROUBLESHOOTING	31
4.4 FCC STATEMENT	32

1 PRODUCT FEATURE /

1.1 WELCOME

Thank you for purchasing the APPSTAR!

APPSTAR learning tablet has been developed based on the Android system, and specifically customized for children use. With a novel, beautiful, bright and colorful appearance it's cute cartoon designed user interface has plentiful pre-installed learning and game applications. APPSTAR is a revolutionary product for learning and fun.


APPSTAR main features include:

- 200 Pre-installed applications and games specifically designed for children.
- Provides parents a total security solution that ensures a safe environment for children and ensures peace of mind for parents.
- CONNY STORE is tailored-made for children; both parents and children can purchase and download additional learning and game apps.
- APPSTAR also contains a universal Android app market APPSTORE.
- Supports 6 user accounts with the ability to set different configurations for each individual user.
- Built-in two operating systems TABZ OS and Android 4.1 OS.


Please read this manual carefully before using APPSTAR. This allows you to have a better understanding of the features and functions of APPSTAR. We hope this product can bring you happiness.

— 1.2 WHAT IS IN THE BOX? —

The following items are included in the box:

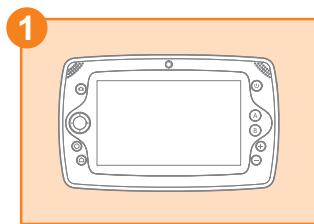


APPSTAR Learning Tablet

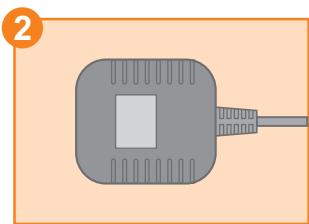


Power Adapter (for charging)



APPSTAR User Guide

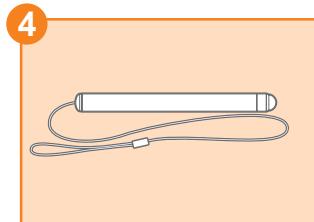



Touch Pen

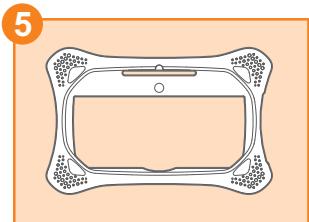

Bumper Case

— 1.3 OVERVIEW OF THE PRODUCT —

1.3.1 APPSTAR Learning Tablet

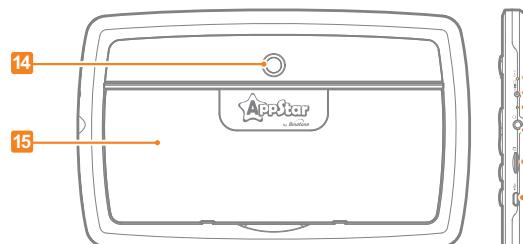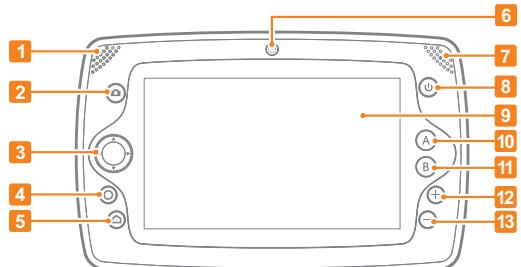

1.Speaker
2.Shutter Key (to take a photo)
3.D Pad
4.O Key
5.Home Key
6.Front Camera
7.Microphone
8.Power Key
9.Touch Screen
10.A Key
11.B Key
12.Volume +
13.Volume -
14.Back Camera
15.Stand
16.Reset Slot (Reset Button is in the slot)
17.DC Jack
18.Charging Indicator
19.Headphone Jack
20.Micro SD card slot
21.Micro USB Port

1.3.2 Status Indicators

TABZ OS status bar displays APPSTAR information on top of the screen, such as User Name, Time, Alarm Clock, Wi-Fi Status, Battery Status etc.

User Name	Tanny	Display the current user's name.
Time	10:08 AM	Display time.
Alarm Clock	⌚	The user has turned on the alarm clock function.
Wi-Fi	WiFi	APPSTAR is connected to a wireless network.
Battery Status	🔋	Battery is charging.
	🔋	Battery is full.
	🔋	Battery is partially drained.
	🔋	Battery is low, indicates to charge battery


1.4 HOW TO OPERATE

1.4.1 Using the Touch Screen

APPSTAR has a multi-touch capacitive screen. You can operate the touch screen with your finger.


● Tap

With your finger, tap on the icon once to open it.

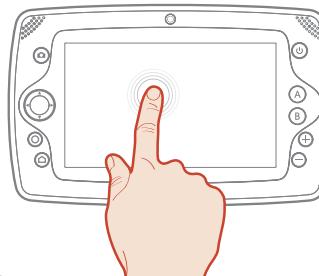


● Slide

Tap and hold the screen and slide in the direction that you want to scroll.

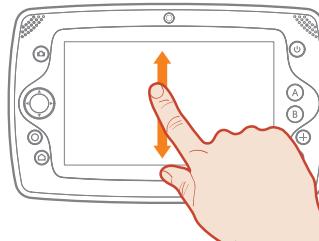


● Swipe

Quickly move your finger on the screen in the direction that you want to scroll.

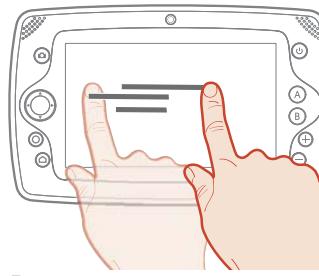



● Drag

Touch and hold on the icon, then drag it to the spot where you want to move.

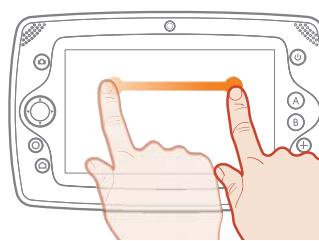

● Zoom


Using two fingers on the screen, pinch together to zoom out or spread apart to zoom in.

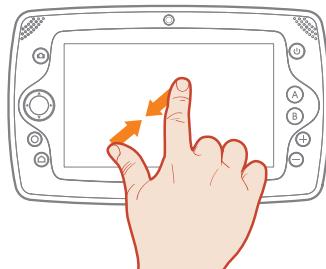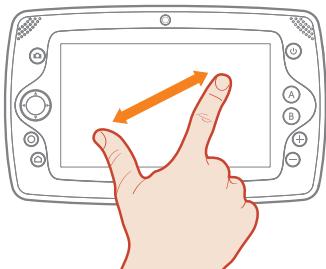

1.4.2 Using the G-Sensor

● Rotation

Rotate the tablet to change the on-screen display from Portrait to Landscape orientation.

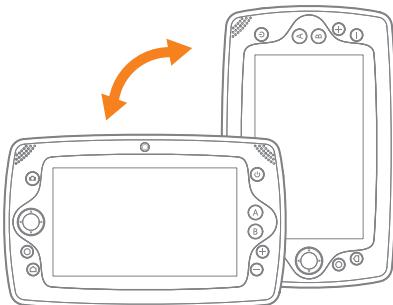

● Shake

In some applications, you can gently shake APPSTAR to operate. Make sure APPSTAR is grasped firmly in both hands, the shaking action does not require extreme force.




● Tilt

In some applications, tilt APPSTAR left or right to control the movement direction.




1.4.3 Using the Home and Volume Keys

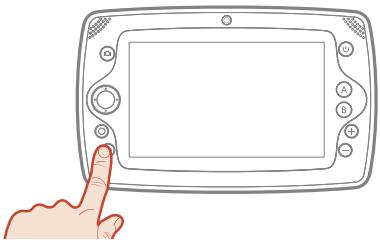

Home key: Return to the previous menu
Volume +: Increase volume
Volume -: Decrease volume


1.4.5 Using the Camera Keys

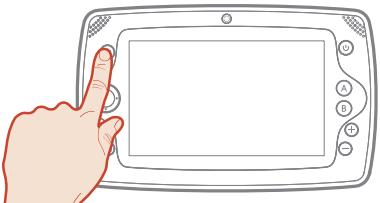

Binatone Helpline: 866-779-1632 in US, 0845 345 9677 in UK, 08187622092 in Eire

D Pad: Change effects (such as morph effects, face mask effects etc.)
A key: Confirm
B key: Back
Volume +: Zoom in
Volume -: Zoom out
O key: Return to original size after zoom in or zoom out
Shutter button: Take photo / Start recording / Stop recording
A key + D pad: Move picture after zoom out

1.4.4 Using the Game Keys


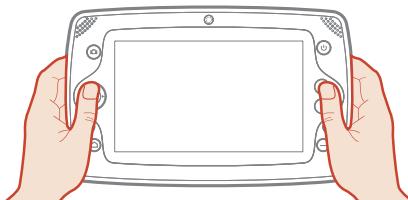


D Pad: Select/Move
A key: Confirm /Attack / Shoot / Accelerate / Jump
B Key: Cancel / Back / Jump / Brake
O key: Confirm /Attack / Shoot / Accelerate / Jump (use in vertical version)
Shutter key: Special operation /Unique skill /Switch magic or weapons

1.5 GETTING STARTED

Before using the APPSTAR, please make sure you have read the instruction guidelines thoroughly.

1.5.1 Connect the Power Adapter

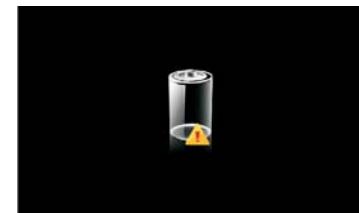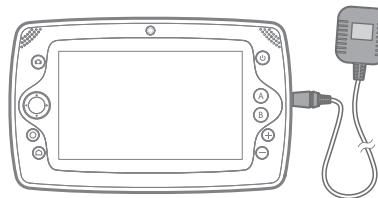

Please connect the power adaptor to APPSTAR and a power outlet.
When  icon appears in the upper right corner of the screen, this indicates the tablet is connected to the power adapter and is charging.
Charge the battery for at least 4 hours before you start using the tablet.

The above diagram indicates the battery level is too low to start the APPSTAR, please charge at least 30 minutes before APPSTAR is able to start again.

Caution:

- Only use adaptor with output DC 5V/2A.
- Make sure the input of the adaptor matches the voltage of the country it is being used in.
- For safety purposes, it is recommended to ONLY use the power adapter that came with your APPSTAR. Using a different power adapter may damage the APPSTAR.

Binatone Helpline: 866-779-1632 in US, 0845 345 9677 in UK, 08187622092 in Eire

1.5.2 Power On

Press and hold the power button to turn on. APPSTAR displays a welcome screen before it enters the Main Menu automatically.

1.5.4 Lock/Unlock Screen

Press Power Button to lock APPSTAR.
Note: When auto sleep time is up, the system will automatically lock the screen and go to stand by mode.




When APPSTAR is locked, briefly press the Power Button to wake up the screen.

Click and hold the  icon, then slide it towards the right of the screen.

1.5.3 Power Off

Press and hold the power button, the shutdown prompt box will appear, tap "Ok" to turn off, or tap "Cancel" to return to the previous screen.

1.5.5 Connect to Computer

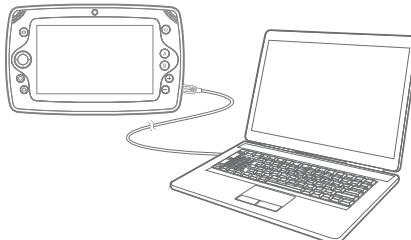

You can connect APPSTAR to your computer in order to transfer your photos, videos, and music to APPSTAR.
USB cable (Sold separately) is required.


1. Connect the USB cable between APPSTAR and your computer.
2. When the connection is completed, a prompt box will appear. If you want to connect, tap "Yes" to open the USB connection page, tap "No" to close the prompt box.
3. Tap "Turn on USB Storage" in the USB connection page, and tap "Ok" to confirm.
4. After a successful connection, "USB storage in use" will appear. You can start to copy and move files between the computer and APPSTAR. When finished, tap "Turn off USB Storage".
5. Disconnect the USB cable.

1.5.6 Multi-Media File Folder

1. When you copy music, pictures and movies/videos files from your computer to the APPSTAR, put them in the correct specified folder on internal memory or Micro SD card. TABZ OS will only read files from a specified folder rather than search from the entire memory space.
2. In order to avoid that TABZ OS cannot find the file, please do not remove the specified folders.
3. The specified folders are as follows:

Specified Folder	Content & Support File Type
Music	Music transfer to this folder (Such as .mp3/.wav/.wma) To play the music, go to Main Menu→Music
Pictures	Pictures transfer to this folder (Such as .jpg /.png /.gif /.bmp) To view the photo, go to Main Menu→Camera→Photo Frame
Movies	Movies/videos transfer to this folder (Such as .wmv/.mp4/.avi/.mov/.flv) To view the video, go to Main Menu→Video Recorder→Video Player


1.5.7 Inserting Micro SD Card

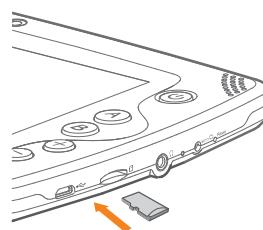

APPSTAR has an internal memory (FLASH memory), and a slot for inserting a Micro SD card of up to 32GB, to provide additional storage space.

To install the Micro SD card, first switch the APPSTAR to off. Next, open the battery cover and lift the lithium battery out without disconnecting the wires from the unit, put in the micro SD card (sold separately) into the micro SD card slot with its label side up. The card will snap into place, then replace the lithium battery followed by the battery cover.

1.5.8 Reset APPSTAR

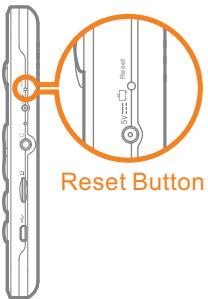

If APPSTAR malfunctions (ie: screen freezes or keys stop responding), press the reset button using a small pointed object to reset the APPSTAR, then press and hold the Power Button to restart the APPSTAR.

Reset Button

2 STARTING WITH APPSTAR /

2.1 USING APPSTAR FOR THE FIRST TIME

The first time use of the APPSTAR will require you to setup the initial configuration.


2.1.1 Select Language



2.1.2 Set Wi-Fi



2.1.3 Set Date and Time

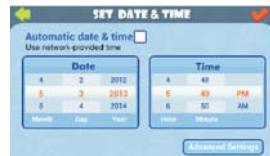

On this page select the language of your choice. Tap the icon on the upper right corner to confirm and continue to the next step after selecting the language.

On this page, you can setup Wi-Fi to connect the APPSTAR to a wireless network. A list of available networks will appear. Tap to select a Wi-Fi network from the list. Enter the password if it is a secured network and tap "Join". When connected successfully, this icon will appear on the status bar. If you wish to skip set up, turn off the Wi-Fi connection.

To manually add other Wi-Fi hotspots, please tap the "Advanced Settings". After setting, tap the icon on the upper right corner to confirm and continue to the next step.

On this page you can set the time on the APPSTAR. You can choose automatic calibration time through the network, or choose to set the time manually. For more advanced settings, please tap the "Advanced Settings".

2.1.4 Set Parent Password



On this page, you will set the parent password. You need this password to login to the parent account and to enter the network module. Also, on this page you will need to enter retrieve password question and answer, which can help you to re-set the parent password when you have forgotten your parent password.

Tips: Parent password in APPSTAR can be used as a master password.

Note: Capital letters may not be used in passwords.

2.2 LOGIN



● Children Accounts

These accounts are for children use. In these accounts, children can use all the pre-installed applications and can save game data. Children also can use the specified network function and applications downloaded from the Internet if a parent consents. Please see Section 3.1 Website Filtering and Section 3.2 Application Manager.

● Guest Account

This account is for guest. In this account, guest can only use the pre-installed applications.

● Parent Account

This account is only for parents. In this account, parents can manage all children accounts, set system configurations, download applications and enter Android OS. Please see Section 3 Parent Control.

2.2.1 Create Account



1. Select a child account (New 1 - New 4).



2. Enter a user name



3. If you want to create a password, click the "User Password" box then create a password.
Note: Capital letters may not be used in passwords.



4. Select a built-in cartoon picture or take a new photo as a head portrait.



5. Enter a greeting. This greeting will be displayed on the first screen after you login.




6. Select wallpaper as your desktop background.

2.2.2 Delete Account



In the login page, the  icon will appear in the upper-right corner of the screen after you create a user. If you want to delete a user account, tap the  icon, then the  icon will appear, tap on the  icon on the user account to be deleted and the following interface will appear :

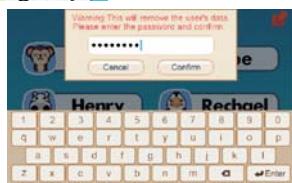

Then enter the user password or parent password, and then tap "Confirm" to delete the user account.
Note: Deleting a user will clear all the data of the user.

2.2.3 Login Account



Tap the user account in the login page to log on. If a password is required, enter the user password on the pop-up password input panel.



Log on to the parent account, a parent password is required and must be entered.

2.2.4 Forgot Password



For children accounts: If children forget the user password, a parent can enter the parent password to log on and modify the password in User Settings. Please see Section 2.4.10 Tools→User Settings→Edit user.



For parent account: If a parent forgets the parent password, the parent can tap "Forgot Password" in the password input panel to enter the Forgot Password page. Input the Hint Question's answer that set it in the Set Parents Password. If the answer is correct, you can re-set the parents password.

2.3 GREETING



Displays the user's name, head portrait and greeting. It will automatically jump to the Main Menu of TABZ OS after three seconds, or manually slide the screen from right to left into the Main Menu.

To select another user, press  to go back to Login Interface or press on the  button of the APPSTAR:

2.4 MAIN MENU



CHILDREN ACCOUNT



Tips1: On the Main Menu of the children accounts, slide from right to left to return to the Network Module, slide from left to right to enter the Greeting.

PARENT ACCOUNT



Tips 2: On the Main Menu of the parent account, slide from right to left to the Network Module; on the Main Menu of the parent account, slide from left to right to enter then slide left again to parent control, slide right again to Greeting.

2.4.1 Learning



Includes 100 children learning applications divided in 2 groups TOUCH and D-PAD. The applications in the TOUCH group operate with the Touch screen and those of the D-PAD operate with the D-PAD and buttons. Operating mainly by touch.

2.4.2 Games



Includes 70 games divided in 2 groups TOUCH and D-PAD. The applications in the TOUCH group operate with the Touch screen and those of the D-PAD operate with the D-PAD and buttons. Operating mainly by touch.

2.4.3 e-Books



Includes 10 interactive fairy tale books enabling the child to learn reading and to listen to stories being read.

2.4.4 Camera



Includes three parts: Effects Camera, Photo Frame and Camera games. Camera games contain 8 games: Anger Management, Image DIY, Photo Puzzle, Distortion Mirror, Stamper, Photo Style, Reality Battle and Love Test.

2.4.5 Video Recorder




Includes three parts: Effects Recorder, Video Player and Video games. Video games contain 8 games: Video Sticker, Video morph, Magic Video, Bridge, Pot Pit, Doodle, Style and Catch Insects.

2.4.6 Music



"Music" can play audio files in APPSTAR internal memory and Micro SD card external storage.

2.4.7 CONNY App

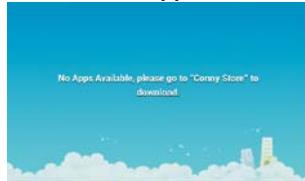

The CONNY App includes applications downloaded and installed from "CONNY Store" that were designed and created for children. Children can use safely without parent concern of content.

2.4.8 Kids' App



Kids' App includes applications downloaded and installed from "Appstore." The applications from "Appstore" can be used only after parents consent. Please see Section 3.2 Application Manager.

2.4.9 My Favorites



Note: Only after playing the creative gaming applications on Learning, Camera & Video sections, the Specified Folder "My favorites" can be found on Micro SD card or Internal memory when APPSTAR is connected to computer. You can copy these photos, videos & works from APPSTAR to computer.

My Favorites is a collection of photos and videos taken by the user and the works created by the user when playing the creative gaming applications. The specified folders are as follows:

Specified Folder	Content
My favorites/<user>/photos	Photos save in this folder after playing some of the creative gaming applications on Section 2.4.4 Camera
My favorites/<user>/videos	Videos save in this folder after playing some of the creative gaming applications on Section 2.4.5 Video Recorder
My favorites/<user>/works	Works created by user save in this folder after playing some of the creative gaming applications on Section 2.4.1 Learning

2.4.10 Tools



The Tools include Friends, Alarm Clock, Calendar, Stopwatch, Calculator, Voice Memos, File Manager and User Settings.

● Friends



This is a useful address book management application. You can manage friends' information (name, contact information, address, etc.). Tap  icon on the upper right corner of the screen can add a new friend.




Add Friend: Add a new friend's information.




Edit Friends: Select a friend in the friends list to view the friend's information.



Tap the  icon on the upper right corner of the screen; you can modify the information of the friends.

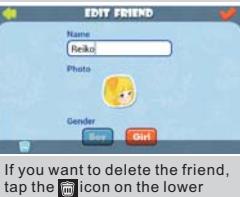

If you want to delete the friend, tap the  icon on the lower left corner of the screen.

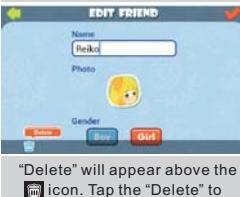

"Delete" will appear above the  icon. Tap the "Delete" to confirm removing the friend.

● Alarm Clock




Alarm settings: Select the time in the time box. Select a ringtone in the Alarm Ring list. Select the number of weeks.




Ring: When the alarm rings, a full-screen animation pops up, tap the icon to stop the alarm clock.

● Calendar

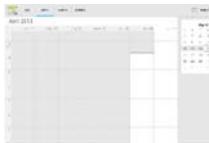

Where you the user can browse the calendar and manage your schedule. (Calendar account registration is required)

● Stopwatch

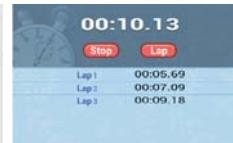

This is a simple stopwatch, accurate to the millisecond display. Tap "Start" to start the timer, tap "Stop" to stop the timer. Tap "Lap" to record the timing of multiple time points. Tap "Reset" to reset the time.

● Calculator



This is a calculator application, not only can it do a simple four operations, it can also do complex scientific calculations.

● Voice Memos



This is a voice memo application, where users can record a voice message. You can play the recorded files on APPSTAR. To do this, go to the Music→Playlists→My recordings to select the record.

● File Manager



This is a file manager application. The user can view the files of APPSTAR internal memory and micro SD card external storage, copy and delete the files. Tap icon, then tap to select the corresponding file.
 1) To copy file: tap icon, then copy the file from APPSTAR to micro SD card or from micro SD card to APPSTAR.
 2) Tap icon, then tap "Yes" to confirm you wish to delete the file.
Note: you can only copy and delete a file; you cannot copy and delete a folder in the File Manager.

● User Settings



The user can modify personal information (username, head portrait and password) as well as greeting and desktop wallpaper.

2.4.11 CONNY Store



The CONNY store is designed for APPSTAR users to shop for children applications online. It includes a large number of parent-approved applications. To purchase, download and use these applications, you will need to register an account by following the instructions appearing on the screen.

2.4.12 Wi-Fi



On this page, parents can setup Wi-Fi connection. Choose the name of Wi-Fi in the list of Wi-Fi hotspots; tap "Join" to connect to the network. If it is a secured network, enter the password and tap "Join". To manually add other Wi-Fi hotspots, please tap the "Advanced Settings".


2.5 NETWORK MODULE



The network module contains various fast entrances such as Internet Browser (By default, the Website filtering is activated, see Section 3.1 Website Filtering), E-mail, etc... which can be managed by parents. Use of the fast entrances will need parent authorization, see Section 3.2 Applications Manager.



A parent password is needed when entering the network module.

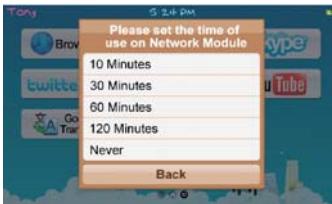

You can set the time line of how long children can stay in this module.

3 PARENT CONTROL



Parent control includes Website Filtering, Application Manager, System Settings, Appstore and Android.

3.1 WEBSITE FILTERING



Website filtering can help the parent to control what websites children can visit, children can only view and visit the website in the white list. Parents can set separate white lists for each individual child account.



Tap "Add New" and enter the URL in the pop up box to add a new URL to the white list.



ITap "Default" to restore the factory default white list.



- Tap the  icon on the lower left corner, then tap  icon and the URL will be deleted from the white list.
- After modifications are completed, tap the upper right corner  icon to confirm the changes.
- Website filtering can be activated or deactivated.

3.2 APPLICATION MANAGER

Parents can set individual application configuration for each child account.



In the Kids' App, parents can select applications into the individual children accounts for children to use safely.

- Tap the icon to decide if the application appears in the children accounts. Tap "Unlock All" or "Lock All" to quickly set up all states of the application;
- Tap the icon on the lower left corner, then tap the icon, the application will then be deleted;



In the Network Module, parents can choose which fast entrances network functions children can use safely.

- Tap the icon to decide if the fast entrance appears in children accounts.
- Tap "Unlock All" or "Lock All" to quickly set up all states of the application.

Note : When modification is done tap the icon on the upper right corner to confirm changes.

3.3 SYSTEM SETTINGS



System Settings includes Tablet Settings, Change Parent Password and Factory Data Reset.

3.3.1 Tablet Settings



3.3.2 Change Parent Password



Contains Volume, Brightness, Rotation Lock, Auto Sleep, Voice Prompt and Touch Sounds.

- **Volume:** slide left and right to change the system sound volume.
- **Brightness:** slide left and right to change the brightness of the display screen.
- **Rotation Lock:** Tap the icon to enable or disable the Auto-rotate screen function.
- **Auto Sleep:** Select a sleep time in the pop up box, no operation within the time, APPSTAR will enter sleep standby mode.
- **Voice Prompt:** Tap the icon to turn on or off the menu tone.
- **Touch Sounds:** Tap the icon to turn on or off the touch screen sound.
- **Default settings:** Tap "Default Settings" to reset the system settings to the default state.

Note: After editing, tap the upper right corner icon to confirm the changes.

Parents can change the parent password and change the retrieve password question and answer.

Note: To change the password you will need to enter the original password.

3.3.3 Factory Data Reset



Tap "Factory Data Reset" to restore the factory settings.

Parent password is required.

Caution:

This action will erase all the data in APPSTAR. Before performing this operation please back up data to a computer or SD card.

3.4 APPSTORE

This is an app market where the parents can download additional applications. After the download and installations are complete, the parent can now allow the children to play with these apps.

Go to the "Application Manager" to set. Please see Section 3.2 Application Manager.

Remark:

1) WiFi connection is needed.

2) For first time use, you must wait during the downloading and installation of APPSTORE.

3.5 ANDROID



4 IMPORTANT INFORMATION /

4.1 SAFETY INSTRUCTIONS

- Do not arbitrarily throw, demolition, impact, microwave, fire, paint APPSTAR
- Avoid placing APPSTAR in the rain or other wet environments or liquid.
- Be careful not to place it near food
- If APPSTAR accidentally gets wet, immediately unplug the external power supply, open the battery cover and remove the battery. Confirm that the APPSTAR did not get any water inside and it is completely dry before re-booting.
- To prevent the APPSTAR screen from being damaged, touch the screen lightly.
- Do not use sharp objects to operate the screen.
- Do not throw, squeeze, impact, bend, or bite the battery. This could cause a short circuit.
- When playing, please maintain a comfortable level of lighting in the room, too bright or too dark can be harmful to your vision.
- It is recommended that parents monitor their children for appropriate play and length of play time.
- Avoid playing games when under stress or for prolonged periods causing tiredness. Please rest when feeling tired, a 15 minute break per hour is advised when playing games for prolonged periods of time. Anyone with heart problems or high blood pressure should take concern when playing games.
- If you don't feel well, please discontinue use and see a doctor promptly.
- If your eyes become tired or sore while playing, please discontinue use and see a doctor if the condition continues.
- If you feel dizzy, nauseated or tired please discontinue use of playing the game. Please consult a doctor if the condition continues.
- If you have any existing wounds on your hand/wrists or other parts of your body, please take care not to cause your condition to worsen by playing games. You should seek your doctor's advice first before playing.
- Don't use the headphones for prolong periods of extended time, this may cause hearing loss or ringing in the ears. If you notice a change in your hearing, please see a doctor promptly.

4.2 TABZ TECHNICAL SPECIFICATIONS

Dimensions	238 x 147 x 16mm
Weight	Approx. 440 grams
Display Screen	7-inch TFT LCD Screen resolution 800x480
Touch Screen	5-point touch capacitive screen
Operating System	Android 4.1 OS
CPU	ARM CortexA9 @ 1.1GHz
RAM	512MB DDR3
Storage Capacity	4 GB
Camera	0.3M front and 2M rear Camera
SD Card	Micro SD card SDHC compatible, up to 32GB
Battery	2800mAh lithium polymer battery
Power Adapter	DC 5V /2A \ominus \ominus \oplus \oplus
Power	10 W
Interfaces	Micro USB 2.0 port Micro SD card slot Headphone jack DC jack
Ideal Temperature	10 ~ 40 °C
Ideal Humidity	20~80%

4.3 TROUBLESHOOTING

Machine will not boot up

Plug in the power adapter, charge for at least 30 minutes and attempt to boot again. If you still cannot boot, try to reset the APPSTAR (see section 1.5.9), if not resolved please contact local seller.

Headphones cannot hear the sound

Please check the APPSTAR if the volume is set to 0, verify the headphones are connected properly or check if the headphones or headphone cords are damaged.

Appear crash (Freeze)

Press the reset button using a small pointed object to reset APPSTAR, then press and hold the power button to restart APPSTAR.

Not be able to connect to the computer

If APPSTAR is in standby mode, briefly press the power button to wake up the system. If APPSTAR is in the normal state, enter the Android OS, go to "Settings" -> "Developers" check "USB debugging" option, if checked, uncheck it.

Not be able to connect to Wi-Fi networks

Please check any Wi-Fi network nearby and verify the Wi-Fi network works exists and is functioning properly. If it is a secured network, enter the password.

4.4 FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3. FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure requirement.

The device can be used in portable exposure condition without RF striction.