



**VIVITAR ISING**

**PARTY KARAOKE SPEAKER WITH 2 MICS AND DISCO LIGHT**

**www.vivitar.com**

**ISING KARAOKE**

SING · VLOG · STREAM · PARTY

User Manual ISK202


**Features**

- 4 Hour Playtime
- 10W Speaker Output
- Microphones Included
- Built-in Phone Mount
- Multicolor Disco Light
- TF Memory Card and USB Support (up to 32GB)

**Contents**

- Karaoke Speaker and Microphone
- USB Charging Cable
- 2 Wired Microphones
- User Manual with Warranty Information

**A Quick Look**

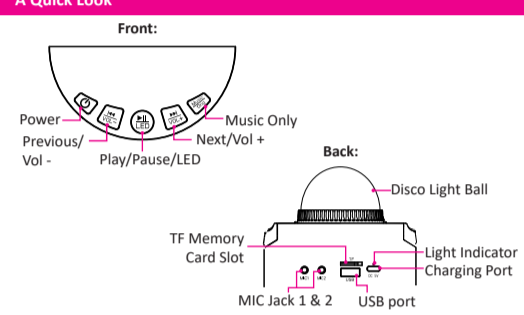

**Front:**

- Power
- Previous/Vol -
- Play/Pause/LED
- Next/Vol +
- Music Only

**Back:**

- Disco Light Ball
- TF Memory Card Slot
- MIC Jack 1 & 2
- Light Indicator
- Charging Port
- USB port

**Charging the Speaker**


- To charge the speaker, attach the small end of the USB-C charging cable (included) to the charging port located at the back of the speaker.
- Attach the other end to a USB power port on a computer or USB charging adapter.
- A RED light will turn ON while the speaker is charging, and turn OFF once charging is complete.

**Pairing the Speaker**

- Press and hold the Power button to start pairing your device. Once the device is ON you will hear "It's Karaoke Time".
- Open your smartphone's Bluetooth menu to enable Bluetooth and search for Bluetooth devices. Select "ISK202 Karaoke Speaker" from the list of devices.
- After successfully pairing, you will hear "Let's Sing" from the speaker.

Note: If a previously paired device is in range while the speaker is ON, the speaker will connect to it automatically.

On a Smartphone device,  
Go to Settings>Bluetooth  
(Make sure Bluetooth is turned ON)

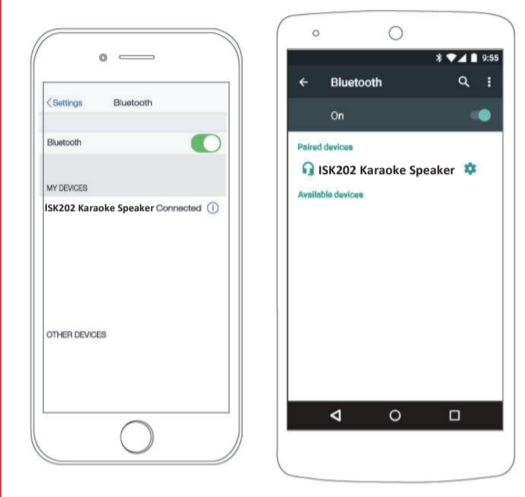

**Using the Speaker and Microphone**

**Power On/Off**  
Press and hold the Power button to turn the speaker ON. You will hear "It's Karaoke Time". Press and hold the Power button to turn the speaker OFF.

**Using the Microphone**  
Plug the included microphones into the MIC jacks. Slide the ON/OFF switch on the microphone to the "ON" position to turn ON. Slide the ON/OFF switch to the "OFF" position to turn OFF.

**Adjusting Volume**  
Press and hold down the VOL- button to decrease the volume. Press and hold down the VOL+ button to increase the volume. Volume can also be adjusted from connected device.

**Switching Modes**  
To switch to TF mode, insert a TF card into slot. You will hear "Memory Card Mode". To switch to USB mode, insert a USB into the USB port. You will hear "USB Mode".

**Music Only/Instrumental Mode**  
Press the Music Only button to convert the playing song to instrumental mode. Instrumental mode mutes the vocals and only plays the background music. Press again to switch back to the original audio.

**Light Modes**  
Press and hold the LED button to turn the disco lights ON. You will hear "Party Lights ON". There are 3 different light modes, fast blinking light, slow blinking light, and solid disco light. Press and hold the LED button to change light modes. Press and hold LED button to turn the lights OFF.

**Using the USB Port and Memory Card Slot**

Your Karaoke Speaker comes with a USB Port and a TF Memory Card Slot.

- When a USB thumb drive or jump drive is inserted into the USB Port, your speaker will play any .MP3, .WMA music file stored on the drive.
- When a TF memory card is inserted into the TF Card Slot, your speaker will play any .MP3, .WMA music file stored on the card.

**Specifications**

- USB/Memory Card Support: MAX 32GB
- Output: 10W(5Wx2)
- Battery Capacity: 1200MAH
- Power Input: 5V = 600MA
- Charging Time: Approximately 1-2 Hour
- Playback Time: Approximately 3-4 Hours\*
- Charging Cable: USB-C
- Bluetooth: V5.1

\*with 50% Volume

**Safety Precautions**

When using your Karaoke Speaker, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not submerge speaker in water. Do not place speaker on wet surfaces.
3. Only clean using a clean, soft cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose product to excessive heat or fire.
6. Do not expose product to extreme cold or hot temperatures to avoid battery damage.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. Do not charge while product is in contact with water, as electric shock may occur.
10. Unplug charging cable when not in use or during thunderstorms.

**FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

**RF Exposure Statement**  
To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna nr transmitter.

**One Year Warranty**

**This warranty covers the original consumer purchaser only and is not transferable.**

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

**What is Not Covered by Warranty**  
Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:  
Call 1-800-592-9541 or visit our website at [www.vivitar.com](http://www.vivitar.com).

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepared.

**For Consumers in Australia Only**  
Faulty product should be returned to point of sale, requiring proof of purchase for a refund or exchange.  
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.  
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For all Technical Support in Australia please dial 1-800-006-614



© 2023 Sakar International  
195 Carter Drive  
Edison, NJ 08817  
Support: 800 592 9541  
[www.vivitar.com](http://www.vivitar.com)