

 
#### **Specifications**

Bluetooth	Version 5.3
Battery	3.7V 1200mAh
Charge voltage	5V 800MA
Loudspeaker size	52MM, 4Ω , 10W(5W*2)
Passive Radiator	4080 *2SETS
Charging time	Around 2 hours
Playback time	2-5 hours
Working range	No less than 10M (free space)

# **Buttons on Sound Bar**



- M MODE CHANGING (Short Press)
- VOLUME DOWN (Long Press), or PREVIOUS SONG (Short Press)
- (Nort Press)
- VOLUME UP (Long Press), or NEXT SONG (Short Press)
- ANSWER / END THE CALL(Press Once), REDIAL (Press Twice)



- 1 AUXINSLOT
- 2 HDMI with ARC PORT FOR MUSIC PLAYING
- 3 TF CARD SLOT
- (4) CHARGING LED LIGHT(RED), or MODE INDICATION(BLUE)
- (5) DC IN SLOT FOR CHARGING
- 6 ON/OFF SWITCH

#### **Features**



in AUX mode: long press for Volume down;



# **Flashing indications**

Bluetooth mode:

Bluetooth waiting for pairing, Blue led fast flash

Bluetooth paired, Blue led constant, Slow Flash against BT playing music

TF card mode: Blue led slow flash Aux in mode: Blue led slow flash

HDMI FM mode: Blue led slow flash

FM Radio Mode: Scan channels: blue led fast flash; Playing channelsblue led constant: Red led constant, while charging, red led off while fully charged

## **Bluetooth Pairing**

Short Press " M " key to Bluetooth mode, blue LED will keep fast flashing

Follow the operating instruction of your Bluetooth device and allow it to search Bluetooth state, after a few seconds your mobile will discover the Bluetooth Soundbar under "SC-1423SB" Select this and your device will confirm this pairing. You can start play music through the Soundbar.

Enter password or PIN 0000 on our Bluetooth device (if necessary), and press "Yes" or "Confirm".

Important notice: If the connection is successful, blue LED keep constant, slow flash while playing music.

Bluetooth Hand-free: Work with the Bluetooth for wireless communication.

**TF card mode:** Insert the TF card (MICRO SD) to play music Built-in MICRO SD smart decoder, you can listen to music stored in TF card, Support MP3 / WMA format and MAX 32GB.

### **AUX mode:**

Insert one end of the 3.5MM audio cable into the speaker; plug the other end into any compatible device (Mobile phone/MP3,computer etc.) to play music.

## HDMI mode:

Insert the HDMI Cable to play music. PS: Make sure your HDMI output with ARC function

#### **FM Radio Mode**

Use your charging cable as a antenna cable and insert to the Soundbar, Press the mode button until you hear "FM mode". Then Long press 2-3 Seconds "Pause" button to scan and load all FM radio stations within range. Once it stops scanning, you can switch stations by pushing the Vol. up or down buttons. Long press the Vol. up or down button to change the volume, until the volume reaches the desired level.

### WARRANTY

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required. Please visit

https://www.supersonicinc.com/pages/warranty

# for additional information. Any Changes or modifications not expressly approved by the party responsible for compliance could v

FOR AGGINONAL INFORMATION.

TO AGGINONAL INFORMATION CONTROLLING THE PROPERTY PROPORTION IN THE PROPERTY PROPER

ult the dealer or an experienced radio/TV technician for help. uipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

posure Statement as been evaluated to meet general RF exposure requirement in portable exposur