



Play! Remote

Notices

Thank you for purchasing our product. This manual contains important precautions and product-related information. Please read the contents carefully before using to avoid accidents.

1. Do not place the product in high temperature, humid or dusty places.
2. Avoid dropping or hitting the product strongly and this product is not waterproof.
3. When the device is formatting or uploading/downloading, please do not interrupt the connection arbitrarily, otherwise it will cause program errors.
4. Do not disassemble the product by yourself, and do not wipe the body with alcohol, thinner or benzene products.
5. Our company reserves the right to improve products, product specifications and designs without prior notice.
6. Disclaimer : Our company is only responsible for the service and maintenance of the product itself. The company is not responsible for the loss of data and joint liability caused by the use of the product.
7. The illustrations in this manual are for reference only.

Warning

According to NCC LP0002 Low Power Radio Frequency Equipment Specification - Section 3.8.2:

The following text "Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to an approved low power radio-frequency device."

The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved.

The said legal communications means radio communications is operated in compliance with the Telecommunications Management Act.

The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices."

FCC

1.1 Part 15.21

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

1.2 Part 15.105

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

1.3 Part 15.19

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

- 1) this device may not cause harmful interference and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

1.4 FCC RF Radiation Exposure Statement:



1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. For portable operation, this device has been tested and meets FCC RF exposure guidelines. When used with an accessory that contains metal may not ensure compliance with FCC RF exposure guidelines.

CE CAUTION


Risk of explosion if battery is replaced by an incorrect type.

Functions

1. Keys

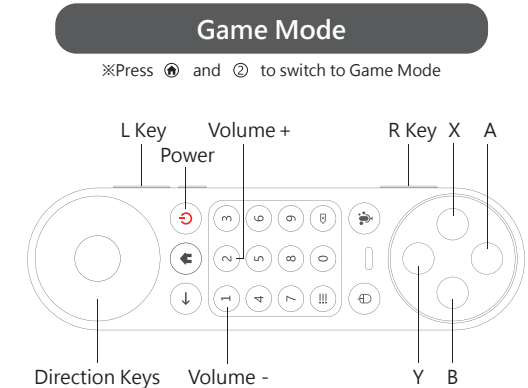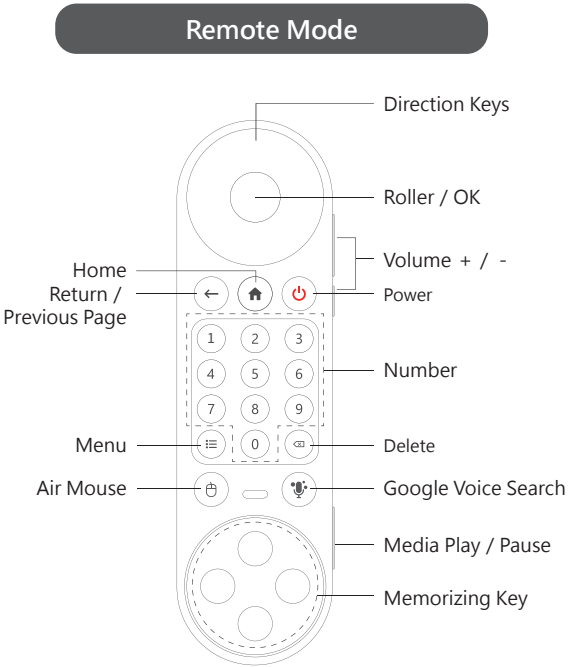

Remote Back & Receiver

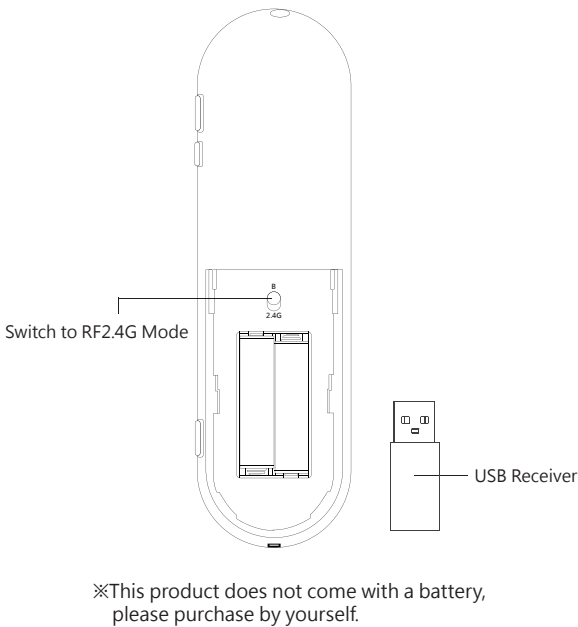

2. Instructions

- 1.Open the battery cover and put the battery in.
- 2.Connect the USB receiver to your smart TV or TV box.
- 3.Enjoy the convenience that Play! Remote brings you.

3. Switch to USB or B2.4G receiving mode

- 1.Open battery cover, adjust mode and toggle switch.
- 2.B2.4G mode indicator light is blue.
- 3.USB mode indicator light is green.

4. Switch to Normal Mode or Game Mode

- 1.Press and at the same time.
- 2.It takes about 3 seconds to switch between modes.

5. Instructions on Indicator Lights

- 1.When the receiver is not plugged into the USB port of the TV box, the remote control flashes after power on.
- 2.When the receiver is plugged into the USB port but cannot be connected to the remote control correctly, the indicator light flashes 2 times after the remote control is powered on.
- 3.When the receiver and the remote control are connected correctly and there is no operation, the indicator light is off.
- 4.When the receiver and the remote control are connected correctly and any key is pressed, the indicator light is on, and it flashes every time when you press it.

6. Memorizing Function

- 1.Press and hold the Memorizing Key for 5 seconds, the red light will become steady and it is in the receiving state.
- 2.Aim the Memorizing Key on the top of the remote control at a distance of about 1 to 3 cm, press the Memorizing Key for 2 seconds.
- 3.When the Memorizing is successful, the red light flashes quickly and then goes out, and exits the mode. When the Memorizing fails, the red light goes out directly and exits the mode automatically.

7. Re-pair the remote control with receiver or B2.4G

- 1.Press and hold the and at the same time. After the indicator light flashes at a high speed, the remote control is in the pairing state. After the receiver is plugged into the TV box, bring the remote close to the receiver and pairing shall be done automatically.
- 2.**Receiver pairing** : After the receiver is plugged into the TV box, bring the remote close to the receiver and pairing shall be done automatically.

TV (box) B2.4G pairing : Turn on the TV (box), enter the BT settings in the TV system and perform pairing between the remote control and the TV (box).

- 3.If the pairing is successful, the indicator light will be on for 3 seconds and then off; if the pairing fails, the pairing mode will exit after a timeout of 1 minute.
- 4.If the pairing times out, exit the pairing mode and repeat the above steps again.

8. Warranty Information

This product has a one-year warranty. Please contact the distributor, agent or retailer you purchased for the details.

Product Specifications

Brand	Opro9
Name	PlayRemote
Model	Remote control FHH128-01-001 Receiver FHH128-01-001D
Supported Systems	Android TV
Receiver	Mini USB2.0
RF Transmit Mode	RF 2.4GHz GFSK
Wireless Reception Range	Within 10 meters
Power supply	No. 4 (AAA) battery X2 (not included)
Dimensions and Weight	Remote Control + USB Receiver 96g±5g

tvSOGA Download Instructions

tvSOGA is an exclusive TV browser for smart TVs, video, live broadcast, finance, beauty and other network resources. Download and enjoy it now! Play! Remote and tvSOGA are the perfect match for your leisure time.

