

# ZeSplash<sup>2</sup>

## **ENGLISH**

CHARGING	06	HEART-RATE MONITOR	14
SET UP	07	FIND MY PHONE	15
CALLS	09	CAMERA REMOTE	15
CALL HISTORY/SMS	11	APPS	15
NOTIFICATIONS	12	MUSIC	16
VOICE CONTROL	13	SETTINGS	16
ACTIVITY	14	TECH SPECS	17

## **OVERVIEW**



## UPPER BUTTON

## BOTTOM BUTTON

#### RESET

Power ON / OFF
Hang Up
Return to the Watch Face

Confirm

Long press the two buttons simultaneously

#### NAVIGATE THE TOUCHSCREEN

Tap with one finger to open or select a menu item



Swipe right or left, up or down to navigate through the panels



Swipe down to return to the previous screen





If you want to change your ZeSplash? watch face, press firmly on the current watch face, swipe left or right to go through the different watch faces available and tap on the one you want to select and use

## 1. CHARGING



Charge ZeSplash<sup>2</sup> for two hours before your first use

- Put the charging cradle beneath the watch
   Make sure the pins on the cradle fit correctly
- onto the charging terminals on the back of ZeSplash²
- 3. Connect the charging cradle with the USB cable
- Plug the big end of the USB cable to a power source
  - A battery indicator will fill to indicate charging is in progress. Once ZeSplash<sup>2</sup> is charged, the battery indicator will be full



A full charge takes 1 hour. Unplug the cable after ZeSplash<sup>2</sup> is fully charged. When the battery level gets low, a low battery indicator will appear

#### 2. SFT UP

#### I PAIR VIA BLUETOOTH AND MOBILE APP

When using ZeSplash<sup>2</sup> for the first time, you must pair it to your phone via Bluetooth. Bluetooth is on by default. For this:

- I Enable Bluetooth on your mobile device
- Select ZeSplash<sup>2</sup> in the list of devices
- I Tap Pair to confirm the pairing
- A Bluetooth icon on ZeSplash<sup>2</sup> display will confirm successful pairing



You only need to pair your device once. After the initial pairing, ZeSplash² will automatically connect to your phone as long as it is turned on and within range. To pair ZeSplash² to another device, repeat the same steps

#### System Requirements

#### iOS 8+

iPhone 4s, 5, 5c, 5s, 6, 6s, 6s plus and newer,iPad (3<sup>rd</sup> , 4<sup>th</sup> and 5<sup>th</sup> generation) iPad Mini, iPod touch (5<sup>th</sup> generation)

#### SELECT ANDROID 4.3 +

ZeSplash² app is available for select Android 4.3 + devices that support Bluetooth 4.0

Visit www.mykronoz.com to get the latest compatibility list.

Search ZeSplash<sup>2</sup> App in the App store or Google Play Store, download and install the App on your mobile device









ZeSplash? will sync the notifications of SMS, emails, social media, calendar events, and personal life reminders once ZeSplash? App has been successfully installed on your smartphone. Please note some features will not work unless ZeSplash? App has been installed on your smartphone

### 3. CALLS

ZeSplash<sup>2</sup> allows you to make and receive calls.

# MAKING A CALL FROM THE PHONE MENU

Go to the Phone menu, enter a number with the dialer pad and tap

## MAKING A CALL FROM THE PHONEBOOK

Go the Phonebook panel, select a contact, and tap Call



## 4. CALL HISTORY

From the Call history menu, see the list of recent incoming and outgoing calls. Tap on the call to view the contact's name, phone number and make a call directly or send a SMS (Android only).

## 5. SMS

After a successful Bluetooth connection and installation of ZeSplash $^2$  App, you can read SMS messages on your ZeSplash $^2$ 

#### QUICK REPLY

You can reply using the SMS template (Android only)

## 6. NOTIFICATIONS

After successful Bluetooth connection and installation of ZeSplash² App on your smartphone, ZeSplash² will show notifications of SMS, emails, social media, calendar events and personal life reminders. On ZeSplash² App, tap Notifications tab to select the notifications you want to receive onto your watch. If you wish to disable certain notifications, swipe the selection button to the left.

#### SETTING UP NOTIFICATIONS FOR IOS USERS

Go to the Settings of your iOS device:

- Tap Notifications
- Select which type of notifications you wish to receive on ZeSplash<sup>2</sup>
- Enable Show in Notifications to receive the notification on ZeSplash<sup>2</sup>

You can also set up daily life reminders: open ZeSplash<sup>2</sup> mobile application, Click on the reminders tab, set up your preferred reminder type and time. ZeSplash<sup>2</sup> will gently vibrate and display the corresponding icon to alert you.

## 7. VOICE CONTROL

Use the Voice Control feature to voice command your mobile device remotely or search information from the Internet.

To start using the feature, tap the Voice Control icon to open the respective page on ZeSplash<sup>2</sup>.

Then tap the Voice Control again to turn the function on or off.

#### Examples of what you can ask or do:

Call (name of your contact)

Send a SMS to (name of your contact)

What's the weather like?

Set an alarm for tomorrow 5 am



This feature is available with iOS 8+ devices that support Siri and Select Android 4.3 + devices that support Google Now. To use voice control, your smartphone must have access to the Internet using either 3/46 or Wifi

## 8. ACTIVITY

Tap Activity icon to open the Activity menu.

 $\label{thm:seesaw} \blacksquare \text{Swipe left or right to see your results of steps, calories and active minutes}$ 

## HEART-RATE MONITOR

Heart-Rate menu allows you to monitor your heart-rate data, view your previous heart rate records to indicate your health status.

Tap Heart-Rate to enter the menu and press the screen to measure your heart-rate.

Swipe up to get a detailed graph of your daily performance

Make sure to wear ZeSplash $^2$  tightly onto your wrist and that its sensor lens is clean while monitoring heart rate to collect accurate data...

## 10. FIND MY PHONE

To enjoy this feature, make sure  $ZeSplash^2$  is connected to your smartphone via Bluetooth and mobile app. Enabling Find my phone function will make your phone ring and help you find it.

## 11. CAMERA REMOTE

To enjoy this feature, make sure the camera of your smartphone is on. Enabling Camera Remote function will let you take pictures remotely, from your ZeSplash².

## 12. APPS

Several applications can be found in this menu:

- Calendar Alarm Calculator
- Anti-Lost Alert Stopwatch Sound recorder

### 13. MUSIC

The music of your paired smartphone will be synchronized to  $ZeSplash^2$ . In the Music panel, play / pause the current song streamed on your phone, choose the previous or next song.

## 14. SETTINGS

Use the Settings panel to configure the settings of your ZeSplash <sup>2</sup>						
■ Bluetooth	Reset	■ Watch info				
■ Clock	Sound	Language				
Wake screen on wrist flick	Display	■ Power display				

16

## 15. TECH SPECS

Dimensions	62,5 x 39 x 13,5 mm
Weight	60 gr
Connectivity	Bluetooth 4.0
Battery type	Lithium-ion 350mAh
Talk time	3 hours
Standby time	3 days
Charging time	1 hour
Display	Capacitive touchscreen
Sensor	3-axis accelerometer
Operating temperature	-10°C to + 60°C
Water resistance	IP56
International warranty	1 year

# **ZeSplash²**

## FRANÇAIS

CHARGE	22	MONITEUR CARDIAQUE	30
INSTALLATION	23	TROUVER MON TÉLÉPHONE	31
APPELS	25	DÉCLENCHEUR PHOTO	31
HISTORIQUE D'APPELS / SMS	27	APPLICATIONS	31
NOTIFICATIONS	28	MUSIQUE	32
COMMANDE VOCALE	29	PARAMÈTRES	32
ACTIVITÉ	30	CARACTÉRISTIQUES TECHNIQUES	33

#### SAFETY INSTRUCTIONS

Before using the device, read these instructions carefully.

#### BATTERY

- ZeSplash<sup>2</sup> has built-in batteries. Do not disassemble the battery on your own. KRONOZ LLC is
  responsible for any damage or personnel injury caused by the removal of the battery or any component.
- Charge the battery in a cool, ventilated room. Excessive temperature during charging could cause heat, smoke, fir or deformation of the battery or even explosion. Avoid excessive temperatures. Do not expose batteries in the sun, excessive smoke or dust.
- Do not open, crush, bend, deform, puncture or shred secondary cells or batteries. In the event of a battery break or leak, prevent battery liquid contact with skin or eyes. If this happens, immediately flush the areas with water (do not rub the eye) or seek medical help.
- Do not short-circuit. Short-circuiting can occur when a metallic object, such as coins, causes direct connection
  of positive and negative terminals of the battery. Short-circuiting may damage the battery.
- Do not use batteries that have been damaged or have been exhausted.
- Keep the batteries out of children's reach and in a safe place to prevent danger.
- · Do not place the batteries in the water.

- Do not dispose of batteries in fire as they may cause explosion. Dispose of used batteries in accordance with your local regulations (such as recycling). Do not dispose as household waste.
- Use only the USB cable supplied to charge this battery. Do not charge for more than 24 hours.
- Do not attempt to repair or maintain the watch by yourself, service and maintenance should be performed by authorized technicians.

#### CAUTION

- This device has a recording function. Please be sure to comply with the relevant laws and regulations on the use of these features. In accordance with relevant regulations, without permission any personal characteristic sound recording being copied and disseminated may be seen as an invasion of privacy. Inappropriate use of photography, video and photo, video, audio recording function records could violate the copyright owner's rights. For this, the user must assume full responsibility. KRONOZ LLC is not responsible for any damage caused by improper use of the device.
- This device is not waterproof. Do not immerse the device in water or any other liquids.

## REGULATORY NOTICES

#### USA



#### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

#### CAUTIONS

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

#### ECC NOTICE

This equipment complies within the limits of a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against radio and TV interference in residential areas. However, even during normal operation, this equipment may cause TV or radio interference. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to ty one or more of the following corrective measures.

- Reposition the receiving antenna
- . Increase the distance between the equipment and receiver
- . Connect the equipment into an outlet on a circuit different from
- which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AA7D-ZESH2

#### CANADA

#### INDUSTRY CANADA (IC) STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le pré sent appareil est conforme aux CNR d' Industrie Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisé e aux deux conditions suivantes :(1) Γ appareil ne doit pas produire de brouillage; (2) Γ utilisateur de Γ appareil doit accepter tout brouillage radioé lectrique subi, mê me si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES-3 (B)/NMB-3(B)

IC: 12131A-7FSH2

#### FUROPEAN LINION

CE DIRECTIVE





Declaration of conformity with regard to the EU Directive 1999/5/EC.

Kronoz LLC hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC. The complete declaration of conformity is available on request via our customer service: support@mykronoz.com

Déclaration de conformité à l'égard de la directive européenne 1999/5/CE.

Kronoz LLC déclare que cet appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive R&TTE 1999/5/CE. La déclaration de conformité complète est disponible sur demande auprès de notre service client; support@mykronoz.com



#### DISPOSAL AND RECYCLING INFORMATION

After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies: Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilizing old devices, you are making an important contribution to protecting our environment.

©2015 Kronoz LLC, all rights reserved. Kronoz LLC, Avenue Louis-Casai 18 - 1209 Geneva - Switzerland All brands or product names are or may be trademarks of their respective owners.

Pictures and specifications are not contractual.Les marques citées sont des marques déposées par leur fabricant respectif. Photos et caractéristiques non contractuelles.



## www.mykronoz.com

© 2015 KRONOZ LLC. Tous droits réservés