


HRD1800F- RANGER

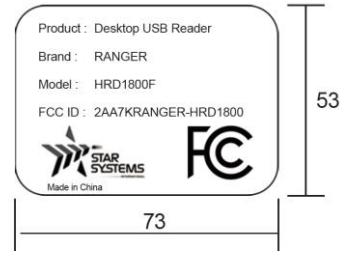

The label will be stuck in the bottom side of the reader and will be put in the middle of the unit