 
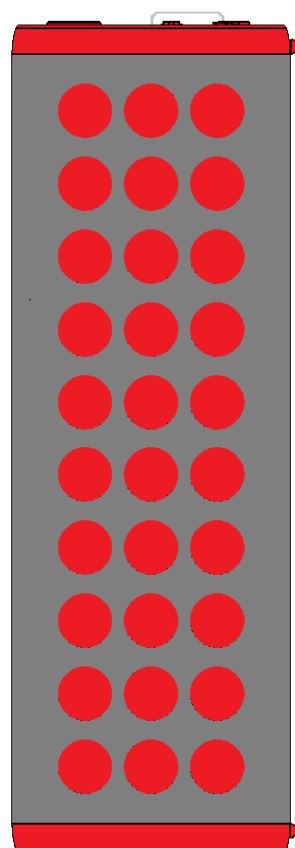 


# USER'S MANUAL

**Model : BTS29**

**Bluetooth Stereo Speaker  
With  
Aux Input  
Stereo Pairing**

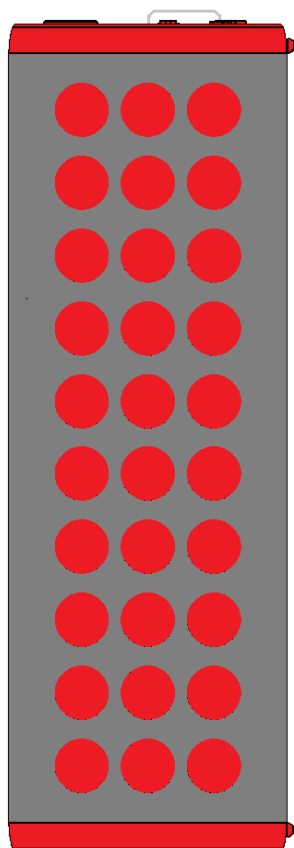

## A. Warning

### Don'ts

- Do not place naked flames, such as lighted candles on or near the product.
- Do not place objects filled with liquids, such as vases on or near the product.
- Do not use or store this product in a place where it is subject to direct sunlight, heat, excessive dust or vibration.
- Do not keep or store this product in wet conditions for long period.
- Do not clean this product with water or other liquids.
- Do not block or cover the slots and holes in the product.
- Do not push foreign objects into the slots or holes in the product.
- Do not attempt to open this product yourself. There are no user serviceable parts inside.
- Do not allow children access to plastic bags.

### Safety Instructions

Before using this product, read and follow all warnings and instructions.

- This product is not intended for use by young children. Young children should be properly supervised.
- This product is intended for household use only and not for commercial or industrial use.
- Do not expose to dripping or splashing.
- No naked flame sources, such as lighted candles, should be placed on the product.
- Ventilation should not be impeded by covering ventilation openings with items such as newspapers, table cloths, curtains and the like.
- Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.



#### Warning

- Never remove the casing of this apparatus.
- Never place this apparatus on the other electrical equipment.

### Notice

- If at any time in the future you should need to dispose of this product please note that: All batteries and accumulators need to be removed from this product (Removal of Waste Batteries and Accumulators).
- Always bring your product to a professional to remove the built-in battery.

 
## **FCC Warning Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## B. Outlook and Controls

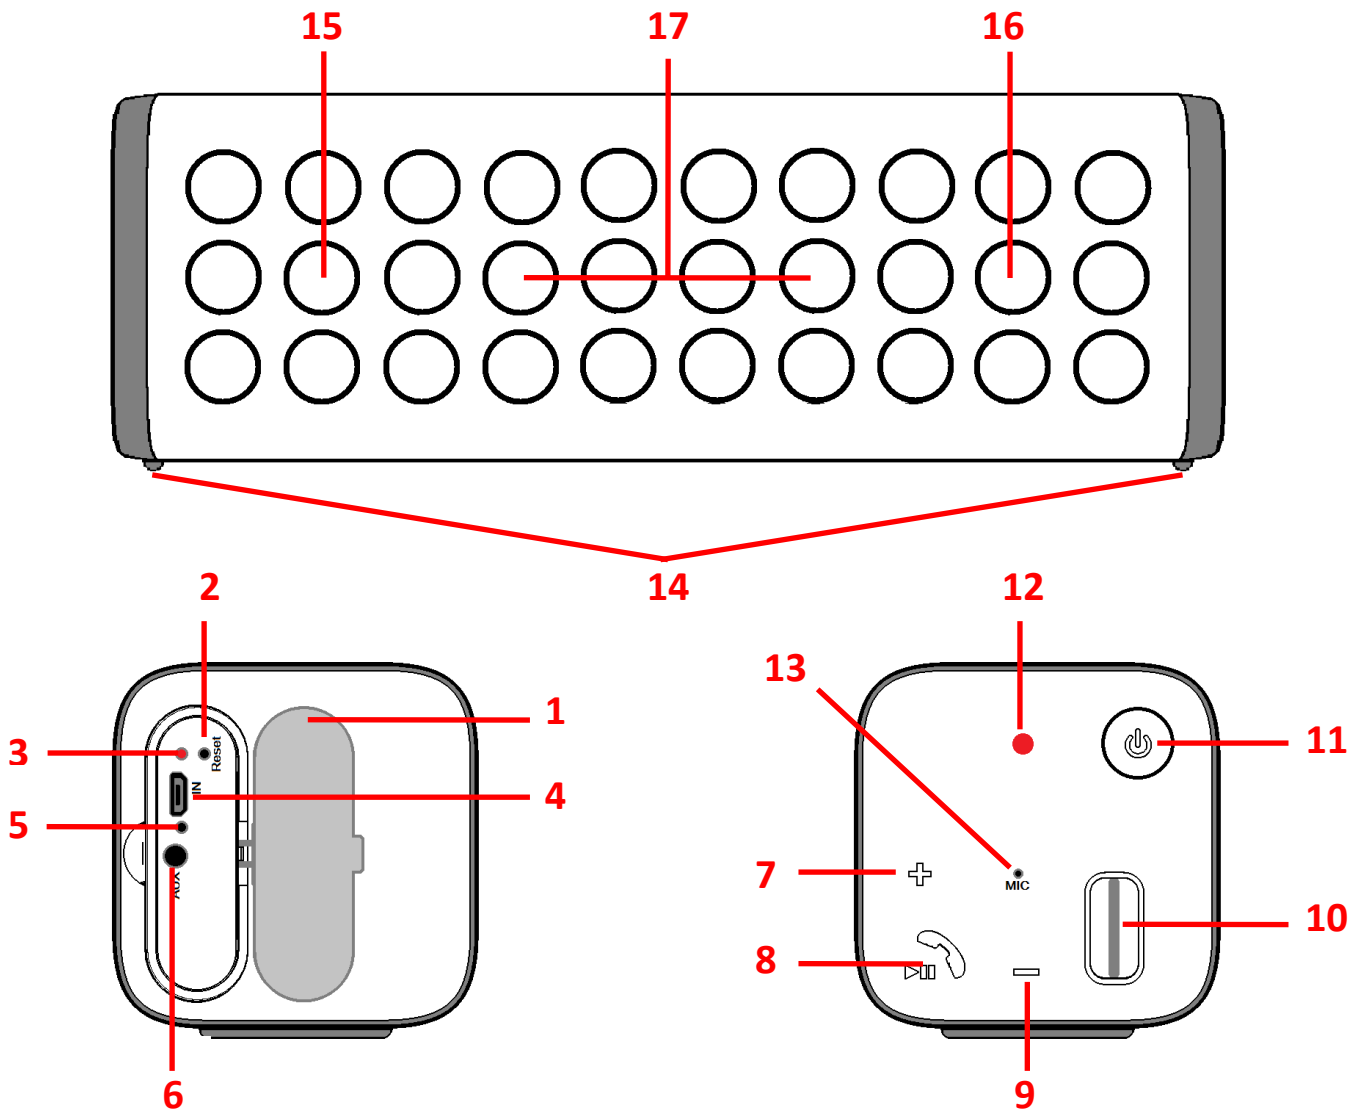

Item	Description
1	Rubber Seal Cover
2	Reset (for reset device)
3	Charge LED indicator (red)
4	Micro USB socket (DC Input)
5	AUX IN LED (red)
6	AUX IN Jack (3.5mm, Stereo)
7	+ Button (Volume up, Next track)
8	▶ Button (Play/Pause, Pick up/Hang up call/Last dialed)
9	- Button (Volume down, Previous track)
10	Lanyard Holder
11	⏻ Button (Power ON / OFF)
12	Bluetooth LED indicator (white)
13	MIC Hole (for hand-free)
14	Foot
15	Left Speaker
16	Right Speaker
17	Bass Radiator

## C. About the rechargeable Battery & Charging

This Bluetooth Speaker has an internal, non–user-replaceable battery. For best results, the first time you use this Bluetooth Speaker, let it charge for about 4 ~ 5 hours or until the “**Charge LED (3)**” light to off from On which show you the battery is fully charged.

For maintain the battery life and performance, if speaker isn’t used for a while, the battery might need to be recharged. Charge the battery at least once every month.

### To recharge the rechargeable battery:

1. Connect the Bluetooth Speaker’s “**Micro USB socket (4)**” with the computer’s USB port through USB cable (supplied).
2. The “**Charge LED (3)**” light will turn On in red, the battery is in charging.
3. The “**Charge LED (3)**” light will turn Off when the rechargeable battery is fully charged.
4. Disconnect the USB cable when it is done.

## D. Power ON and Pairing

1. Press and hold the “**⏻ (11)**” button to turn ON the device, a series of tones will sound and the “**Bluetooth LED (12)**” will light and then fast blinking in seconds. The device is in pairing mode.
2. Then, activate the Bluetooth function in your Bluetooth device (such as Mobile Phone or Personal Computer); the device will enter to Bluetooth searching mode automatically, if not, tap the related selection to manually enter to searching mode. (refer to your device’s manual when necessary)
3. Your Bluetooth device should show “**Denali S1002**” in list, and then select it for pairing. Waiting for some seconds and you will see connected message as shown on your mobile device. (For some Bluetooth devices, you may need to input “**0000**” as pairing password)
4. If pairing is successful, a series of tones will sound and the “**Bluetooth LED (12)**” light will switch to slow blinking light from fast.
5. Now, you can start to music play from the mobile device by its music player program.
6. Press and hold the “**⏻ (11)**” button to turn OFF the device when it not in use.

**Note:** for saving battery energy, the Bluetooth Speaker will turn to Off mode automatically when no device is in paired in 8 minutes. Turn On the device by Press and hold “**⏻ (11)**” button to turn On the device if you want.

## E. Disconnect from paired device

1. To disconnect with paired device, for better result turn Off the

- Bluetooth Speaker directly.
- 2. Or, you can choose **“Disconnect”** from Bluetooth paired device list on your mobile device;
- 3. In this case, the Bluetooth Speaker will turn back into **“Searching / Pairing”** mode in seconds, a series of tones will sound and the **“Bluetooth LED (12)”** light will turn back to fast blinking from slow.
- 4. Now, you can process for new mobile device pair or power Off the Bluetooth Speaker if you wanted.

#### **F. Auto re-connect with paired device and New pairing**

- 1. Every time you turn On the Bluetooth Speaker’s power; it will firstly searching for the mobile device, which has been paired previously and still in record. The Bluetooth Speaker will re-connect this mobile device as priority if it in Bluetooth searching device mode and in connection range.
- 2. If no device found in some seconds, then the Bluetooth Speaker will automatically turn into pairing mode.
- 3. Now you can process for new mobile device pair. (refer to item D.2~D.5 methods)

#### **G. Switch to new pairing from connected mode**

- 1. In Bluetooth connected mode, you can switch the Bluetooth Speaker into Bluetooth searching mode for paring with the new device at any time you desired;
- 2. Press and hold the **“⏏ (8)”** button until a series of tones sound and the **“Bluetooth LED (12)”** will turn back to fast blinking light.
- 3. Now you can process for new mobile device pair. (refer to item D.2~D.5 methods)

#### **H. Bluetooth Music Playing Controls Function**

##### **a. On your Mobile Device:**

- 1. Switch to music player menu and choose a music to start the play from playlist or by using **“⏮ / ⏭”** button/icon. Play/Pause the playing music by using **“▶ / ⏸”** button/icon.
- 2. To adjust the volume level by using the device’s volume control **“Down / Up”** button/icon on your Bluetooth device. (refer to your mobile device user’s manual when necessary)

##### **b. On Bluetooth Speaker:**

- 1. In playing music, press **“⏏ (8)”** button to pause the playing music. Press it again to resume.
- 2. Press and hold the **“+ (7)”** button to increases the volume level.
- 3. Press and hold the **“- (9)”** button to decreases the volume level.
- 4. When maximum or minimum volume is reached, a beep sound will

be heard.

5. Press the “+ (7)” button to go to next music.
6. Press the “- (9)” button to go to previous music.

## I. Hand Free Function

1. When there is an incoming call during Bluetooth music playing mode;
2. The ringing sound will up and the playing music will pause automatically.
3. Press “☎ (8)” button to pick up the call.
4. Now you have hand free function with the Bluetooth speaker.
5. Press “☎ (8)” again to hang up the call when finished. And the paused music will resume automatically.
6. Press and hold “☎ (8)” button for 3 seconds to ignore the incoming call.

*Tip: speak to the “MIC (13)” direct with distance in 30 ~ 60cm to get the best speakerphone performance when necessary.*


## J. Redial For Last Call Function

1. To redial for last called number by the Bluetooth Speaker, even it is in music playing mode.
2. Press twice the “☎ (8)” button to enter into redial function, the playing will pause and switch to hand free function for redial.
3. Press the “☎ (8)” Button again to hang up the redial call.
4. Make sure that your mobile phone has have last dial call used, if not, the redial for last call function cannot be activated.

## K. AUX IN Function



1. In power ON mode, connect the Bluetooth Speaker’s “AUX IN jack (6)” jack with an external device “Earphone / AUX / LINE” Output through the Audio cable (Supplied).
2. The Bluetooth Speaker will switch to “AUX IN” mode automatically and the “AUX IN LED (5)” indicator will turn ON in light red.
3. At the same time, if mobile device is still in connecting mode and with music playing, the Bluetooth’s playing music is cut off and “Bluetooth LED (12)” is light Off automatically. Controls your external device for music play function.
4. You also can use Bluetooth Speaker control;
5. Press and hold the “+ (9)” button to increases the volume level.
6. Press and hold the “- (8)” button to decreases the volume level.
7. When maximum or minimum volume is reached, a series of tones will sound.
8. Disconnect the Audio cable when it is done.

## L. Low Power Reminder And Auto Sleep

1. The Bluetooth Speaker will send tones sound out from speaker in every some minutes. When you heard this reminder, please connect the device to the USB power for charging, if you still want to use the device.
2. If not, the Bluetooth Speaker will power OFF itself automatically when the battery is keeping low energy level in some minutes.
3. In this case, the device cannot be turned ON, until you recharging the battery at least 10 ~ 15 minutes, because the rechargeable battery has not enough energy.
4. Press and hold the “ (11)” button to turn On the device after charged with enough energy if you want.

## M. Connecting two speakers and a BLUETOOTH device for the Stereo pairing function

### Activate the stereo pairing function:

1. Bring two speakers within 1 m of each other, and then turn on each unit.
2. Press and hold the “ and +” buttons at the same time until tones are heard on one unit, the “**Bluetooth LED (12)**” will fast blinking and waiting for stereo pair connection. (*This unit will default as host and left channel device*)
3. And press and hold the “ and —” buttons at the same until tones are heard on the other unit, the “**Bluetooth LED (12)**” will fast blinking and searching for stereo pair host unit. (*This unit will default as slave and right channel device*)
4. Two devices are under stereo pairing, a series of tones should sound from both devices in seconds;
5. And, the right device’s “**Bluetooth LED (12)**” should switch to slow blinking and this device could not found by the mobile device since it already paired with slave device of Bluetooth speaker.
6. And, the Left device’s “**Bluetooth LED (12)**” should switch to fast blinking for waiting Bluetooth pairing with mobile device.
7. Then activate the Bluetooth function in your mobile device, open and enter to Bluetooth searching mode, the mobile device should show one of “**Denali S1002**” instead of two in list, choose it for start the stereo pairing function.
8. This stereo pairing procedure is not required once stereo pairing function is activated with both speakers; two speakers will stereo pairing automatically when each time you turn on them together. Besides, you can disable the stereo pairing function by using the following methods.



**Disable the stereo pairing function on two speakers:**

1. In speakers power on mode, short press the “⏻ (11) and 🔊 (8)” buttons at the same time on one unit, tones are heard and stereo pair data are erased on this unit.
2. And then, short press the “⏻ (11) and 🔊 (8)” buttons at the same time on the other unit, tones are heard and stereo pair data are erased on this unit too.
3. And now, two speakers can be found and pairing by the mobile device at the same time.
4. Does the above mentioned methods of stereo pairing function on two speakers if you want to activate this function again.
5. Active again the stereo pairing functions on two speakers at any time you want them to.

**N. Reset the device**

In some circumstances the device’s function may hanging and need to reset. To reset the Bluetooth speaker;

1. Use a 0.8~1mm stick or similar object (like tooth stick), use dull side and carefully insert it into the “Reset Hole (2)” until you feel to hit the end. Actually that is the tact switch button surface;
2. Then add a bit of force and you will get a click sound and feeling return from switch. The device is reset and restart in seconds.
3. Press and hold the “⏻ (11)” button to turn ON and restart the device after reset is done.

**O. Trouble Shooting**

Can’t turn ON	<ul style="list-style-type: none"> <li>• Check battery is it charged with enough energy.</li> <li>• Check whether the device is in power OFF mode.</li> </ul>
No sound	<ul style="list-style-type: none"> <li>• Check whether volume level is in lower position on your Bluetooth speaker and mobile device or PC/Mac.</li> <li>• Make sure that your Bluetooth device is within the effective operation range.</li> <li>• Check whether the Bluetooth device is paired.</li> <li>• Check whether the Bluetooth device show connected.</li> <li>• Check if you have selected the correct audio source.</li> </ul>
No response from speaker	<ul style="list-style-type: none"> <li>• Reset the speaker by press the built in reset switch.</li> </ul>

<b>P. Specification</b>		
Unit Dimension	207.5 mm (L) x 68.5 mm (D) x 70.5 mm (H)	
Unit Weight	700g (Approximate) per unit	
Bluetooth	Specification	V2.1 + EDR
	Supported Profile	A2DP, AVRCP, HSP
	Connection Distance	In 10 meters (open area)
Built-In Battery	Lithium 3.7V 1500mAh	
	Playing Time: 3.5 ~ 4.5 Hours (at 75 ~ 80 % of volume setting)	
Power Source Input	Micro USB Port	
	PC's USB port Power or DC 5V, 500mA	
Audio	Output Power	3W (RMS) x 2 per unit (at 4 Ohm)
	Frequency Responses	20Hz to 20,000Hz
I/O	Audio In Link	800mV RMS, 10K Ohm
Operating Temperature	0 to 40°C	

## **Q. Disclaimer**

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description made in this manual.

## **R. Recycling**



This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).