

TYPO


keyboards

for iPhone 5/5S

typokeyboards.com

QUICK START

1. Go to iPhone Settings and turn on Bluetooth
2. Hold down  until it flashes blue
3. Select **TYPO Keyboard**

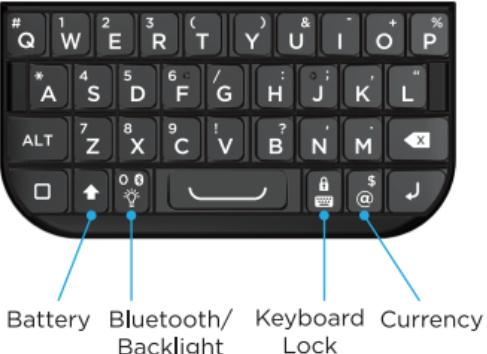

FEATURES

- aA** To capitalize a letter Hold the key until it appears
- ALT** To type an alternate character, press **ALT + key**
- To insert a period press **SPACEBAR** twice
- 🔋** **CHECK BATTERY LEVEL:** Hold  and red light will flash
3 red flashes **FULL**, 2 flashes **HALF**, 1 flash **LOW**

1

Battery: See "Battery Indicator" section on page 1.

Bluetooth: See "Bluetooth Pairing" section on page 3.

To Lock Your Typo Keyboard: To prevent unwanted keyboard input, you can lock the Typo keyboard by double tapping keyboard lock key (). Spacebar will flash blue once indicating keyboard is locked. Pressing any key while keyboard is locked will flash red on the spacebar and not work.

To unlock keyboard, double tap keyboard key () again. It will flash **blue** twice indicating the keyboard is now unlocked and ready to use.

Currency: To toggle between currencies hold down the **ALT + currency** () key and it will change between dollars, euros, pounds, and yen.

*Please note whatever currency you leave it on will remain in place until changed

2

Initial Pairing: You should only have to pair your typo to your phone once at set up. Initial pairing is very simple and once its done, your Typo will know your iPhone and your iPhone will know your Typo.

1. On your iPhone go to **Settings** → **Bluetooth** and make sure Bluetooth is turned on and discoverable

2. On your Typo, hold down the **Bluetooth Key** (see page 1) until you see a **FLASHING blue** light. *Note if the light is **solid blue** keep holding it until its **FLASHING**.

3. On your iPhone you will now see "Typo Keyboard" under discoverable devices in **Bluetooth**. Click on it and its status will change from "Not paired" to "Connected".

4. Start enjoying Typo!

Re-Connect Typo: If you have turned off Typo or lost your Bluetooth connection.

1. First check to see if Typo is disconnected from iPhone by going to **Settings** → **Bluetooth** and checking to see that "Typo Keyboard" is still listed in the devices and shows status "Not Connected". *Note: If its not listed at all return to Initial Pairing Instructions above.

3

2. If Typo Keyboard is listed in Bluetooth Devices with status "Not Connected", then hold down the Bluetooth Key (see page 1) until you see a **SOLID blue** light. *Note: If it's **flashing blue**, it will not re-connect, continue to hold down the Bluetooth key until its **SOLID blue**, it will then reconnect and will return to status "Connected" on your iPhone.

If you are unable to Re-Connect

If, for some reason, you are unable to Re-Connect using the instructions above, then you can un-pair your Typo from your iPhone by going to Settings → Bluetooth locate the "Typo Keyboard" in the discoverable devices, click the small (i) and click forget device. Then return to pairing instruction above to begin again.

Battery Indicator

To see current charge level of your Typo simply hold down the shift key for 2 seconds and you will see a **flashing red** light on the keyboard.

3 **red** flashes battery full

2 **red** flashes battery half

1 **red** flash battery low

* Note: Typo will also give you a warning when its dropped below 20% battery life by **flashing red** on your spacebar every 5 minutes.

When plugged in for charging, Typo will indicate if its charging by showing a solid **green** light. Make sure you keep Typo plugged in until the **green** light goes out, indicating charging is complete.

For additional help and troubleshooting videos, go to typokeyboards.com/help

For detailed warranty, return and exchange information, go to typokeyboards.com/warranty

FCCID: 2AA83-TK1002

All devices:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Part 15B compliance statement:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.