





3 Basic Gestures


The touchpad allows for interaction with the Vuzix Blade. Taps and swipes are the primary gestures.

- Tap** (one-finger)
- turn on display
 - wake up if in sleep mode
 - select an item (app, item or feature)
 - perform action

- Swipe** (one-finger)
- navigate apps
 - navigate actions
 - navigate photos / videos

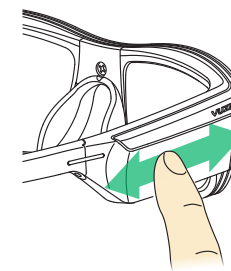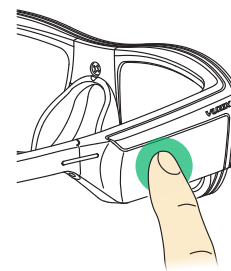


What's In The Box

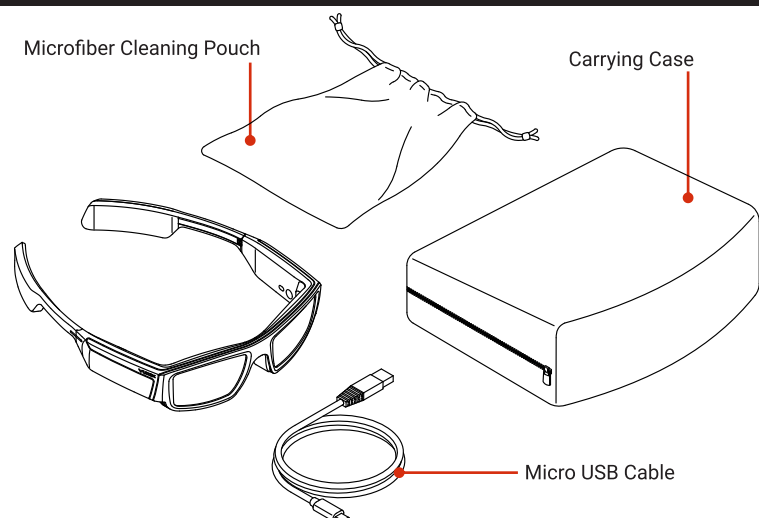


4 Advanced Gestures


- Two-Finger Tap**
- move backward
 - close action bar
 - close apps

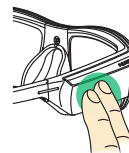


- Two-Finger Hold One Second**
- return to home

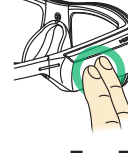


- One-Finger Hold One Second**
- open menu

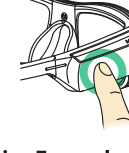


- One-Finger Swipe Up / Down**
- navigate vertical lists

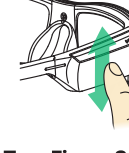


- Two-Finger Swipe Up / Down**
- increase or decrease volume

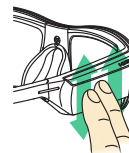


- Two-Finger Swipe Forward**
- delete action
 - clear current notification
 - delete photo or video
 - add space (keyboard)

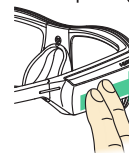

- Two-Finger Swipe Backward**
- backspace (keyboard)
 - available gesture definable within app

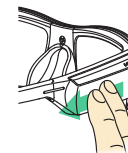


Vuzix Blade® Overview

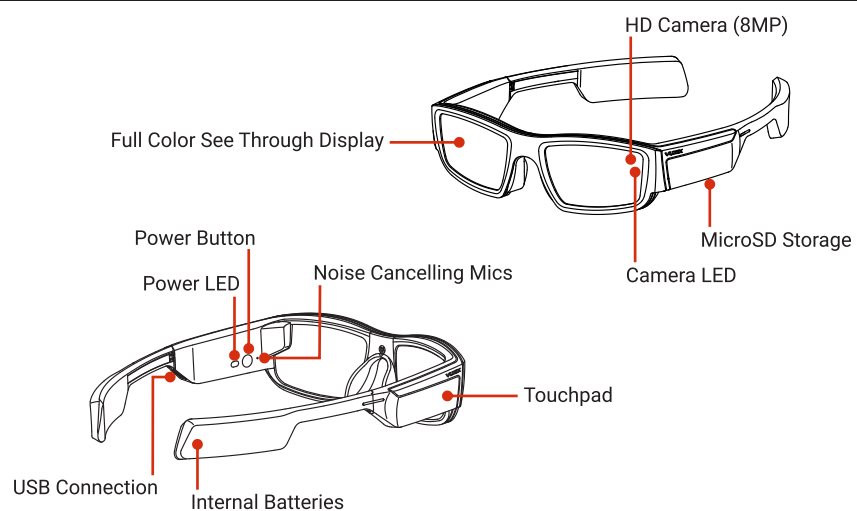

5 BladeOS


A list of apps is displayed horizontally allowing users to view different product features. One app is displayed at a time. Swipe the touchpad forward or backward to navigate through the app list.

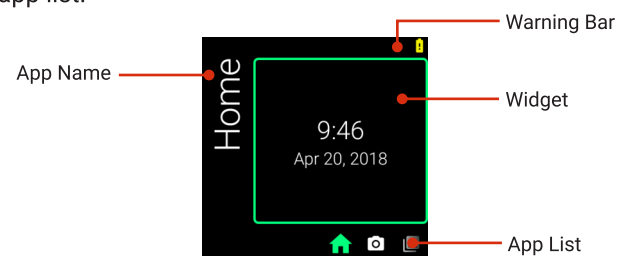

i BladeOS has a built-in keyboard for character entry when needed. For in-depth information on this and other BladeOS features, refer to the online User's Manual at www.vuzix.com/support/blade-smart-glasses

1 Charging

Your Blade is shipped with a partial charge. It is recommended that the battery be fully charged for first time use.

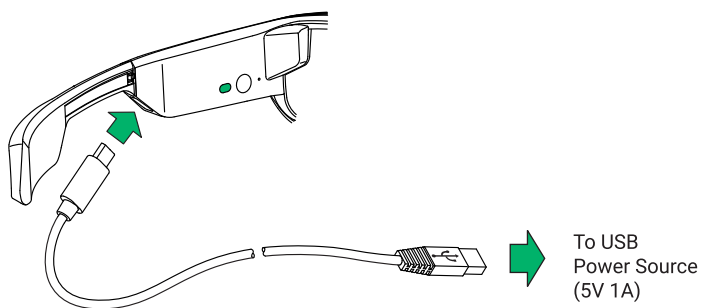

6 Keeping Vuzix Blade Clean and Safe

Treat your Blade as you would any quality eyewear. It is mostly maintenance free and requires only to be wiped down periodically.

Use only the included microfiber pouch or equivalent microfiber cloth.

CAUTION: Do not spray with cleaners. If required, use a microfiber cloth moistened with standard eyeglass cleaner. Avoid drips or spills. Solvents, cleaners and paper towels should never be used on your Blade.




CAUTION: Do not pack loose objects in the zipper case with the Blade. Loose objects may rattle and cause damage.

CAUTION: Vuzix Blade is not water resistant. Avoid submerging and exposure to moisture. Excessive moisture will damage the Blade.

2 Turning On and Off

- Power On**
- ensure Blade has enough power
 - press and hold the power button for three seconds

- Power Off**
- press and hold the power button for three seconds
 - select **Power Off** from the menu (one-finger tap on touchpad)

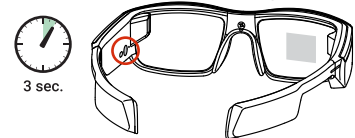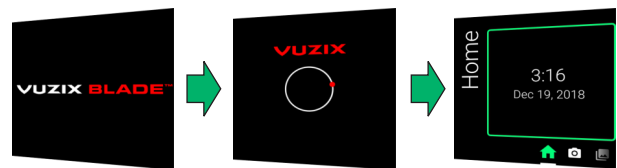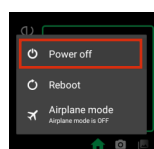

i When starting your Blade for the first time, initial boot can take several seconds.

7 Learning More

Please register your Vuzix Blade AR Smart Glasses in the Developer Center at www.vuzix.com/developers. As a developer, registration gives you access to Vuzix's suite of developer tools including: product documentation, sample code, and more.

Visit www.vuzix.com/support/blade-smart-glasses to reference the comprehensive online User's Manual.

Visit www.vuzix.com/contact for technical support and other Vuzix contacts.

For safety, warranty and regulatory information, go to the Vuzix legal page at www.vuzix.com/legal.

Additional information on the Vuzix Blade AR Smart Glasses is available at vuzix.com | vuzix.eu | vuzix.jp

© Vuzix 2018. This quick start guide is subject to change. Before using this product please read the online Safety Instructions at www.vuzix.com/legal. All trademarks belong to the respective owners.

447PB0002 (0001)-QUICK START GUIDE, BLADE, US