

HAUNTED
LIVING™

ITEM #5267929
MODEL #60476

BLUETOOTH REAPER
WITH DRUMS



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 888-251-1006 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at partsplus@lowes.com.

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

- Battery installation and removal should be performed by an adult.
- Contains (4) AA 1.5 volt alkaline batteries. Batteries are not rechargeable.
- Batteries are harmful if swallowed. Keep away from young children.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

WARNING

- **Warning Risk of injury to persons. Read and understand instruction manual before use.**
- Warning: CHOKING HAZARD! Small parts. This item is not a toy. For decoration only.
- Do not turn item on until you have completely finished assembly.
- Stay clear of item while operating.
- Do not place item on uneven ground.
- Do not place weight on item while in operation.

PREPARATION


ADULT ASSEMBLY REQUIRED

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

No tools required for assembly.

Estimated Assembly Time: 8 minutes


PACKAGE CONTENTS

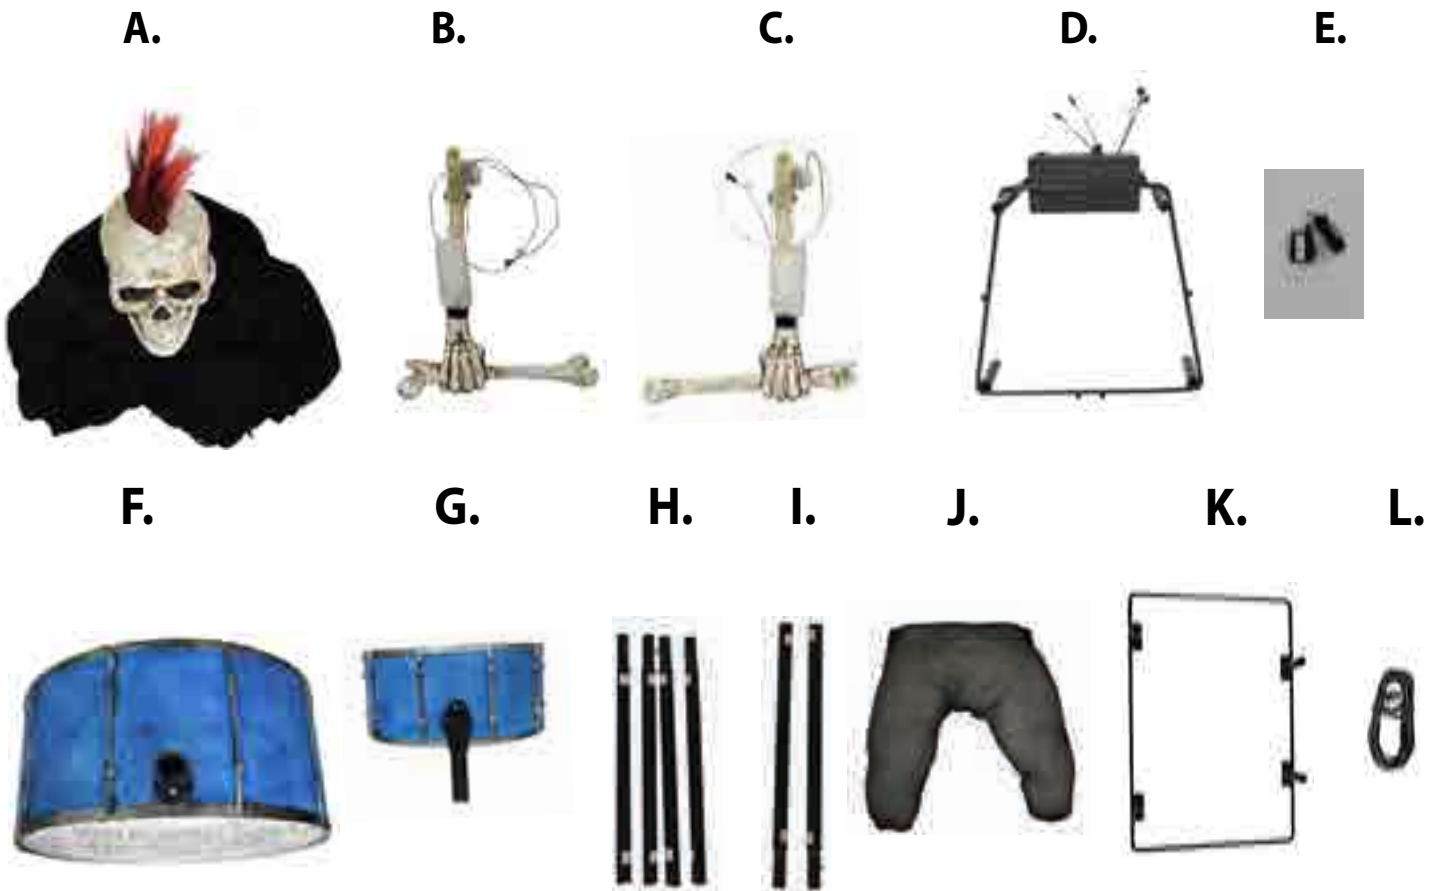


PART	DESCRIPTION	QUANTITY
A	Body and Head	1
B	Right Arm	1
C	Left Arm	1
D	Waist and Control Box	1
E	6V 2A Adapter	1
F	Lower Drum	1
G	Upper Drum	1
H	Lower poles	4
I	Upper poles	2
J	Fabric legs and frame	1
K	Metal Stand	1
L	Input Output wire	1

ASSEMBLY INSTRUCTIONS


1. Insert and snap lock 4 lower poles into the base.
(Match A to A)

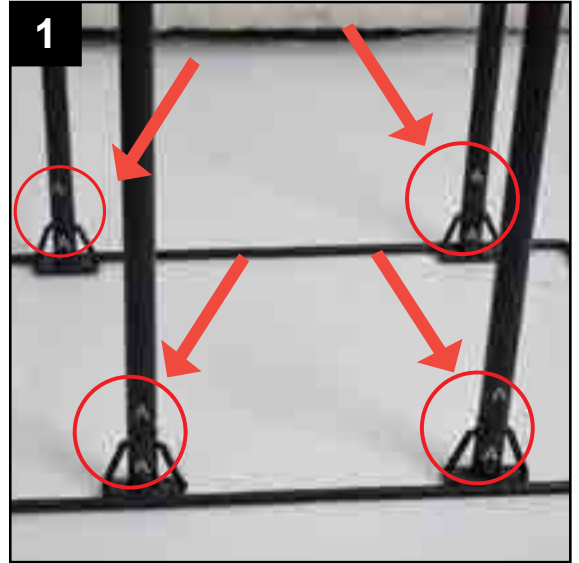

2. Insert and snap lock the waist and control box to the lower poles. (Match B to B)

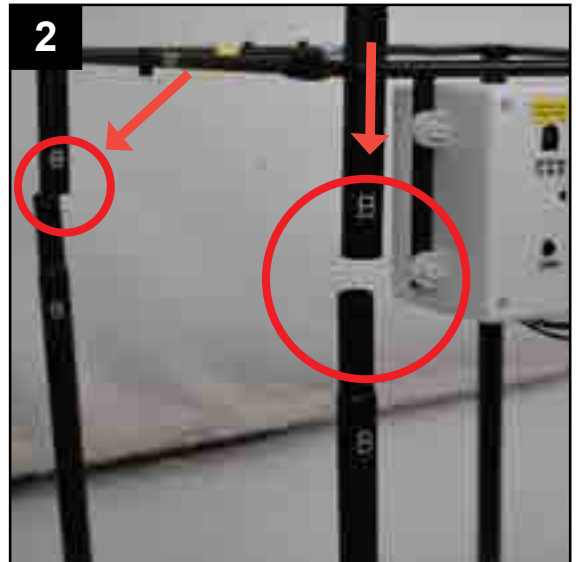

3. Insert and snap lock the two upper poles to both sides of the waist and control box. (Match C to C)

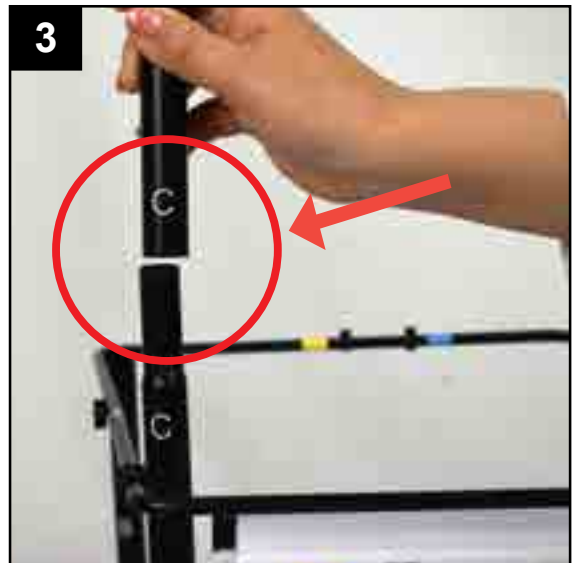


ASSEMBLY INSTRUCTIONS


4. Insert the fabric legs and frame into the waist and control box. Match, blue to blue, yellow to yellow. - PROCEED to 4A



- 4A. Match red to red and green to green.

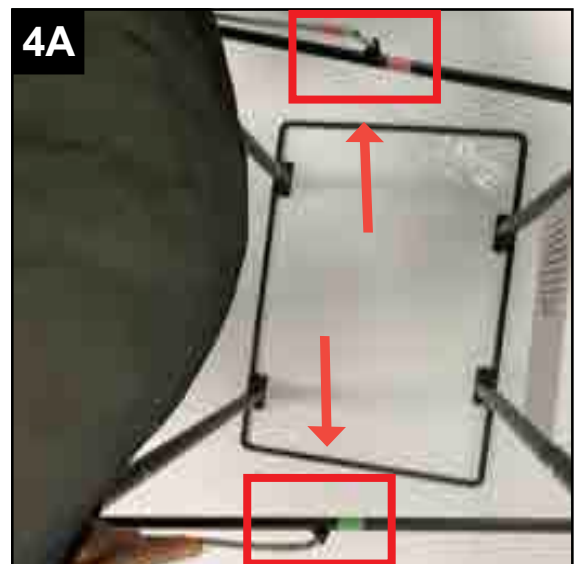


5. Lift the fabric and connect the body and head to the upper poles. (Match D to D)

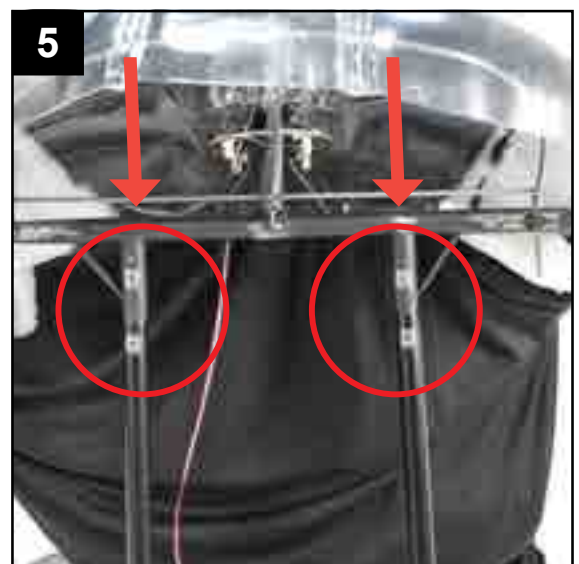


ASSEMBLY INSTRUCTIONS


6. Insert and snap lock the left arm to the body and head.
(Match E to E)

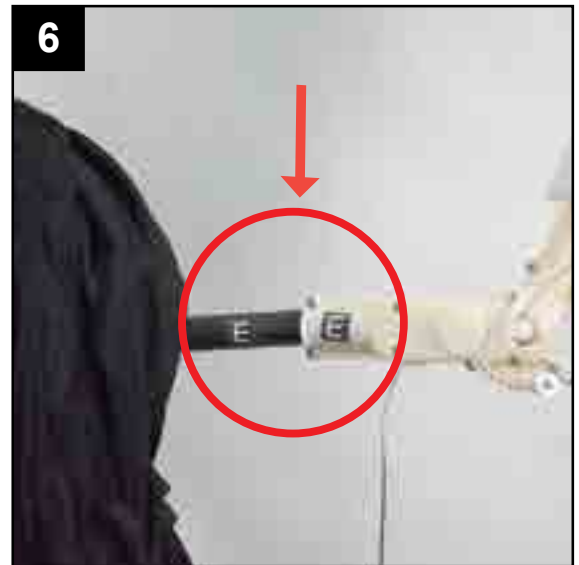

7. Insert and snap lock the right arm to the body and head.
(Match F to F)

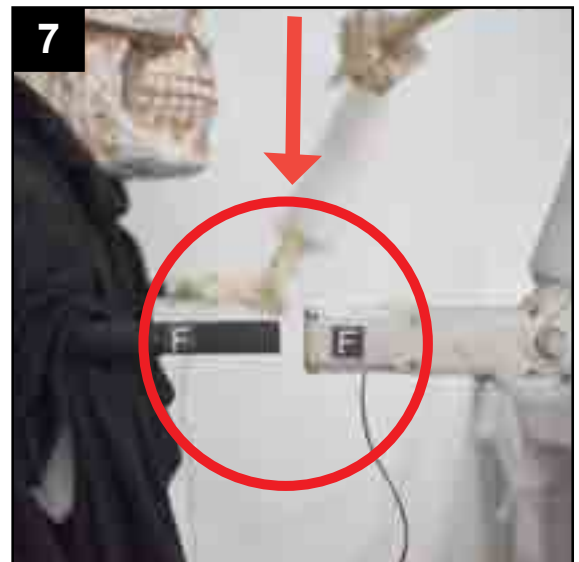


8. Connect the wire from the control box to the LED eye wires from the body and head. (Connect G to G)

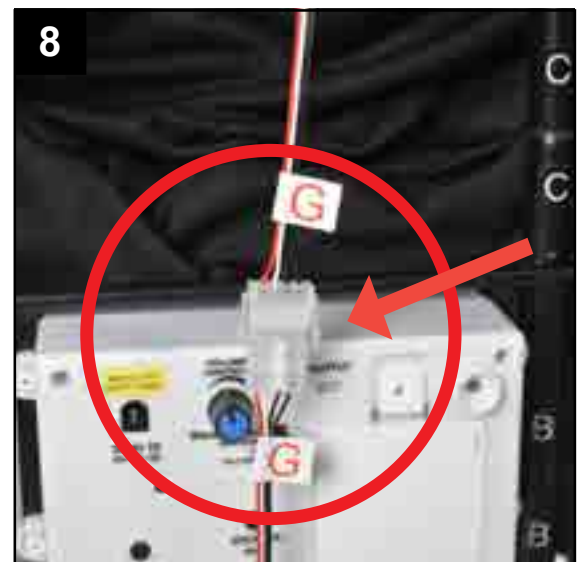


ASSEMBLY INSTRUCTIONS

9. Connect the wire from the control box to the wire located on the left arm. (Connect H to H)

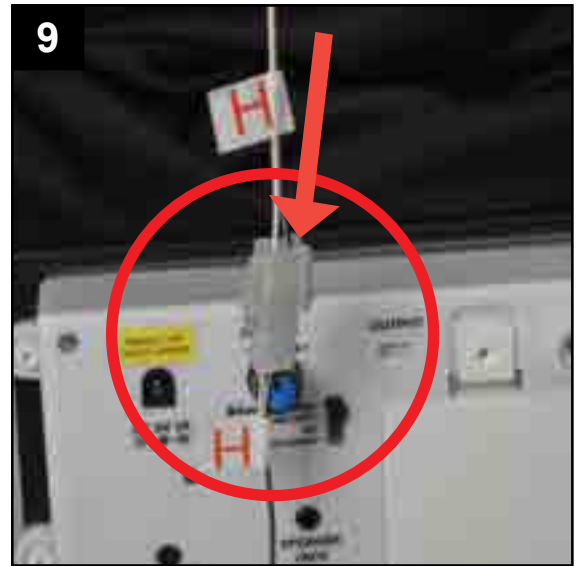

10. Connect the wire from the control box to the wire located on the right arm. (Connect I to I)

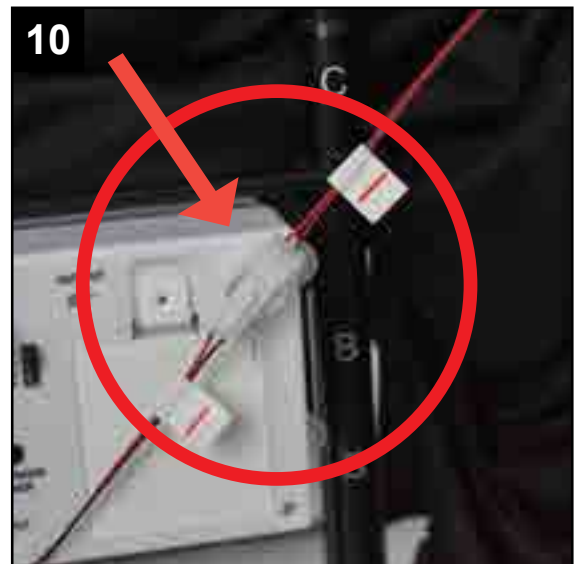


11. Insert the upper drum into the lower drum.
Adjust the height on the upper drum by twisting the knob located on the lower drum.
Turn the knob left to loosen and right to tighten once the upper drum is at desired height.




ASSEMBLY INSTRUCTIONS

12. Connect the wire from the control box to the wire located on the lower drum. (Connect J to J)

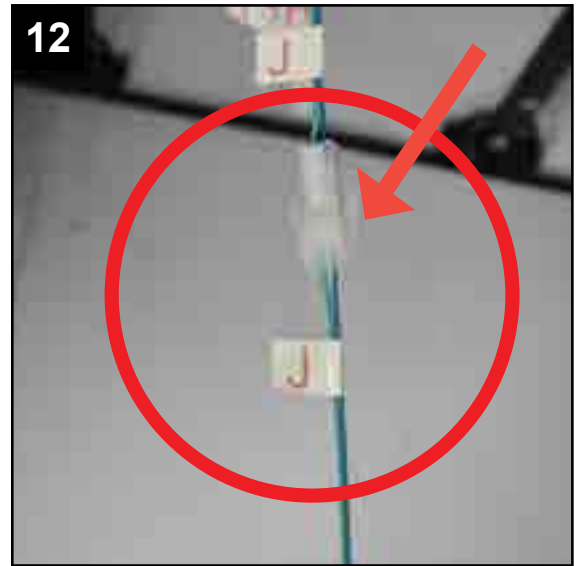

13. Connect the wire from the upper drum to the lower drum. (Connect K to K)

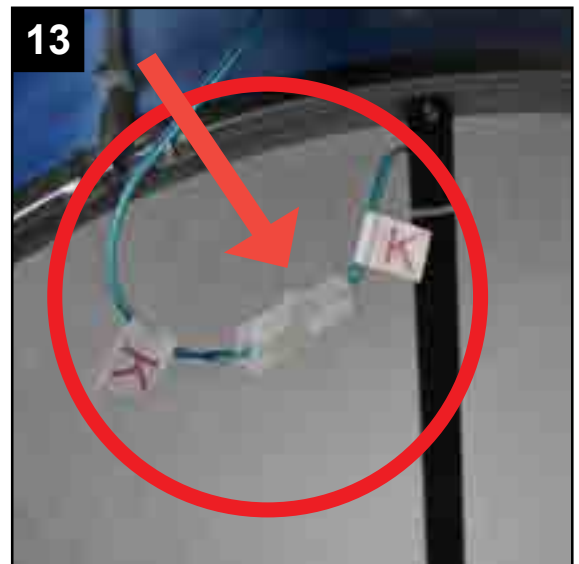


14. Secure the hook and loop fasteners located on the wrists of both right and left arms.



ASSEMBLY INSTRUCTIONS

15. Replace and insert 4 fresh AA batteries into the battery compartment or insert the 6V2A adapter (included) into the adapter jack located on the control box.

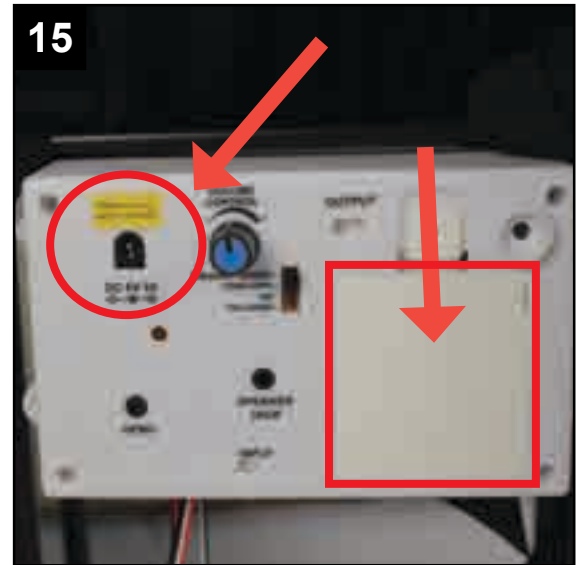

OPERATING/BLUETOOTH PAIRING INSTRUCTIONS

ON SWITCH POSITION

Move the switch to the ON position located on the control box.

Move in front of the item or make a loud sound (clap) to activate the item. This mode will play the Reaper Band song and also send a signal to a follower device/additional band member (Guitarist) when wired together on the control box. (Guitarist sold separately)

Turn item to DEMO/OFF position when not in use.



BLUETOOTH® LEADER SWITCH POSITION

Move the switch to the BLUETOOTH® LEADER position on the control box to play your own music/playlist. Locate the name REAPER BAND on your phone/device and pair.

When your music is playing the item will automatically activate.

**FOLLOWER SWITCH ONLY USED WITH ADDITIONAL ITEM.
FORGET/UNPAIR YOUR DEVICE TO CONNECT TO A NEW DEVICE.**



LEADER SWITCH POSITION



FOLLOWER SWITCH POSITION

OPTIONAL MULTIPLE ITEM BAND SETUP

1. Insert the INPUT/OUTPUT WIRE into the OUTPUT jack.
2. Move the switch into the BLUETOOTH® LEADER position.
3. Insert the INPUT/OUTPUT WIRE into the INPUT jack on the second band member.
4. Move the switch on the second band member to FOLLOWER.



LEADER SWITCH POSITION

FOLLOWER SWITCH POSITION

LEADER



FOLLOWER



OPTIONAL DEMO AND EXTERNAL SPEAKER SET UP

OPTIONAL DEMO SET UP

FOOTPAD/PUSH BUTTON IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad/push button into the jack labeled DEMO on the CONTROL BOX.
 2. Place the switch in the DEMO position to enable DEMO activation.
 3. Step on the footpad or press push button to activate the scary sequence!
- * Footpads and push buttons are sold separately and can be purchased at www.tekkyaccessories.com



OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.



CARE AND MAINTENANCE

- STORE IN A COOL AND DRY ENVIRONMENT.
- IN INCLEMENT WEATHER BRING ITEM INDOORS.
- SURFACE WASHABLE ONLY. DO NOT USE ANY HARSH OR ABRASIVE CLEANING AGENTS.
- REMOVE BATTERIES WHEN STORING ITEM FOR LONG PERIODS OF TIME.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Item will not activate.	<ul style="list-style-type: none"> • 6V 2A adapter is not plugged in. • Switch on control box is not in the DEMO/OFF position. • Batteries are not inserted correctly. 	<ul style="list-style-type: none"> • Check 6V 2A adapter is plugged in and securely inserted into the control box. • Move switch to Bluetooth®/Leader or ON positions • Install batteries with positive and negative in the correct positions.
You only hear item sound but no item activation.	<ul style="list-style-type: none"> • Control Box wires to the arms are not connected. 	<ul style="list-style-type: none"> • Make sure the control box wires labeled H and I are both securely connected.
You cannot connect to Bluetooth® on NEW device.	<ul style="list-style-type: none"> • Prior device is still connected to REAPER BAND Bluetooth®. 	<ul style="list-style-type: none"> • Unpair/forget prior Bluetooth® device
Item has no sound while operating.	<ul style="list-style-type: none"> • Volume knob is turned all the way down. 	<ul style="list-style-type: none"> • Adjust volume knob to desired volume.



visit us at tekkydesign.com

Requires 6V 2A adapter (included) or 4AA batteries. (included)

ALL NEW MATERIALS:
METAL, Foam, PLASTIC, POLYESTER
Surface washable only.

Bluetooth® Reaper with Drums™ is a trademark of Tekky. Copyright © 2023 Tekky.

All Rights Reserved.

MADE IN CHINA

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by JCW Investments, Inc. DBA Tekky Toys is under license. Other trademarks and trade names are those of their respective owners.

SMART PHONE SCAN

SETUP VIDEO



FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AAAI-REAPER-BAND

To comply with FCC's RF radiation exposure limits for general population/uncontrolled exposure, this device must be installed to provide a separation distance of at least 20cm from all persons.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.