

 
## CONTENTS

1.Precautions before Use.....	2
2.Key Layout and Definitions.....	3
3.Descriptions of Keys.....	5
4.Device's Specifications.....	6
5.Introduction to Desktop.....	7
5.1.Windows 10 start image.....	7
5.2.Image slide applications.....	8
5.3.Introduction to app Interface.....	9
5.4.Start Menu.....	11
5.5.Multitasking operating interface.....	12
6.Basic Operations.....	13
6.1. Show touch keyboard.....	13
6.2. Action Center.....	13
6.3. Setup Menu.....	13
6.4. Sleep, restart and power off.....	14
TROUBLE SHOOT.....	15
FCC statement .....	16

## 1. Precautions before Use

- 1.1. Prevent the Tablet PC from falling to the ground or from receiving high impact shocks.
- 1.2. Do not use the device for extended periods of time in any environment where the air is too cold, too hot (>35°C), too humid or too dusty. Do not expose the Tablet PC to direct sunlight.
- 1.3. Avoid using it in the presence of a strong magnetic field or strong static environment.
- 1.4. In the event of water or any other liquid splashing onto the Tablet PC, discontinue use immediately and allow for it to dry out before resuming usage of the device.
- 1.5. Do not clean the Tablet PC with any detergent or liquid that contains strong chemical elements that could cause damage due to corrosion. Also avoid wetting the device excessively to prevent damage caused by dampness. If cleaning is really necessary, clean it with a dry, soft cloth.
- 1.6. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.
- 1.7. Please back up your important material regularly to avoid loss.
- 1.8. Please do not disassemble the Tablet PC by yourself; as this would render the warranty void.

## 2.Key Layout and Definitions

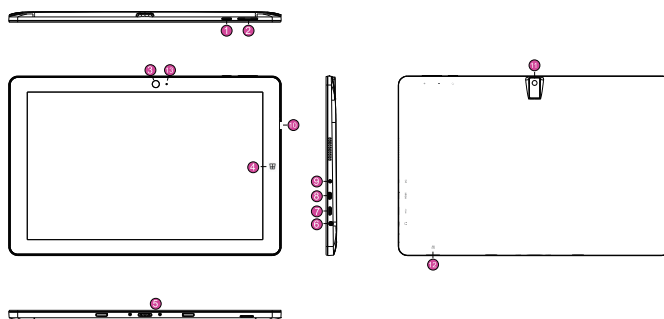


- ① Power button: Press it down to start or close the touch screen panel. You can also have the Tablet PC enter dormancy through this button or wake it from the dormancy mode.
- ② Sound-/sound+: Lower/raise volume.  
Loudspeaker: The built-in loudspeaker enables you to hear the sound without having to link an additional device.
- ③ Front camera: take photos, and record videos.
- ④ Windows key: Press this button to return to the Start screen.
- ⑤ Movable base keyboard interface: This interface is magnetic, which is convenient for alignment and firmly linking the Table PC to the keyboard.
- ⑥ Socket for earphones: This socket can transmit the audio signals of the Tablet PC to a loudspeaker or the earphones.

- ⑦ Micro USB Interface: You can read the data through USB.
- ⑧ Micro HDMI Interface: High-Definition Multimedia Interface.
- ⑨ Socket for Adapter: Only use the adapter included with the device. Using any other power adapter voids your warranty.
- ⑩ Microphone: This socket can transmit the audio signals of the Tablet PC to a loudspeaker.
- ⑪ Back camera: take photos, and record videos.
- ⑫ Micro SD card slot: The built-in storage card reader slot supports Micro SD.
- ⑬ Camera indicator: The camera indicator will be on when the built-in camera is used.

### 3.Descriptions of Keys

 ▪ **Attention: Keyboard is optional, and configured according to the specific type of tablet PC you have bought.**

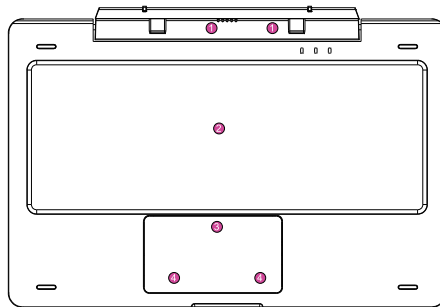

- ① Movable base keyboard interface: This interface is magnetic, which is convenient for alignment and firmly linking the Table PC to the keyboard.
- ② Keyboard group: The keyboard group provides full size QWERTY keys that provides for the best typewriting and comfort ability experience.
- ③ Touch Tablet: Used to control the cursor on the Tablet PC, functions the same as operating a mouse.
- ④ Left key.
- ④ Right key.

#### 4.Device's Specifications

Display:	10.1"LED –Backlight Multi-touch Capacitive screen
Screen resolution:	800x1280 IPS
Operating system:	Windows 10 Home
Processor/CPU:	Quad-core Cherry Trail-T3 Z8350
Working memory:	2GB
Internal memory:	32GB
Card reader:	Micro SD(MAX.128GB)
Dual camera:	Front:2.0MP,Rear:5.0MP
Connectivity:	WLAN, Bluetooth
Interfaces:	Micro USB, Headphone Output, Micro HDMI Micro SD, DC-IN, Keyboard Docking
G-Sensor	Support

Accessories:

 
Adapter,USB Cable,Detachable Keyboard,Headphone.

## 5.Introduction to Desktop

### 5.1. Windows 10 start image

On the start screen, you will see many programs fixed in the image. These application programs are displayed in the form of a “magnet” also known as an icon. You can access them easily by clicking on them.


You need to log onto your Microsoft account for the application program to have full functionality and run completely.

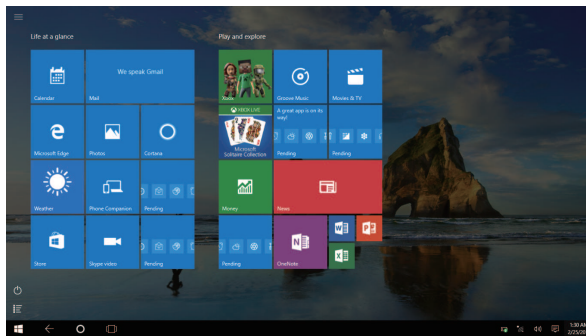

所有图片须根据  
客户壁纸替换


## 5.2. Image slide applications
 
### Slide to right

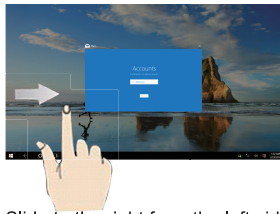


Slide to the right from the left side of the screen to scan the application programs running.

### Slide to left

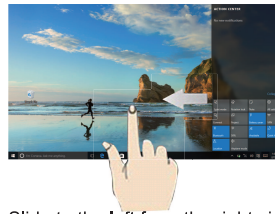 

Slide to the left from the right side of the screen to access the Action Center settings.

### Slide downward

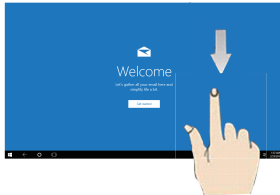 

On the start screen, slide from the top of the screen towards the bottom to access the welcome screen, slide finger up and down to view all the application programs and to navigate or to move the image around.

### Slide with finger



 


### 5.3. Introduction to app Interface


Besides the application programs already fixed on the start screen, you can also load or access other applications by selecting all application programs. This will display all the applications available on your Tablet.



If you want to fix more application programs to display on the default start interface, see the operation in the figure below, (1) Click the properties icon (2) Press and hold the application program magnet for about one second and then let go (3) Click the Pin to start.

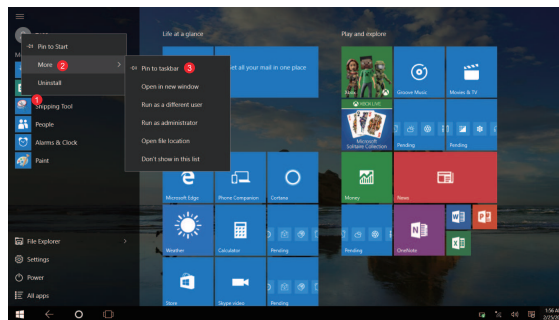

 Conversely, if you want to cancel or delete a certain application in the start screen, lightly touch, press and hold the application program magnet for about one second, select the unpin button to remove it.

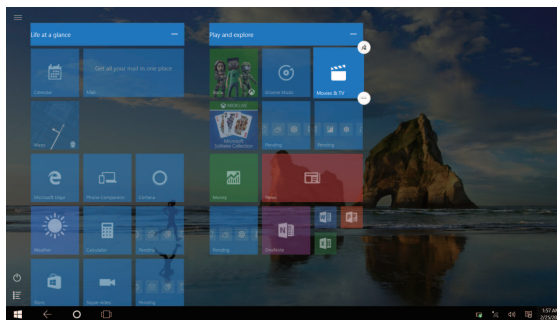


#### 5.4. Start Menu


Under PC mode, press the Start icon, the Start Menu will display, including: Start, Device, Setup, Share, and Search Program.



 
Usually: File Explorer, Settings, Power, and All apps



 
Can Sleep/Shut down/Restart the Tablet PC



 Allows you to search the files and application programs on the Tablet PC.




Allows you to set up the Table PC.

 

Can scan more apps

### 5.5. Multitasking operating interface

 Slide it to the right from the left side of the screen and let go. You will then be able to see all the running applications. From here you can access an application and/or close a running application.

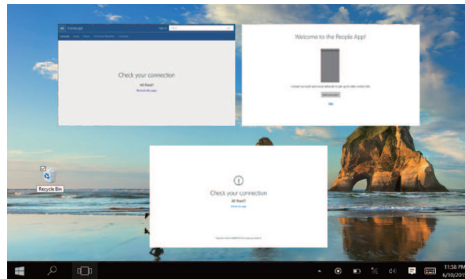

## 6. Basic Operations

### 6.1. Show touch keyboard



If you need to access the touch keyboard, please touch the keyboard icon 

### 6.2. Action Center



 
 
Action Center is a notification center which also allows for quick settings like Tablet / PC mode, Wi-Fi, Bluetooth etc.

### 6.3. Setup Menu



Allows you to set up the Tablet PC and choose apps.

#### 6.4. Sleep, restart and power off

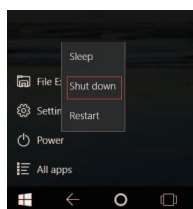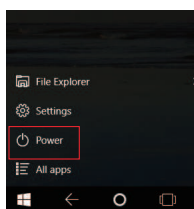

## TROUBLE SHOOT

- Please pay attention to the error/notification messages displayed on your device.
- You may not be able to access some features/applications without a subscription or depending on your region/country, so please contact your service provider for more details.
- If your device's touch screen is not responding properly, you may try the following:
  - 1.Remove the protective cover from the touch screen as this may prevent the device from recognizing your inputs.
  - 2.Ensure that your hands are not greasy or wet, so clean and dry them before tapping the touch screen.
  - 3.Restart your device to clear any temporary software bugs.
  - 4.Ensure that your device software is upgraded to the latest version.
  - 5.If the touch screen is scratched or damaged, take it to a service center.
  - 6.When you use your device for a long period or use applications that require more power, your device may feel hot to the touch. This is normal and should not affect your device's lifespan or performance.
- If a connection is not established when you are trying to connect your device to a PC:
  - 1.Ensure that the USB cable you are using is compatible with your device.
  - 2.Ensure that you have the proper drivers installed and updated on your PC.

#### FCC statement:

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier name: Singer (Sri Lanka) PLC  
Address: 80, Nawam Mawatha, Colombo 2, Sri Lanka  
TEL: Mobile- (94)-77-2620835  
Website: [www.singersl.com](http://www.singersl.com)