

FCC ID NO: 2AABK-SKYLIGHT

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or

more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Federal Communication Commission Radiation Exposure Statement
When using 10" WIFI Digital Photo Frame (Model No: Skylight, D104), maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.

Statements: The NII band I should be indoor used only.

Skylight Quick Start Guide

Contents of Box

Your Skylight package contains the following:

- Skylight Frame
- Plastic support stand
- Power adapter
- Instructions for setting up your personal Skylight email address (see Step 4)

1) Attach the support stand

- Screw the plastic support stand into the hole on the lower right on the back of Skylight.
- If you prefer to mount Skylight on the wall, you can use the hole on the upper back of Skylight.

2) Turn on the device

- Connect the adapter to Skylight – it plugs into the small hole on the back that says DC IN.
- Connect the adapter to an outlet to turn it on.
- In about 30 seconds, the home screen appears.

3) Connect to Wi-Fi

- A list of available WiFi networks will appear on the right side of the screen. Tap to choose your network from the list. Swipe up and down if the list is long.
- If the name of your network does not appear, wait for 30 seconds and check again.

- If your WiFi requires a password, a prompt will appear. Type in your network's password using the on-screen keyboard. Don't make any typos!
- Skylight will let you know once it has successfully connected.

4) Create your personal Skylight email address

- Loved ones send photos to Skylight by emailing them to your unique Skylight address. These have the format _____@ourskylight.com, e.g. johnsmith@ourskylight.com.
- Here's how you get your Skylight address:
 - a. Visit www.ourskylight.com/finalstep and follow the instructions there to pick your unique Skylight email address.
 - b. Once you create your Skylight email, our online system gives you a **6-digit code**.
 - c. Just tap that code into your Skylight device after turning it on the first time, using Skylight's onscreen keypad.
 - d. Skylight will automatically retrieve your unique Skylight email address, and display it on the screen.

5) Now, ask loved ones to send pictures!

- Everyone in your family can email photos (as attachments) to your Skylight email address.
- The subject and contents of the email don't matter – Skylight just grabs photo attachments.
- Loved ones can send photos from phone or computer.

- About 60 seconds after photos get sent, they appear on your Skylight!

6) Tap the screen for lots more features

- When photos arrive, they'll play on a slideshow. You can swipe to scroll through photos.
- Tap the screen to see the Settings Bar. From here you can:
 - Delete photos
 - Pause on a favorite photo
 - View a Gallery of all your photos and navigate to a specific photo quickly
 - Tap "How It Works" to check your Skylight email address if you forget it
 - Reset your WiFi
- If you love a photo, you can tap the Heart button in the lower right of the screen, and we'll email the sender to tell them you loved it!

7) Put your Skylight to sleep at night

- To turn off Skylight's screen at night, press the power button (the top round button on the back of Skylight) one time. The screen takes 2 seconds to power down.
- To turn the screen back on, simply touch the power button on the back again.

If you have any questions, comments, or suggestions, please email us at
info@skylightframe.com