

Skylight PLUS

If you have purchased the Skylight Plus plan, you can manage all of the frames under your account and gain access to these premium features:

Mobile App: Additional access to download, share, and bulk delete photos using the Skylight app from the Apple or Google Play store.

Skylight Web: View, download, share, and delete photos using the cloud portal at app.ourskylight.com.

Videos: Send videos to your Skylight via email, mobile app or Skylight Web. Video sound can be enabled on your frame.

Captions: Send photos with captions using the mobile app or Skylight Web.

Plus can be purchased in-app or at www.skylightframe.com/plus.

If you have any additional questions or would like to get in touch with us, please visit our **User Guide** at www.skylightframe.com/support.

Love your Skylight Frame? Share a photo of it on social media and tag @skylightframe and #myskylight for a chance to be our monthly \$100 gift card winner!

Follow us: @skylightframe



Make sure to download the Skylight app to get the most out of your Frame!



Skylight Frame Start Guide

Contents of the Box

- Skylight Frame
- Plastic support stand
- Power adapter and cable

Set Up

Display your Skylight horizontally or vertically, and photos will automatically rotate to fit the frame's orientation.

Support stand: Find the parallel lines marked with 'Stand' in the bottom or left side of the thin, rectangular groove on the back of your Skylight. Align and insert the support stand, silver magnet-side up, until it clicks into place.

OR

Mount Skylight: Find the two wall mount holes in the upper-middle and right side of the back of the frame to mount your Skylight on the wall either horizontally or vertically.

Turn On

1. Connect the power adapter:

- a. The rectangular USB end of the cord connects to the USB port on the power adapter.
- b. The round end of the cord plugs *vertically* up into the power port on the back of your Skylight (it is the port marked 'Power' on the upper edge of the square indentation in the center of the back of your frame).

2. **Connect the adapter to an outlet:** Your Skylight home screen will appear shortly.

WiFi

- 1. Select your network:** A list of available WiFi networks will appear on the right side of the screen. Tap to choose your network from the list. Swipe up if the list is long. If your network does not appear, wait for 30 seconds and check once more.
- 2. Enter your password:** If your WiFi requires a password, a prompt will appear. Type in your password using the on-screen keyboard. Don't make any typos!

Skylight will say "WiFi Connected" once it has connected successfully.

Activate

- 1. Create your Skylight's email address:** Download the Skylight mobile app or visit app.ourskylight.com/register, and follow the instructions to create your unique Skylight email address.
- 2. Retrieve your code:** Once you create your Skylight email address, our system will give you a 6-digit activation code.
- 3. Enter your code:** Enter your code on your device using your Skylight's on-screen keypad. Please note that this will only happen the first time you turn your frame on and connect to WiFi.

Your frame will automatically connect to your unique Skylight email address and display it on the screen.

Share

- 1. Email photos:** Now everyone in your family can send photos through the mobile app or via email (as attachments) to your Skylight email address (e.g. mom@ourskylight.com). The subject and contents of an email to your Skylight don't matter - Skylight just grabs photo attachments.
- 2. Enjoy photos:** About 60 seconds after photos get sent, they appear on your Skylight!

Features

Send Photos: Use the Skylight mobile app to send dozens of photos at once or attach up to 25MB of photos when emailing your unique Skylight email address, and they will automatically appear on your frame.

Swipe: When photos arrive, they'll play in a slideshow. Swipe to view additional photos.

Zoom: To zoom into a photo so it fills the screen, take two fingers (e.g. your two index fingers) and pinch to zoom.

Heart Button: If you love a photo, tap the Heart button in the lower-right corner of the screen, and we'll email the sender to tell them you loved it! You can also hide the Heart button by going to Settings > Advanced Features.

WiFi: Skylight requires WiFi for initial setup and to receive new photos, but you can still view photos without a WiFi connection.

Settings

Settings: Tap the screen to see the Settings Bar. From here you can:

- **Delete:** Remove photos from your Skylight
- **Rotate:** Rotate photos on your Skylight
- **Pause:** Pause your favorite photos
- **Gallery:** View all of your photos

Advanced Features: Change the slideshow speed or shuffle your photos.

How it Works: Check your Skylight email address or reset your WiFi.

Sleep Mode: Ensure that your Skylightscreen goes to sleep at the same time each night and wakes up at the same time each morning.

You can manually enter sleep mode or create an automated sleep schedule for your Skylight.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information and Statement

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. The SAR limit of USA (FCC) is 1.6 W/kg averaged. Device types: 10 inch WIFI Digital Photo Frame (FCC ID: 2AABK-SKYLIGHT03) has also been tested against this SAR limit. SAR information on this and other pad can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested simulation typical 0mm to body. To maintain compliance with FCC RF exposure requirements, use accessories should maintain a separation distance between the user's bodies mentioned above, the use of holsters and similar accessories should not contain metallic components in its assembly, the use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.