


DEC Vari-ND Vari-ND Version DEC Adapter

Product Manual




3. Connect remote cable

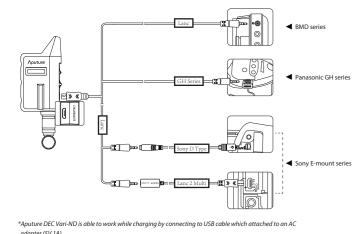

4. Install Claw Clip

The grip can be set on rocker, tripod, shoulder and other supporting systems

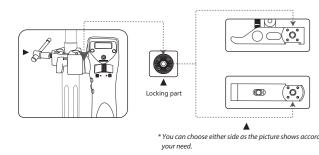

Thank you for purchasing the Aputure DEC Vari-ND!

Aputure DEC Vari-ND is a wireless remote adapter that allows you to attach Canon EF-mount lenses to MFT mount or E-mount cameras. In addition to retain all the DEC features, but also equipped with electronic Vari-ND lens assembly, from ND8 to ND2048, multi-steps light adjusting, even in bright light can also use large aperture motion blur shooting, and also helps you to expand the possibilities of Canon EF-mount lenses when you contains the compact with size of the compact with the compact of the compact was the contained to the compact of the compact of the compact with size of the compact of the c

Instructions

Foreword

Please read this product manual carefully.

Keep this product manual. Always include this product manual when passing the products on to third parties.

WARNING: Do not place the product in a place where there are corrosive chemicals to protect the product from corrosion, corrosion may cause the product to malfunction. Use only a microfiber and dry cloth for cleaning the product.

- · Operate carefully to not cause any damage by dropping or physical shocking it.
- Do not leave the product near anything that has a strong magnetic field such as a magnet or electric motor. Also avoid using or leaving the product near anything emitting strong radio waves such as a large antenna. Strong magnetic fields can cause the product to malfunction or destroy data transferring.

 Do not leave the product in excessive heat, high temperatures can cause the product to malfunctio
- To reduce the risk of fire or electric shock, do not use the product near water.
- Keep storing the product in a dry, clean, dust-free environment.
 Please have the product checked by the authorized service or agent if your product has some problem.
- Please note that this warranty does not apply to repair arising out of the malfunction of unauthorized disassembly, although you may request such repairs on a chargeable basis.
- Use of original Aputure cable accessories is recommended. Please note that this warranty does not apply to repairs arising out of the malfunction of non-original Aputure accessories, although you may request such repairs on a chargeable basis. The product is certificated by RoHS, CE, ECC and JAPAN MIC, Please operate the product in full compliance
- with the operation standards. Please note that this warranty does not apply to repair arising from malfunction although you may request such repairs on a chargeable basis.
- The instructions and information in this manual are based on thorough, controlled con procedures. Further notice will not be given if the design or specifications change.

FCC Compliance Statement


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two condition This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful nterference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of Detailed product manual for Aputure DEC Vari-ND can be found on the movie solution page on www.aputi

5. Charging

Charge the grip and the

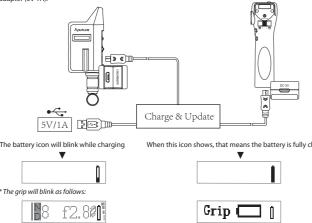

6. Install lens assembly

 $Push the lens assembly \ release \ button, you \ can \ eject \ the \ lens \ assembly. \ Depending \ on \ the \ use, you \ can \ replace$ the installation of Vari-ND lens assembly or transparent lens assembly. Note that save the replaced lens ass





Feature 1. Power on/off

Adapter: Switch Power switch to ON to start up, Switch Power switch to OFF to close down

Lanc 2 Multi Adapter Cabl

Reorient or relocate the receiving antenna.

RF warning statement:

Grip

Item check list

Consult the dealer or an experienced radio/TV technician for help.

· Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

Grip: Short press the Power switch to switch the state of starting up and closing down.



◆ DC IN


2. Start/Stop recording



Please first set the camera to be in "Release without Lens enabled" mode if it does have before using together with the DEC Vari-ND

3. Adjust focus

Dial < >to move the focus. Turn left to move the focus faraway and right for closer. The more you move hifter, the faster the focus change will be

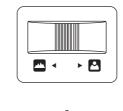


4. Adjust aperture and ND

Nomenclature

1. Adaptei

2. Control box

he wheel to adjust the aperture or ND. The OLED screens on both adapter and grip will display the f or ND value

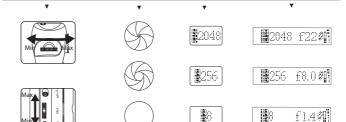


nd aperture information , then only the aperture can be adjusted.



Short pressing <A>/ on grip can set the position memory of location. After setting both positions, moving focus between A and B can be achieved by dialing.

short pressing <Aperture/ND wheel> on grip or control box can switch to adjust the aperture or ND, then dial

embly is used, the OLED screens on both adapter and grip will display the focal length

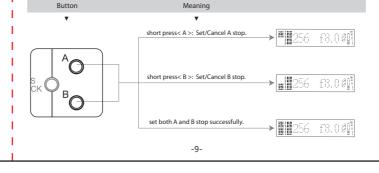

6. Max aperture mode & Vibration mode

3. Grip

OLED scre

A stop -

IRIS LOCK -

Preparation

1. Open safe case

IRIS COCK f 1.4 🗐

110100

DEC

Tips and trouble setting

1. Please charge the Aputure DEC Vari-ND within 3 minutes after the low battery icon appeared in case of

2. Please charge for the grip before using it again if it was powered off because of low battery

3. The aperture value of some lenses might not be displayed correctly. 4. Numerous focus pulling may change the memory of stop A and B.

5. Suggest to use the Canon EF L lens or Canon STM lens. Other lenses especially made by the third party may cause the incoherent movement when being controlled by the DEC Vari-ND. 6. If the lens is taken from a cold environment into a warm one, condensation may develop on the lens surface

and internal parts. To prevent condensation in this case, first put the lens into an airtight plastic bag before taking it from a cold to warm environment. Then take out the lens after it has warmed gradually. Do the same when taking the lens from a warm env

7. Aputure DEC Vari-ND has been paired before shipping. You can follow the steps below if it is needed 1) Adapter keeps OFF; 2) First press <START/STOP> of the Grip, then simultaneously Press<ON/OFF> of the Grip. The Grip will display

"Pairing..." 3) Pull <ON/OFF> of the adapter to <ON>.The OLEDs both display "Pair_OK". This means pairing is finished


-10-

Pair_OK


8. If you use manual-focus lens to DEC Vari-ND, you cannot adjust focus remotely 9. Firmware of adapter is constantly under development, which means Aputure

1) Website: http://www.aputure.com/DEC-Vari-ND/Undate


2) Please update firmware following the instructions on our official websit

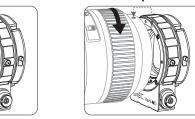


* Please first turn off all the power of the devices, then push down t

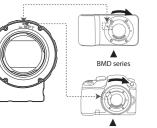

2. Attaching

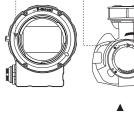

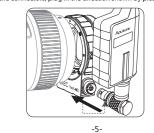

Specifications

nents	Adapter	Grip	
oltage	3.7V	3.7V	
apacity	1400mAh	2600 mAh	
/Update port	Micro USB	Micro USB (charge only)	
oltage	5V	5V	
rrent	≤500mA	≤300mA	
	≤10h	≤48h	
urance	Based on a fully charged Li-ion battery, a Canon EF 24-70mm/ 2.8L II USM and CIPA testing standards.		
Operation	0°C-40°C		
Storage	-20°C-60°C		
dity	65±20% (without condensation)		
Rate	2.4GHz		
Range	≤100m		
on Accessories 1/4" jack Claw clip		Claw clip	
atibility	Canon EF, EF-S AF lenses		
	MFT(Micro 4/3)-mount (for all frame sizes) camera		
patibility	E-mount (for all frame sizes) camera		
	ND8~ND2048		
	Storage dity Rate Range	oltage 3.7V apacity 1400mAh //Update port Micro USB oltage 5V arrent ≤500mA ≤10h Based on a fully charged Li-ic 2.8L II USM and CIPA testing Operation 0°C- Storage -20°C dity 65±20% (without Rate 2.44 Range ≤10 Accessories 1/4″ jack canon EF, EF patibility MFT(Micro 4/3)-mount (fe	

The list of tested compatible Lenses is below and more can be found on the official website: ttp://www.aputure.com/DEC-Vari-ND/technique

EF 35mm f/1.4L USM	EF 50mm f/1.8 II
EF 40mm f/2.8 STM	EF 16-35mm f/2.8L II USM
EF 50mm f/1.4 USM	EF 24-70mm f/2.8L II USM
EF 24-105mm f/4L USM	EF 70-200mm f/2.8L IS II USM
EF-S 18-55mm f/3.5-5.6	EF 100mm f/2.8L II USM
EF-S 18-200mm f/3.5-5.6 IS	EF 85mm f/1.2L II USM

Trademarks

Canon is a trademark or registered trademark of Canon INC in the P.R.C. and other countries.


Panasonic is a trademark or registered trademark of Panasonic Corporation in the P.R.C. and other

BMD is a trademark or registered trademark of Slackmagic Design Pty. Ltd in the P.R.C. and other countries

Sony is a trademark or registered trademark of Sony Corporation in the P.R.C. and other countries

The statemark of the propert of trademarks mentioned in this manual are the propert

-11-

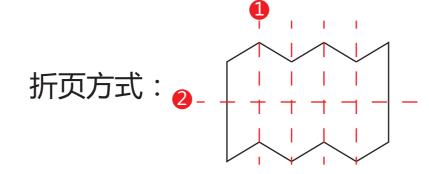

---- 为折线(不印刷)

折页成型(英文在正面):

	Λ ρ	uture®深圳市爱图仕影像是	器材有	限公司
	设计项目	082 说明书	图号	AP-082-PR-
	尺寸(mm)	585*280 mm 折页尺寸:97.5*140mm	版本	V1.0
	材质工艺		设计师	Jolin
		70g 书纸,正反两面印刷	日期	20170119
	备注	料号 :		






使用者指南

3.连接遥控线与相机


如图所示,根据不同的相机遥控插孔,用不同的遥控线连接控制盒和相机

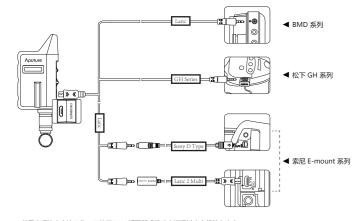

*若需实现边充电边工作,可使用5V1A适配器或移动电源通过充电线接入充电口。

4.蟹钳夹安装

可夹持于摇臂、肩托、脚架等固定设备上。

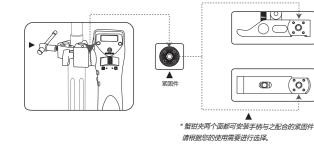

感谢您购买爱图仕产品

• 请认真阅读本使用者指南。

• 请用软布、干布清洁本设备。

• 请将本产品保存在干燥、干净、无尘的环境中。

范围内,但用户可以付费维修。

FCC 符合声明

(1) 此设备不会导致有害干扰

不在本司保修范围内,但用户可以付费维修。

重要提示

5.充电 充电时,使用充电升级线 (Charge & Update)。Micro USB端连接需充电的手柄或转接器,USB端连接

爱图仕电子密度镜版多功能镜头转接器是一款连接佳能EF卡口镜头与MFT(Micro 4/3)卡口或

警告:请勿将本产品放置在有腐蚀性化学物品的地方,以免产品受到腐蚀,被腐蚀可能引起产品故障。

• 请勿将本产品靠近具有强磁场的物体,如磁铁或电动机。另外也要避免将本产品靠近发出较强

• 需要维修时请联系授权的维修人员。本产品内有精密电子线路。未经许可擅自拆卸导致故障,

• 建议使用爱图仕原厂线缆。由于使用非爱图仕原厂附件导致本产品的任何损坏,不在本司保修

• 本产品已通过RoHS、CE、FCC和日本MIC认证,请参考相关国家标准使用和操作。因使用操

【警告】如果用户未经爱图仕明确许可而进行改动或改装,可能会丧失继续操作该设备的权利。

【注】 此设备经测试确定符合 B 类数码设备 (依照 FCC 规则第 15 部分规范)的限制。这些限

制的设计旨在为居住场所安装条件下的有害干扰提供合理的保护。此设备生成、使用并可以发射 射频能量。如果未按照指示安装和使用,可能对无线电通信造成有害干扰。但是,在特定安装条 件下,不保证这类干扰不会发生。如果此设备确实对无线电或电视机接收信号造成有害干扰,而 这点可以通过关闭和打开设备来确定,那么建议用户尝试使用以下一种或多种措施来消除干扰:

您可以在本公司网站 www.aputure.com.cn 中的炫彩视频系列产品栏目下找到本设备的详细使用者指南。

E-mount 卡口摄影机的无线控制转接器。除了保留DEC所有功能外,还配备电子可调密度镜, 从ND8到ND2048,多级调光,即使在强光下也能使用大光圈拍摄运动模糊,同时可使您的EF卡

口镜头轻松适配多种相机、摄像机,满足日益丰富的视频拍摄需求。

• 请注意所有警告提示并遵守使用者指南内的所有指令。

本产品属于精密仪器,请避免使用时掉落、碰撞或承受重击。

• 请妥善保管使用者指南。将产品交给他人使用时,请务必附带本使用者指南。


无线电波的物体,如天线。强磁场可能引起产品故障或破坏数据传输。 • 请勿将本产品放置在温度过高的地方,高温可能导致设备内电池受损或爆炸。

• 请勿在滴水或易溅湿的环境使用本产品,否则有短路或电击的危险。

作不当而造成机器损坏,不在保修范围内,但用户可以付费维修。 • 此使用者指南依据本公司严格测试制定。设计和规格如有变更,恕不另行通知。

此设备符合 FCC 规则第 15 部分中的规范。操作设备须符合以下两个条件


(2) 此设备可承受任何外来干扰,包括可能导致非预期操作的干扰。

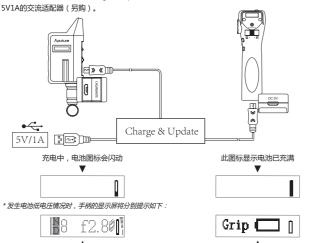

显示转接器电量不足(转接器上也将显示)

6.安装镜片组件 拨动镜片组件释放拨钮,可以弹出镜片组件。根据使用需要,可以替换安装可调密度镜组件或透明镜片组 件使用。注意将替换下的镜片组件保存在镜片组件安全盒里。



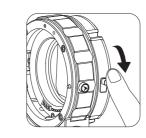

■ 显示手柄电量不足(转接器上将不显示此提示)

蟹钳夹

索尼D口谣控线

充电升级线 (Charge & Update)

Lanc 至多功能USB转接线 (仅用于E-mount版本)

• 调整接收天线的方向或重新放置。

• 将设备连接到其他电路的插座中,而不是接收器所连接电路的插座。

• 咨询经销商或有经验的无线电/电视机技术人员以获得帮助。

控制盒

镜头盖

转接环

(可调密度镜片组件)

镜头后盖

松下系列遥控线 (GH series)

遥控线 (Lanc)

▼ 4 供电口

电子密度镜版多功能镜头转接器

• 扩大设备与接收器之间的距离。

FCC 辐射暴露声明

物品清单

包装内包含以下物品

1.开机 转接器电源开关拨至ON,开机;拨至OFF,关机。短按手柄电源开关ON/OFF,切换手柄开关机 状态。机器成功开启后,屏幕如下显示:




Ⅰ 2.开始/停止拍摄视频


将遥控线连接控制盒和相机后,按下<Start/Stop>按键,启动视频拍摄;再次按下<Start/Stop>按键



DEC Vari-ND与部分相机适配时,请先将相机设置到"无镜头拍摄"模式。如GH4,设置为"自定义—无镜头拍

拨动调焦拨杆< 💷 > , 向左表示焦点向远处< 2>运动 , 向右表示焦点向近处< 2>运动。此外还 可根据使用需要控制调焦速度,向左或向右的拨动幅度越小,焦点运动的速度越慢。反之,则越快。

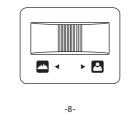

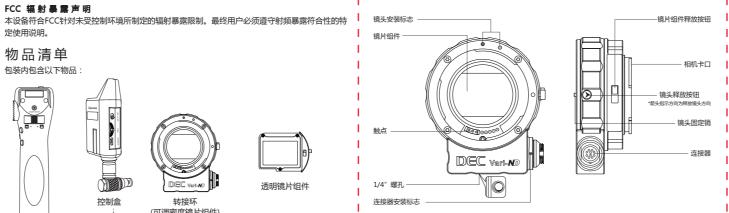

2.控制盒

4.光圈/ND拨盘调节

5.A、B焦点位置记忆

现在焦点A、B之间变速调焦.

空手柄显示屏上将实时显示调整后的光圈或ND数值。

透明镜片组件


使用者指南

镜片组件安全箱

安全箱


产品视图

Ⅰ 1.转接环

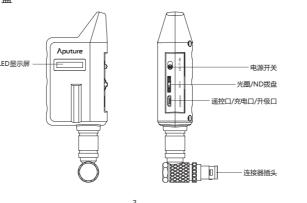

短按手柄或控制盒上光圈/ND拨盘可切换调节光圈或ND,拨动拨盘即可调整光圈或ND大小,转接器和遥


3.手柄

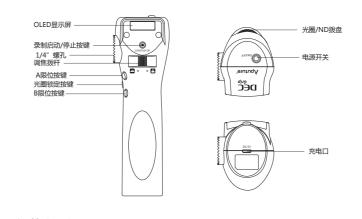

安装与使用

1.开箱


向上提起安全箱两侧扳扣,即可打开。在有些情况下,您需要先逆时针旋松气压平衡阀。

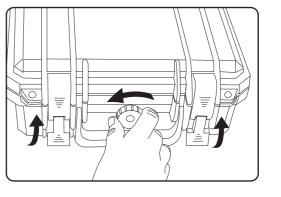

2.转接环安装


* 更换或卸下镜头前请先关闭所有设备的电源。

1)安装镜头:对准镜头与转接环的安装标识,按箭头方向旋转镜头安装至转接环。 佳能 EF镜头 (红点) 佳能 EF-S镜头 (白点)

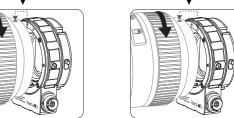

* 相反的操作可卸下镜头,按照镜头释放按钮上的指示方向按下镜头释放按钮,反向旋转镜头即可卸下镜头。

2)安装相机: 对准相机安装标识,按箭头方向旋转相机安装至转接环。

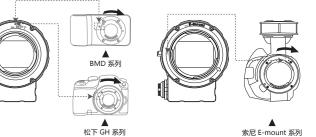

3)安装转接器:对准控制盒与转接环安装标识,按箭头方向插入。



6.光圈全开模式和震动提示



常见问题及小提示

№256 f8.0 🕪

f 1.4 🕬

- 1. 当出现低电报警时请及时充电,否则3分钟内产品会自动关机,并有可能造成工作不稳定。
- 2. 手柄低电关机后需进行充电才能开机。
- 3. 有些镜头的最大光圈值可能不能正确显示。
- 4. A. B限付在多次往复运动后可能会发生付置偏移
- 5. 建议使用佳能EF L镜头或STM 镜头,佳能低端的镜头或第三方的EF镜头会导致镜头运动的不连贯。 6. 如果将转换器从寒冷的环境拿到温暖的环境中,转换器表面和内部零件可能会发生结露。 为防止在这种情况下出现结露,将转接器从寒冷的环境拿到温暖的环境之前,先将转接器放入密封的塑 料袋里。转接器逐渐变暖以后,再将其拿出来使用。将镜头从温暖的环境拿到寒冷的环境中时,也请使 用同样的方法。
- 7. 本产品出厂时已经完成对码。特殊情况下需要对码,请按照以下方式操作
- 1)确定转接器处于关闭状态;
- 2)保持长按手柄 < START/STOP > 按键,然后短按手柄 < ON/OFF > , 至手柄OLED 屏显示 "Pairing... 字样,再释放手柄<START/STOP>按键。

-10-

3)将转接器的电源开关推至ON。两部分显示屏会显示"Pair OK"字样。配对成功。

两部分显示屏将显示转接器上的信息:焦距或者ND、光圈、电池电量、信号场强等。 Pairing.. Pair OK

8. 使用手动调焦镜头,远程控制焦距功能将不能使用。

9. 本产品的接环部分支持固件升级:

1) 升级固件下载网址: http://www.aputure.com/cn/DEC-Vari-ND/Updat

2)升级固件时,请务必参照升级固件页面的步骤指引。

类别 电池电压 电池容量 充电/遥控/升级端口		转接器	手柄	
		3.7V	3.7V	
		1400mAh	2600 mAh	
		Micro USB	Micro USB(仅供充电)	
充电电压		5V	5V	
工作峰值电流		≤500mA	≤300mA	
		≤10h	≤48h	
工作時	长	以CIPA标准测试(EF 24-70mm/2.8L II USM)		
温度	工作温度	0°C-40°C		
温及	储存温度	-20°C-60°C		
湿度	Ę	65±20% (不结露)		
遥控频率		2.4GHz		
		≤100m		
安装附件		1/4" 螺孔	蟹钳夹	
兼容镜头		佳能EF, EF-S卡口AF镜头		
兼容相机		Micro 4/3 (MFT)卡口的相机		
		E-mount卡口的相机		
ND范围		ND8~ND2048		

经测试兼容镜头列表,更多兼容镜头请查询: http://www.aputure.com/cn/DEC-Vari-ND/technique

EF 35mm f/1.4L USM	EF 50mm f/1.8 II
EF 40mm f/2.8 STM	EF 16-35mm f/2.8L II USM
EF 50mm f/1.4 USM	EF 24-70mm f/2.8L II USM
EF 24-105mm f/4L USM	EF 70-200mm f/2.8L IS II USM
EF-S 18-55mm f/3.5-5.6	EF 100mm f/2.8L II USM
EF-S 18-200mm f/3.5-5.6 IS	EF 85mm f/1.2L II USM

商标声明

规格参数

Canon等是佳能公司在中国或其他国家的商标及产品型号。 Carliolle英庭主张之可在中国或其他国家的简称从及产品型号。 Panasonic等是松下公司在中国或其他国家的商标及产品型号。 BMPCC等是Black Magic Design公司在中国或其他国家的商标及产品型号。 Sony等是索尼公司在中国或其他国家的商标及产品型号。 以上未被提及的其他名称和产品可能为其各自公司的商标或注册商标

	*		*
I [短按< A >: 记忆/取消 当前焦点位置	→	411 256 f8.0%
S CK O B	短按 < B > : 记忆/取消 当前焦点位置	→	∎ 256 f8.0∅¶
	A、B设置成功	→	加 256 f8.0例

*使用透明镜片组件时,转接器和遥控手柄显示屏上将显示焦距和光圈信息,此时只能调节光圈。

50/ **#**8.0*0*

显示

短按手柄上的<A>/按键,可设置记忆焦点位置。当焦点位置A、B都设置完成后拨动调焦拨杆,可实

-7-