

Information for your safety

Do not disassemble or modify failure to observe this precaution could result in electric shock or product malfunction. should the product break open as the result of a fall or other accident, remove the batteries

Keep dry do not handle with wet hands or immerse in or expose to water or rain. Failure to observe this precaution could result in fire or electric shock

Do not use in the presence of flammable gas failure to observe this precaution could result in explosion or fire

keep out of reach of children this device contains small parts which may pose a choking hazard. consult a physician immediately if a child swallows any part of this device

Do not expose to high temperatures Do not leave the device in a closed vehicle under the sun or in other areas subject to extremely high temperatures. Failure to observe this precaution could result in fire or in damage to the casing or internal parts.

Observe precaution when handling batteries Batteries may leak or explode if improperly handled. Observe the following precautions when handling batteries for use in this device:

- Read and follow all warnings and instructions provided by the manufacturer.
- Do not mix old and new batteries or batteries of different types.
- Do not short or disassemble.
- Do not expose to flame or excessive heat.
- Do not attempt to insert batteries upside down or backwards.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the batteries when leaving the product unattended for prolonged periods or when no charge remains.
- Should liquid from the batteries come into contact with skin or clothing, rinse immediately with fresh water.

Introduction

Thank you for your purchase of Aputure Pro Coworker remote shutter, the product suits a wide variety of tasks. It offers complete control of camera shutter without cumbersome cable connection between the hand control units and the camera. see page 8 for a list of compatible cameras.

Main features as follows

 
The world first cable exchangeable wireless remote release
Effective remote distance at open area: 10m
wired and wireless two operation methods free to choose.
Full function camera shutter control fits various tasks
16-unique-channel supports multiple user environment
Ultra low-power consumption benefits a longer period of use

Power exhausting prompt design

Inserting Batteries


Transmitter:

Slide the battery-chamber cover from the back of the transmitter and insert one 12V/23A battery (enclosed in package).

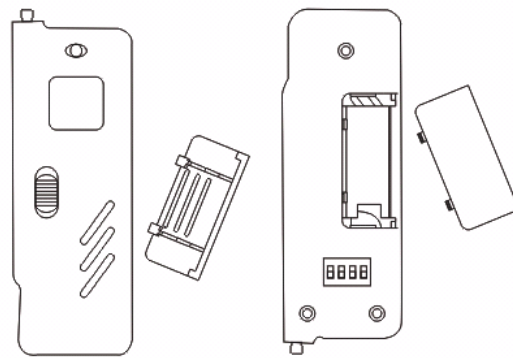

Receiver:

 Slide the battery-chamber cover from the back of the receiver and insert two AAA 1.5v alkaline batteries (enclosed in package).

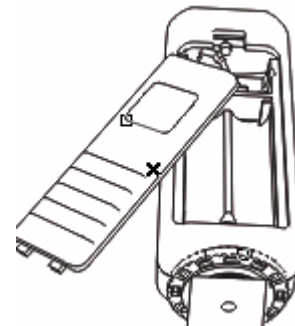

Replacing Batteries

When replacing batteries on transmitter or receiver:

1. Check the receiver is on the (off) position
2. Turn the camera off and disconnect the receiver
3. Remove the batteries.

The Low Battery Indicator:

LED indicator on receiver blinking fast when the batteries are low, ready change batteries.

Operation

- 1、 Turn off the camera and set the switch(5) of the receiver to 'off' .
- 2、 Insert the cable end camera plugin (13) into camera remote socket, cable end receiver plugin (12) into receiver plugin socket (3).
- 3、 Adjust radio channel (2) on receiver and transmitter to the same position, e.g. the channel on the receiver set to '1234' and the transmitter must use the same channel.
- 4、 Set the receiver switch (5) to 'on' , and turn on the camera.
- 5、 Extend the transmitter antenna (11) fully.

Wireless modes:

A. Single shutter (camera in single shoot)

Half press the release button on transmitter for activating camera's auto focus and light metering system. Full press release button for picture shooting. LED indicator turns from green to red.


B. Continuous shutter (camera in continuous shoot) Same step as single, but keep the release button for taking picture continually.

C. Bulb shutter (camera in bulb)

same step as single shutter while hold release button over 3 seconds, free to loose release button

after see the red light on transmitter off and red light on receiver constant on ,re-press the release button to remove long exposure.

D. Delay /self

Switch the transmitter mode to clock (), full press release button, camera automatic focus and shutter after 5 seconds, LED indicator in receiver will start blinking from slow to fast.

Cable mode

Press release button on the receiver side, user can focus and release camera shutter without use transmitter, even without battery.

Specification

Item name	Transmitter	Receiver
Power supply	12V/23A battery (enclosed)	2x AAA batteries(enclosed)
Battery life	1 year standby or continuous press for 20,000 times	Stand by>800h
QTY of channel	1	1
Remote control distance	10m	10m
Work indicator	Double color LED indicator	Double color LED indicator
Wireless frequency	433.92MHZ	-----
B shutter setting	Long press over 3 seconds	-----

Compatible Sheet:

Aputure code	Equivalent of original model
Pro Coworker 1C	All cameras compatible with canon rs-60e3 cord
Pro Coworker 3C	All cameras compatible with canon rs-80n3 cord
Pro Coworker 1N	All cameras compatible with nikon mc-30 cord
Pro Coworker 2N	All cameras compatible with nikon mc-dc1 cord
Pro Coworker 3N	All cameras compatible with nikon mc-dc2 cord
Pro Coworker 1S	All cameras compatible with sony rm-s1am cord
Pro Coworker 3L	All cameras compatible with olympus rm-uc1 rm cord
Pro Coworker 5L	All cameras compatible with olympus rm-cb1 cord
Pro Coworker 1P	All cameras compatible with panasonic dmw-rs1 cord

Precautions for Use:

1. Use only the prescribed battery.
2. Check the camera battery level and number of exposures remaining before using the Wireless remoteshutter. (See the camera manual for details).

3. *Some cameras have an AF activation option that determines whether the camera will focus when the release button is pressed halfway (see the camera manual for details)*
4. *Please do not connect or disassemble the receiver under the state of camera power-on.*
5. *Please do make the connector connected firmly to avoid problems in Operation.*

<p>Company: Aputure Imaging Industries Co., Ltd Name: Aputure Pro Coworker Wireless Remote Model Number: 2N-blk FCC ID: 2AABZ2N-BLK</p>

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.