

User Manual

Model: F-7XIPS

Startup and Shutdown	2
Usage of the Touch Screen	2
Interface Introduction	3
1. Desktop	3
2. Screen Lock	3
Program Operation Instructions	4
1. Player	4
2. Music	5
3. Sound Recorder	4
4. Camera	6
5. Browser	5
6. Play Store	6
7. Calendar	6
8. Clock	6
9. Calculator	7
10. Downloads	8
11. Maps	8
12. Email	8
13. File Manager/Explorer	13
Settings	14
Wi-Fi Network Settings	15
3G Network Settings	16
Usage of the Extended Memory	16
1. Usage of the U Disk	16
2. Usage of the SD Card	16
Download/Unload Application Programs	17
Connect to PC	17
Charging	18
Precautions	18

Startup and Shutdown

Startup: Please press and hold the Power Key for 5s.

Shutdown: Press and hold the Power Key for 5s → Click **Shutdown** → and **Confirm**

Locking and Unlocking the Screen: Press the Power Key very quickly to lock or unlock the Screen.

Forced Shutdown: If the device has not responded for quite a while, please press and hold the **Power Key** or the **Reset Key** to reboot the device.

Note: If not necessary, please do not try forced shutdown, and the User shall shut down the device according to relevant procedures.

Reset Key: Please press the Reset Key to conduct rebooting.

Usage of the Touch Screen

Click: Click and select the Icon or option you need.

 
Press and hold for a while: Select and press one Icon for a while and move it to the Desktop for display.

Pull and Move: Pull and Move one Icon to shift between two different interfaces.

- ☆ In order to protect the Touch Screen from scratches or crush risk, please do not place other objects on the Screen.

Interface Introduction

 
1. Desktop

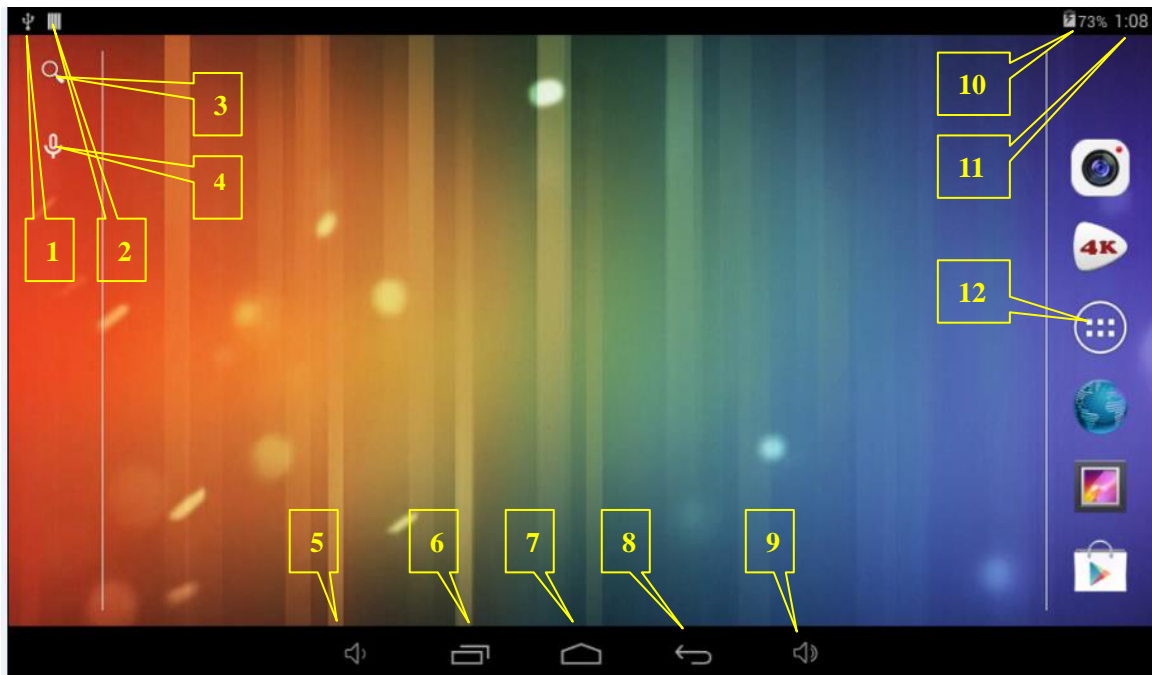



1:USB Connection Icon\2:USB Debugging Connection Icon which shall be selected through setting operation\3:google search\4: Voice Search shortcut function\5:Shortcut Key for Volume Down\6:Multitask Selection Key \7:Back to the Desktop from the Program Interface \8Shortcut Key

for Back to the Previous Interface\9:Shortcut Key for Volume Up\10:Battery Power Status\11:Time Display\12: View all Application Programs

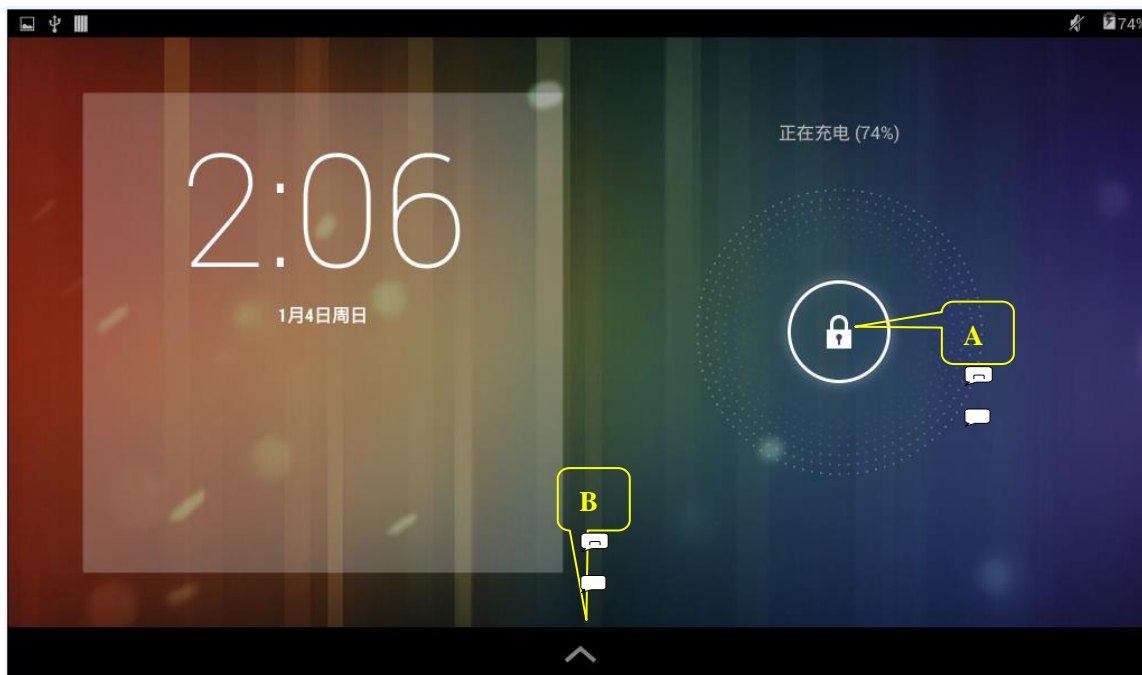2. Screen Lock



The device will enter stand-by status if there is no operation for quite a while or the User has pressed the Power Key. There are two stand-by statuses: Deep Sleep and Light Sleep --- under the Deep Sleep mode, the Touch Screen is locked and dark, and it will wake up and enter the Light Sleep mode after the User has pressed the Power Key. The default Stand-by Interface (Light Sleep) is shown in then

Diagram. Please press and hold the **Unlock Key**  to pull it to the Point A to unlock the Screen and press  and hold on to the Point B to Open the GOOGLE Browser for surfing the Internet.

Program Operation Instructions

1. Player

☆The Picture and Video formats shall be in conformity with the designated formats provided by the Supplier including AVI, WMV, RM, RMVB, 3GP, MP4 and VOB. Please confirm that with the Supplier.




1. Click the Icon  to enter the Playing interface.





- The device will enter the Video Playing Interface if the User has selected a video file to play. The Control Menu as shown in the following Diagram will appear on the Screen, and then the User can properly adjust the Videos (including Volume Down and Volume Up, Progress Bar, Video Brightness Up and Down, Previous, Pause/Play, Next, Screen Size, Small Window Playing, Playing Mode, Subtitle, Locking, Add a Video and Settings).

 
2. Music

☆ Please consult the Supplier for available Audio formats including MP3, WMA, OGG, FLAC, WAV, and AAC.


- Click the Icon  to enter the Playing Interface.
- Please select the Music you want to play according to the Route: Songs/Album/Artist/Playlist.

 
- Click the Icon  for Previous → Pause → Next.

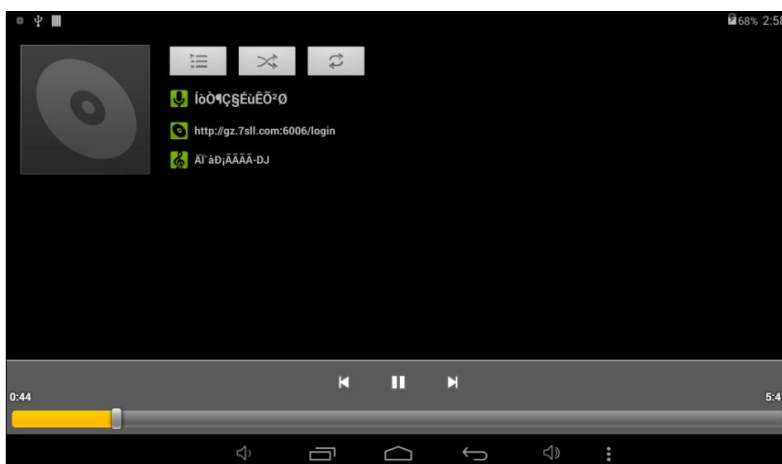

Click the Icon  or  to go back to the Desktop while the device is still playing music. By means of the Menu Key, the User can edit the music the device is playing. Relevant interface is shown as follow:




3. Sound Recorder

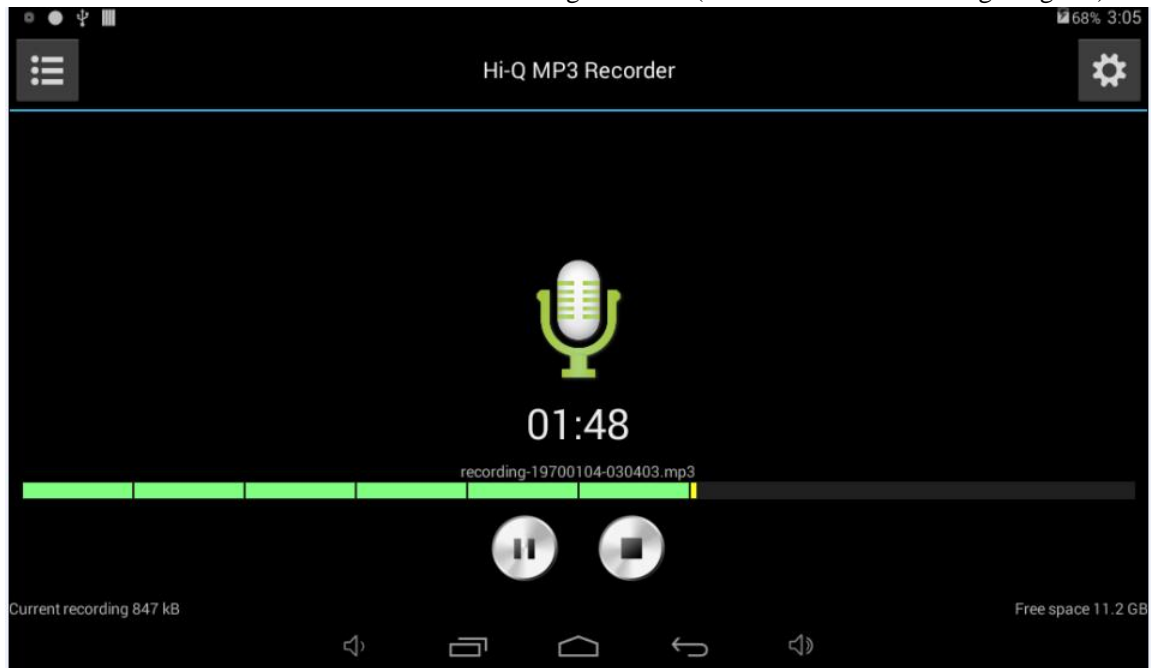
Click the Icon  to enter the Recording Interface (as shown in the following Diagram).

 


Click the Icon  to start recording and click and click the Icon  to finish recording.


 


Please click the Icon  to play the recording file the User just finished. The recording files will be named according to the time, and the User can randomly select one recording file to play; as shown in the above Diagram, the green part of the Progress Bar represents the sound wave and the recording time is being displayed on the bottom right corner.

4. Camera

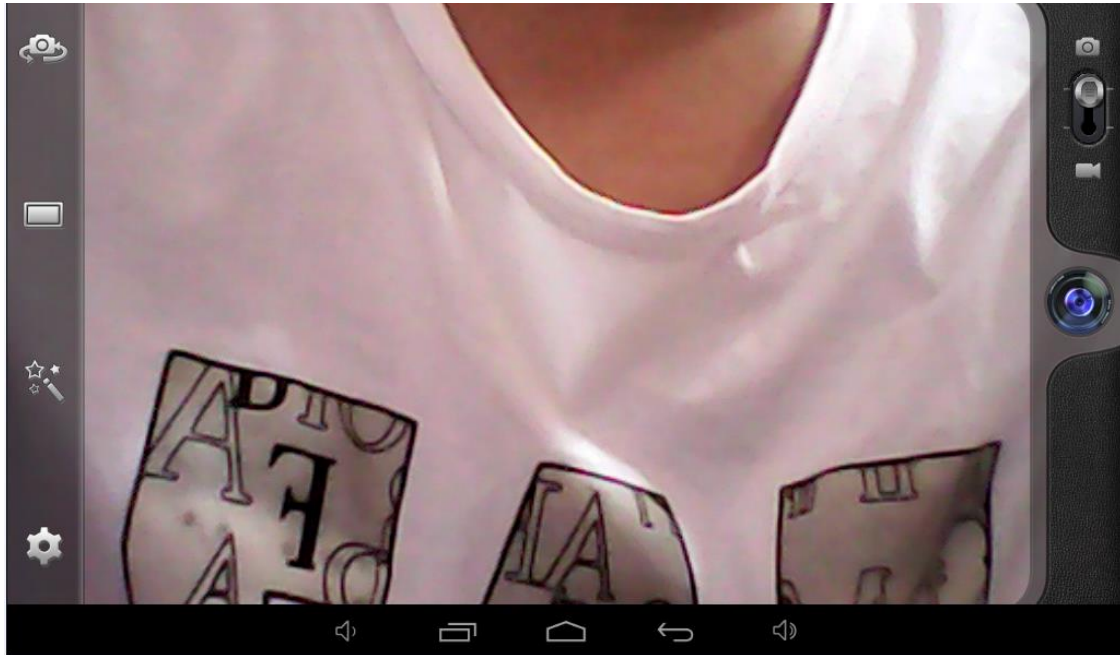


Click the Icon  to enable the Camera and the Interface will be shown as follow:




Take a Picture


1. After the Camera has been enabled, please click the Icon  to take a picture, and the picture will be automatically saved.
2. It is possible for the User to move the Picture into the Photo Album. Under the Camera Mode, the User can enter the Photo Album and view various photos in the form of Sudoku, and 3 pictures can be displayed at the same time at most.
3. If the User wants to go back to the Camera Interface, please directly pull the interface to the most front end and the device will come back to the Camera Interface without pressing other keys, continuing to take pictures.
4. Respectively click the Icons , , and  to conduct relevant settings.
5. Press the Back Key or Desktop Key to quit.

Record a Video


1. Click the Icon  to enter the Video mode, and you can start to record a video.
2. Click the Icon  to start recording and click it again to stop recording.
3. Relevant Video files will be saved.
4. Click the Icon  on the bottom right corner to play the video.

 
5. Press the Back Key and go back to the Camera Mode.

6. Click the Icon  and go back to the Camera Interface.

Note: You can click the Icon  to shift between the Front Camera and Rear Camera for taking a picture or recording a video. (Only for the double-camera Model.)

5. Browser

Click the Icon  to enter the Browser webpage:

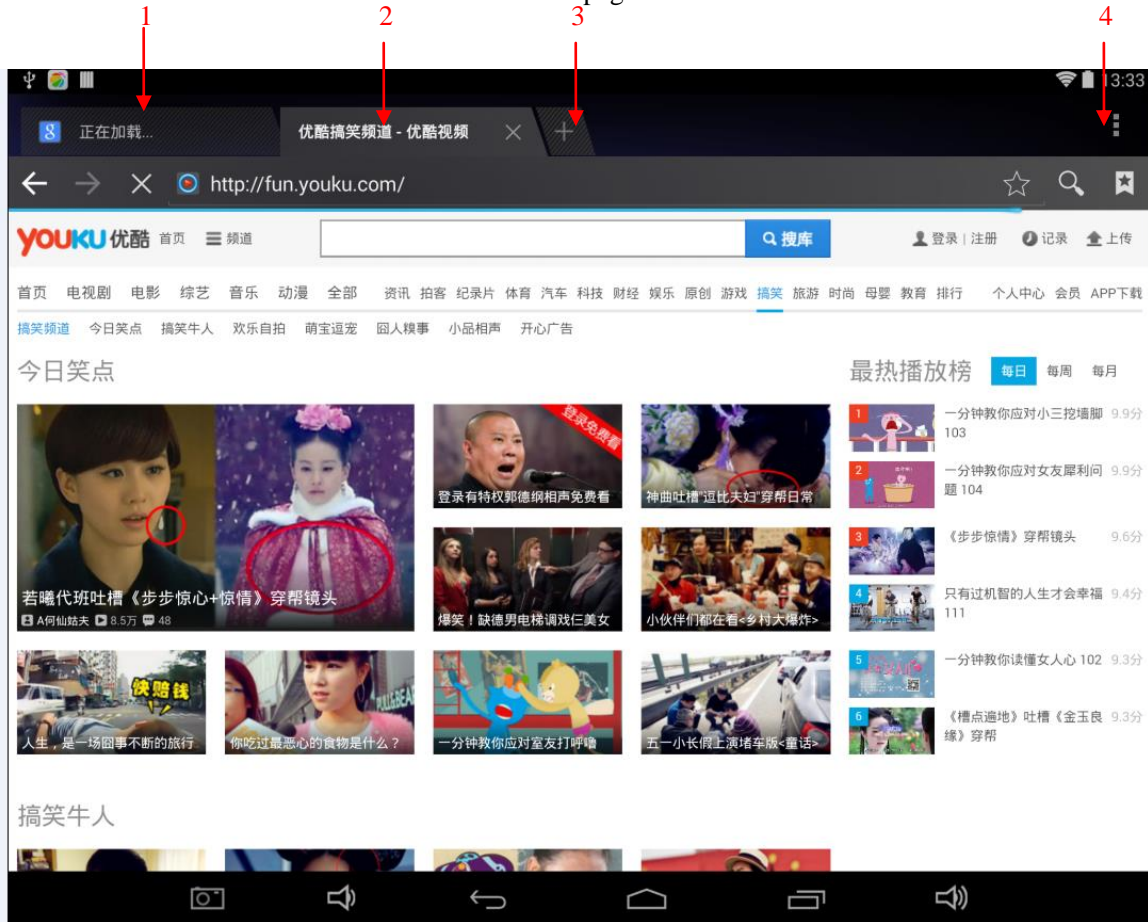

1: Previous webpage you have browsed and you can view it again as you like; 2: Current webpage; 3: Add a webpage; 4: Menu Key

6. Play Store

Open  to search and download relevant application programs.

Enter the Play Store for the first time and the System will ask you to log in google account (if you do not have a Email account, please apply for one account in <http://gmail.google.com>).

7. Calendar



Click the Calendar Icon

It is necessary for you to log in if you are using the Calendar for the first time. Please correctly input the Email address and password. Then, please click **Next** and finish the account configuration. After that, you can finally use the Calendar.

Add a New Activity

1. In the Calendar, please click and select the date you want for your new activity.
2. Select the activity time → Input relevant information for the new activity in detail.
3. Click **FINISH**.
4. Please press the Menu Key to select a Calendar Interface you want.

☆ *The Date in gray means that there is a new activity on that day.*

8. Clock



Click the Clock Icon to reveal the current date and time.

Alarm Clock

It is possible for you to set up several alarm clocks at the same time.



☆ *When the Icon appears on the Screen, at least one alarm clock will sound.*

Add an Alarm Clock



1. Click the Clock Icon
2. Press the Menu Key → **Add an Alarm Clock.**
3. Set the Alarm Clock you need.

☆ *If the User do not select **Repetition**, the Alarm Clock will sound for once and then be automatically deleted.*

4. Click **Enable the Alarm Clock.**
5. Click **FINISH.**

Close the Alarm Clock Prompt

 
When the Alarm Clock Time is up. A window with the Alarm Clock name will eject.

If you want the Alarm Clock to sound 10s later, please click and choose **Pause & Sound Again.**

 
Click **Cancel** to eliminate such prompt.

Enable an Alarm Clock

With respect to the repeated Alarm Clock you have set, you can temporarily cancel the Alarm Clock rather than deleting it.



1. Click the Icon to enable the Alarm Clock you want again.



2. Click the Icon to enable the paused Alarm Clock again.

Edit An Alarm Clock




1. Click the Icon and then Click the Alarm Clock Icon.
2. Click the Alarm Clock you want and then conduct relevant editing operation.

Delete An Alarm Clock


1. Click the Clock Icon  → click the Icon .
2. Click the Alarm Clock you want to delete and pull it to .
3. Click **Delete the Alarm Clock**.

Click the Icon  to go back to the Desktop.

9. Calculator


1. Click the Calculator Icon .
2. Click and select the numbers and symbols to conduct calculation.
3. Click **Clear** to eliminate the numbers and symbols one by one, and press **Clear** for a while to eliminate all numbers and symbols.

 
10. Downloads

1. Click the Icon .
2. View the software programs which have been downloaded at present and select the software application you want to conduct installation.

11. Maps

☆ *In order to enable this function, your device must be connected with the Internet.*

When the device has been connected with the Internet, please click the Maps Icon  to automatically locate the place where you stand; as shown in the following Diagram, please find the information you need;

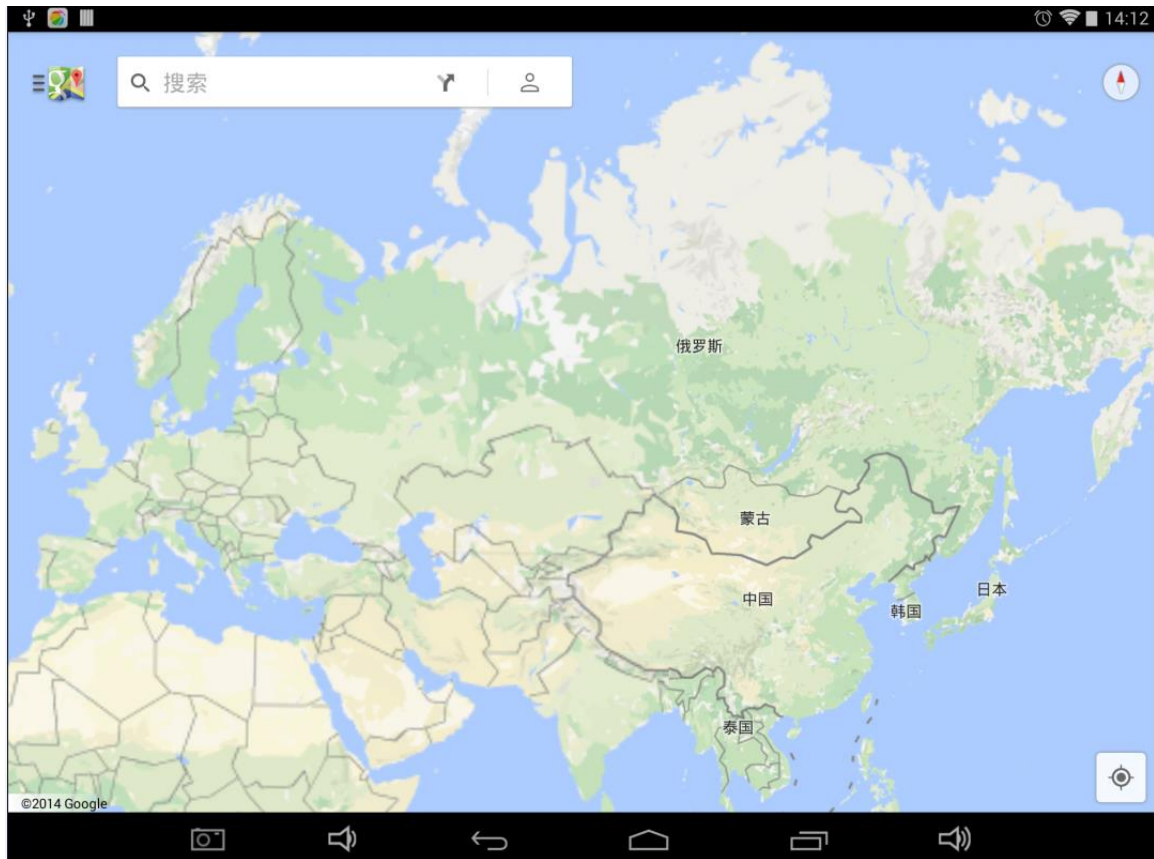

12. Email

☆ *This device supports POP3 and SMTP Email Accounts.*

Add one (more than one)Email Account

You can input one or more than one Email address as you like in this device.



1. Click the **Email Program** Icon
2. In the **YOUR ACCOUNT** Interface, please click **NEXT**.
3. Click the Options for Email Addresses, and then input your Email address.
4. And then correctly input your Email password.
5. Click **FINISH**.
6. Manual Settings(optional): The Server Configuration is to automatically fill the Supplier according to the User's Email Account (namely gmail.com and so on). However, if you want to change the Server Configuration, please click Manual Settings and conduct relevant settings.
7. Click **NEXT**.
8. Optional: Input the Account Name.
9. Input the Name for sending e-mails, and then click **FINISH**.

☆ *Upon the completion of settings, please confirm with your Email Supplier whether their server supports POP and SMTP transport protocol if your device cannot connect to a free Email Account.*

My Messages



1. Click the **Email Icon**.
2. If the User has only configured one Email Account, the User can open it very quickly; if the User has configured more than one Email Account, the list of Email Accounts will be displayed.
3. Click the Email Account you need, and then click **My Messages**.

View an E-mail


1. In **My Messages**, click and view the e-mail you want.
2. For attachments, please click and enable relevant application program; or you can click and save them to your SD Card.
3. If you want to reply an e-mail, please click **REPLY** or **REPLY ALL**.
 - a. Input the words you want to reply;
 - b. Click **SEND** to immediately send your reply e-mail; click **SAVE** to save your reply e-mail without sending or deleting it.
4. If you want to delete an e-mail immediately, please click **DELETE**.

Write a New Message

1. In **My Messages**, click **MENU** and select **WRITE A NEW MESSAGE**.
2. Click **SEND TO**, and then input the **Receiver's e-mail address**.
3. Or, if you want to copy a message or send a BCC (Blind Curtesy Copy) to the Receiver, please click **MENU**→add a copy of message or a BCC, and then input the Receiver's e-mail address.
4. Please input one Title for the message you want to send in the Title Bar.
5. Click **WRITE A NEW MESSAGE** and then input your personal information.
6. If necessary, please click **MENU**→ **ADD AN ATTCHMENT** to add the attachment you want to send.
7. When you finish writing the message, please click **MENU** and **SEND**.

Edit the Email Account



1. Click the **Email Icon**.
2. In **My Messages**, click **MENU** and select **Account Settings**.
3. Please set your Gmail account as you like.
4. Click the Icon  and go back to **My Messages**.

Delete An Email Account

☆If you have configured more than one Email Account and have deleted the default account, the next account in order will then be the default account in your system.



1. Click the **Email Icon**.
2. In **My Messages**, click **Menu**→ **Accounts**.
3. Click and delete the Account as you like.

4. In the **Account Options**, please click and **Delete** the Account you want.
5. Click **Confirm** to successfully delete the account.

Set a Default Email Account

 
Since you shall have a default Email Account, you need select one from your different accounts as the default Email Account.



 
1. Click the **Email Icon**.
2. In **My Messages**, click **Menu** → **Account Settings**.
3. Click **Default Account** for confirmation.

If you have deleted the Default Account, the next Account in order will then be the Default Account in your system.

13. File Manager/Explorer



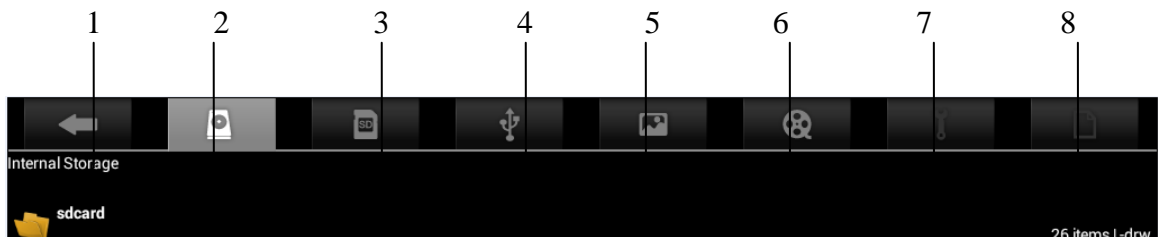


Click the Icon to view all files saved in the Memory Devices (including NAND FLASH, SD Card, and USB Storage) and to conveniently install relevant Android application programs for your device.



1. Home: Directly go back to the Home to display the SD Card, NAND FLASH and USB storage;
2. Local: Local Files;
3. TF Card: TF Card Files;
4. OTG: Read Files by means of OTG;
5. Picture: Picture Files;
6. Video: Video Files;
7. Memory Management
8. File Editor: Paste, Delete, Copy and Cut

Copy Files between Different Devices




 
By means of File Explorer, files can be copied and pasted between the external storage and the internal storage/PC. If files need to be copied into this device, please firstly copy that to the SD Card or USB Storage.

1. Click the Icon  or the Icon  to open relevant storage device and display the files saved in your storage devices.
2. Click the file or folder you want and hold on for a while, and then select **COPY**.
3. Click the Icon , and go back to Home to find the Storage Device Symbol → Click the Storage Device Symbol you want → Click **Editor** → **Select Paste**.

Delete the Files

Press the file or folder you need and select **DELETE**.

Settings


Wi-Fi and Network		
Wi-Fi		Configure and manage the wireless access point. (See WIFI Network Settings for details.)
Bluetooth	This device does not support	Please turn on the Bluetooth and click the Bluetooth device name, making it detectable and available for nearby Bluetooth devices.
Data Traffic Usage		Configure and manage the data traffic.
More...	Airplane Mode	On/Off
	Portable Hot Spot	Able to configure the WIFI Hot Spot
	Ethernet	Configure the Wired Network
	VPN	Configure the VPN
	Mobile Network	Configure the 3G Network (See 3G Network Settings for details)
	3G Support Information	Click and display the 3G Network Support List
Device		
Voice	Volume	Adjust the Media Volume, Alarm Clock Volume and Notice Volume. Click and Move the sliding block  , and then click CONFIRM .
	Touch Prompt Tone	Select the Prompt Tone as you like.
	Screen Lock Prompt Tone	Prompt Tone for locking and unlocking the screen.
Display	Brightness	Click and move the sliding block  to adjust the Screen's brightness, and then click CONFIRM .
	Wallpaper	Wallpaper Settings
	Dormant Status	Adjust the time for Dormant Status
	Font Size	Adjust the font size.
Storage	Memory Usage Condition	
Application	Application Occupation Condition	
Private Settings		
Location Information		Configure the Google Location-based service and Google search application.
Security	Screen Lock	Safeguard the Screen.

	User's Information	To display the User's information on the Screen
	Device Management	1. Add or delete a Device Manager. 2. Unknown APK Installation Settings.
	Credential Storage Password	Mange the application program to access the security credential and other credentials.
Language and Input methods	Language	Configure the default language.
	Keyboard and Input methods	Configure the default Keyboard and Input methods
	Voice	Configure relevant voice parameters
	Mouse/Touchpad	Adjust the mouse pointer's speed
Backup and Resetting	Option Settings	1. Backup/Restore the Device Data 2. Restore Factory Settings.
System		
Date and Time	Option Settings	Configure or Adjust the Date and Time for the device.
Auxiliary Function	Option Settings	Enable various functions including Screen Autorotation, Font Size Display and Touch Effect.
Print	Connect to the Printer	Install a Driver and connect with a Printer to print local and Internet files.
Developer's Options	Option Settings	The Developer's Basic Application Settings.
About the Tablet PC	View your PC's information	View the Status Information, Battery Service Condition, Legal Information, Model, Android Version, Kernel Version and Version Number.


Wi-Fi Network Settings

As the Wi-Fi connection is important to enable various functions of this device, please firstly configure the Wi-Fi network for your device.

1. Click the Icon  → **Settings** → **Wireless and Network**.
2. Please turn **ON Wi-Fi**.

The device will automatically search all available **Wi-Fi** networks. If the Icon  appears, the User shall correctly input the password before he conducts Wi-Fi connection.

3. Click the **Wi-Fi** Network you want → if necessary, please correctly input the password


→ click **Connect**, and the Icon  will appear on the Desktop when the Wi-Fi network has been successfully connected.

4. Click the Icon  and go back to the Desktop.

☆ *If the Wi-Fi Network has been hidden, your device will not automatically search it out. You shall click **Add Wi-Fi Network**, and then input relevant information to add the Wi-Fi Network.*


3G Network Settings


1. When you want to connect your device with the 3G network, you shall firstly select the correct 3G network card suitable to your device because this device only supports external USB 3G Network Card. Please consult the Supplier for suitable 3G Network Card model.
2. When the SIM card has been well installed, please connect the 3G network card with the HOST USB port by means of the USB OTG connection cable.

3. When the 3G Network card has been connected, click the Icon  Settings → **Wireless and Network** → **More** → **Mobile Network**, and then conduct 3G Network Settings.
4. The Route for enabling the Mobile Network is as follow: Check **Enabled Data Traffic** → **Data Roaming** and select the APN; then click **Menu** to select an available network. Finally, you can surf the Internet by means of the 3G Network.
5. Usually, the device can directly select and use the available 3G Network, but the User shall create a new APN and to conduct relevant network settings for some special devices in order to enjoy Internet service.

For example, China Unicom 3G Network Settings are as follow:

Name: 3GWAP / **APN:**3gnet / **Agent:** Not set/ **Port:** 80 / **User Name:** Not set/ **Password:** Not set/
Server: Not set/ **MMSC:** Not set / **MMS Proxy:** Not set/ **MMS Port:** Not set / **MCC:**460/
MNC:01/ **Authentication Type:** Not set/ **APN Type:** Not set/ **APN Protocol:** Not set

Upon the completion of settings, the device can successfully connect to the 3G Network, and the Icon  will appear on the Screen.

The Icon in gray is to search the available network, and the Icon in Blue means that the device has been successfully connected with the 3G Network. As shown in the Diagram , the device is conducting data transmission.

Usage of the Extended Memory

1.Usage of the U Disk

Please insert the U Disk to the OTG Port → Then insert the OTG Connection Cable into the HOST USB Port. When the U Disk has been well connected, you can start to use it.


- ☆ Please do not frequently insert and pull the U Disk; otherwise, the U Disk and even the Device may be damaged.

2.Usage of the SD Card

☆ *This device can support 32GB Memory Card at most.*

Please insert the memory card into the slot, and push it with your finger. At that moment, the main screen will appear **Preparing SD Card**, and finally the TF Card will be well prepared for your service.

Remove the SD Card

 
Please firstly close all programs or files in the SD card. Click the Icon  → **Storage** → **SD Card** → **Unload the SD Card**. Gently push the SD Card, and it will be ejected. Finally, you can take it out.

- ☆ Please do not quickly repeat inserting and pulling the SD Card; otherwise, the SD Card may be damaged.
- ☆ Memory Card of famous brand is suggested so as to avoid incompatibility with the device.

Download/Unload Application Programs



☆ It is possible for the User to search interesting and free Android application programs in great variety on the Internet. You shall start the Browser and try to search **Android Application Programs**.

It is convenient for you to install your purchased or downloaded Android application

programs by means of the File Manager 

1. Copy the .apk files you want to the SD Card or USB Storage device → Insert the SD Card into this device, or connect it with this device by means of the U Disk.

2. Click the **File Manager** Icon 

3. Click the Icon  or the Icon  to find the .apk files or folder.
4. Select one .apk file → **Install**. When such application program has been installed, its Icon will display itself among other application programs.
5. Click and directly run relevant program; or click and go back to the File Explorer.

Install Application Programs through Online Downloading

It is possible for you to download Android application programs from the Internet or other Android stores, and to quickly install them into your device.

1. Click the **Browser** Icon  to connect with the Internet.
2. Input the URL and click the download link of the application program you want.
3. Upon the completion of downloading, please press the downloaded file (downloading records) for a while → Click **OPEN** → **Install**.



Unload Application Programs

 
You can unload the Android program very quickly.

1. Click **MENU** → **Settings** → **Application Programs** → **Application Program Management**.
2. Click the Application Program you want to unload → **Unload**.
3. Click **CONFIRM** and finish unloading.

Connect to PC

 
1. When the Tablet PC has been connected with your PC, the tablet PC can serve as a portable storage device. Please use the USB cable to connect it to your PC with one end to the USB OTG port and another end to the USB port of PC;

2. With successful connection, the Icon  will appear on the screen of the Tablet PC; please click the Icon , and then select **Turn on the USB Storage**. After that, it is possible for the User to conduct Data Storage between your PC and the Tablet PC, as shown below:

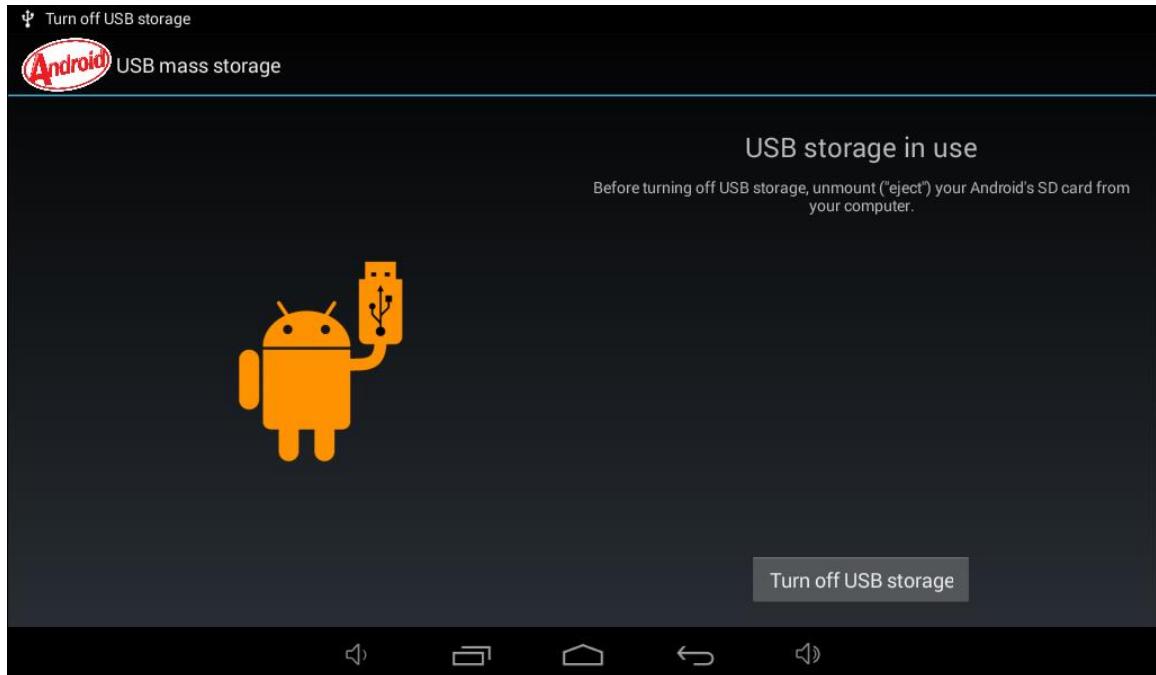

Charging

This device can be charged by means of the Power Adapter with one end connecting to the Power Supply and the other end to the supply hub of this device.

During the charging process, the Battery Icon will display itself as ; when this device has been fully charged, the Battery Icon will display 100%.

- Although you can use this device during charging process, the charging time will become longer.
- Use this device once a week at least.
- Please fully charge this device at regular intervals.
- Please do not keep this device powered off for quite a long time.

Precautions

Please pay special attention to the following notes for the sake of safety:

- Please do not expose this device to rain or humid environment.
- Please keep this device away from sunlight and heat sources.

- Please protect the Power Cable. When it has been connected with the power supply, please do not tread on it or place other objects above it. Please pay special attention to the joint of the Power Cable Connection Device.
- Please use the original power adapter to conduct charging for this device. Other chargers may cause damages to this device.
- Please do not disassemble the casing or repair this device by yourself.
- Please take good care of the Display Screen. Please use soft cloth to clean the fingerprint or dust on the screen rather than hard and rough cloth.
- **Pictures in this document are only for demonstration. Please refer to the actual situation.**

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.