



GH680/GH680F/GH688/GH688F
Digital Camera
User Manual

Copyright

 
Copyright 2013 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

All other logos, products, or company names mentioned in this manual may be the registered trademarks or copyrights of their respective companies, and are used for informational purposes only.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of BenQ Corporation to notify any person of such revision or changes.


This user manual aims to provide the most updated and accurate information to customers, and thus all contents may be modified from time to time without prior notice. Please visit <http://www.benq.com> for the latest version of this manual.

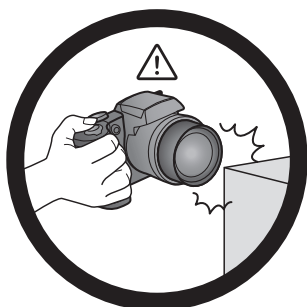

Do not hold the camera by excessive force. Plus, be sure to protect the camera from strong impacts.



 To avoid accidental falling, please attach the neck strap to the camera and always put the camera around your neck.

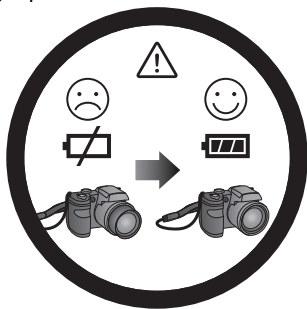


If the batteries suddenly depleted and caused the lens fail to retract, please carefully protect the lens to avoid collision and insert batteries with full power ASAP.



When the camera is not in use, always turn the power off. Plus, before storing the camera in its case, make sure the lens has retracted successfully and you put the lens cover back. If you do not intend to use the camera for a long time, please remove the batteries from the camera and store the batteries carefully.



 Keep your camera away from sharp objects and avoid collision.

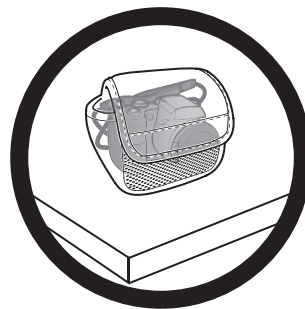

When the camera is not in use, please place it in the pouch and a steady place. Plus, always keep your camera away from pressure to avoid possible damage.

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

This product comply with the FCC portable RF exposure limits set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Table of Contents


Touring the camera	7
Checking the package contents	7
Camera	8
Front & back views	8
Top & bottom views	8
Right & left views	9
4-way control and OK button	9
Preparing the camera for use	11
Attaching the strap	11
Installing the battery	12
Charging the battery	13
Battery status	14
Installing an SD card	14
Turning On and Off	15
Setting the OSD language	15
Setting date and time	15
Using the LCD screen	16
Using the shutter	17
Opening the flash	17
Operating the camera	19
Capture mode	20
Shooting still images	20
Mode dial	21
Using the self-timer	22
Focus mode	22
Flash mode.....	23
Exposure value	23
Exposure meter	23
Focus Range/Wide Zoom Indicator/Zoom Ratio	24
O.I.S./E.I.S.	24
Shutter speed	24
Focus frame	25
Aperture value	25
Number of recordable image	25
Burst mode/AEB (Auto Exposure Bracketing)	25
White balance.....	26
ISO	26
Metering	27
Flash EV	27
Color tone	27
Continuous shooting setting	28
Histogram	28
AE/AF Lock	28
Wind cut	29
Storage media	29
Movie option	29
Scene mode	29
Filter mode	34
Using panorama mode	35
Using manual exposure mode.....	37
Using aperture priority mode	37

Using shutter priority mode	37
Using zoom framing assistant	37
Shooting movies	38
Using PIV function	38
Using the capture menu	40
Resolution	40
Quality	40
Digital zoom	40
AF assist lamp	40
Date stamp	41
Instant review	41
Motion detection	41
Q key	41
Playback mode	42
Viewing still images	42
Viewing videos	43
Options for playback and editing	43
Other settings	50
Accessory: remote control (GH680F/GH688F only)	52
Accessory: lens hood	52
Connection to the camera	53
Wired connection	53
Connecting the camera to a TV set	53
Connecting the camera to a computer	53
Connecting the camera to a printer	53
Wireless connection (GH680F/GH688F only)	56
To smart devices	56
Using your smart device as a remote controller	56
Using your smart device as a photo viewer	57
Using your smart device as a GPS logger	58
To your camera	59
Becoming a member of BenQ Cloud	59
Tethering social network service settings with BenQ Cloud	60
Photo sharing via BenQ Cloud over Wi-Fi on your camera	60
Of your camera network settings	64
Wi-Fi ID	64
Q key	64
Send image resolution	64
Network	65
MAC address	66
Logout BenQ Cloud	66
Specifications	67
Troubleshooting and service information	68
Technical support	69

Touring the camera

Checking the package contents

 Carefully unpack your kit box and ensure that you have the following items.

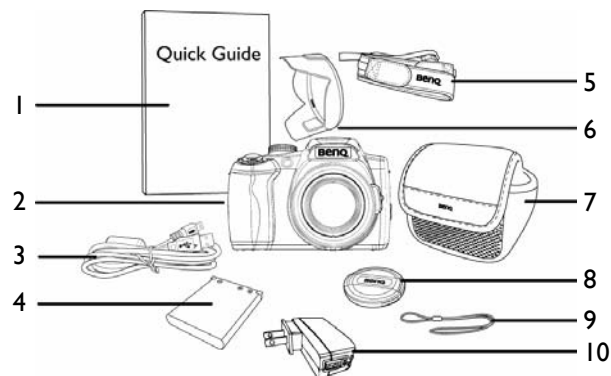


- | | |
|---------------|---|
| 1 Quick guide | 2 Digital Camera |
| 3 USB cable | 4 Li-Ion battery |
| 5 Neck strap | 6 Lens hood |
| 7 Pouch | 8 Lens cover |
| 9 Lens strap | 10 USB adapter (The type of plug
may vary depending on the
country or region) |



- All pictures, screen captures, and icons used in this manual are for illustration only. Actual and available products, accessories, as well as their appearance may vary depending on sales region.
- If any of the items is missing or damaged, contact your dealer.
- Save the packaging for future shipment or storage.
- It is normal for the camera to become warm during operation because the camera casing might conduct heat.

Camera

 Front & back views

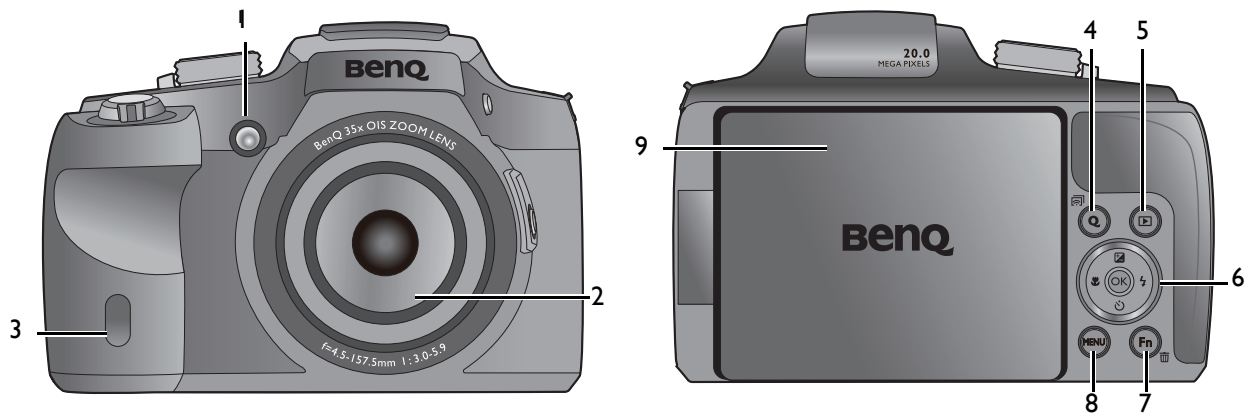


- 1. AF Assist Lamp / Self-timer LED indicator
- 2. Lens
- 3. IR Receiver

- 4. Q key (Wi-Fi for GH680F/GH688F only)
- 5. Playback button
- 6. OK button / 4-way control
- 7. Function/Delete button
- 8. Menu button
- 9. Swivel LCD screen

Self-timer LED indicator light behavior

Indicator	State	Description
Self-timer LED	Blinking red	The self-timer function is activated.

 
Top & bottom views

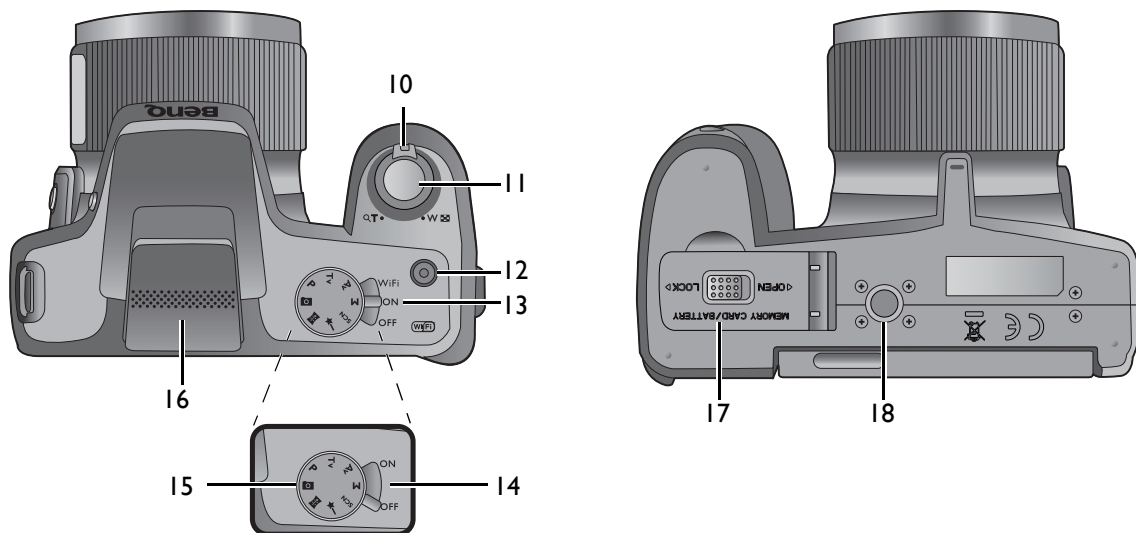


- 10. Zoom lever
- 11. Shutter button
- 12. Movie record button
- 13. Power/Wi-Fi switch (GH680F & GH688F only)
- 14. Power switch (GH680 & GH688 only)
- 15. Mode dial
- 16. Microphone

- 17. Battery/card cover
- 18. Tripod mount

 Right & left views

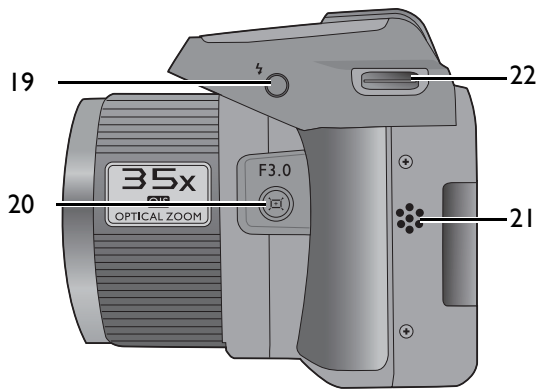

 - 19. Flash button
- 20. Zoom framing assistant button
- 21. Speaker
- 22. Strap eyelet

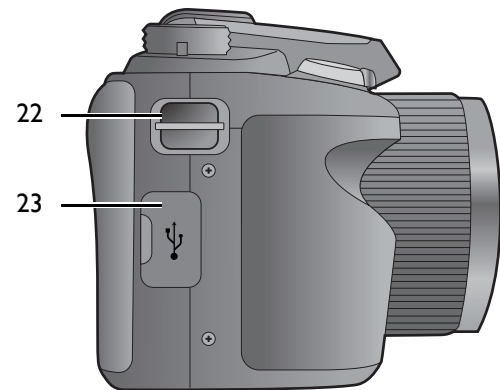

- 22. Strap eyelet
- 23. USB/AV Out

4-way control and OK button

You can choose camera settings by pressing the 4-way control or **OK** button.



2. Left/Focus:

- Scrolls through focus options.
- Views the previous image or video clip.
- Rewinds video playback.
- Exits a submenu or navigates through menu selections.

4. Self-timer/Down:

- Scrolls through self-timer options.
- Stops video playback.
- Navigates through menu and submenu selections.

1. EV/Up:

- Changes EV settings.
- Navigates through the menu and submenu selections.

3. Right/Flash:

- Scrolls through flash mode options.
- Views the next image or video file.
- Forwards video playback.
- Enters a submenu or navigates through menu selections.

5. OK:

 
- Confirms a chosen setting.
- Starts/Pause video playback.

Preparing the camera for use


This section will guide you on how to prepare the camera before its initial use.

Attaching the strap


1. Make sure the lens cover and the strap are well combined.

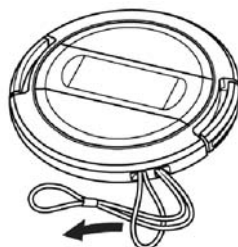


2. Attach the lens cover to the camera as the illustration below.

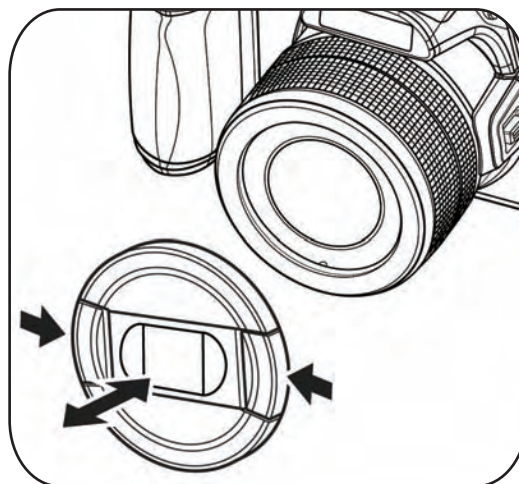 

 3. Follow the illustrations below left to right to attach the strap to the camera.

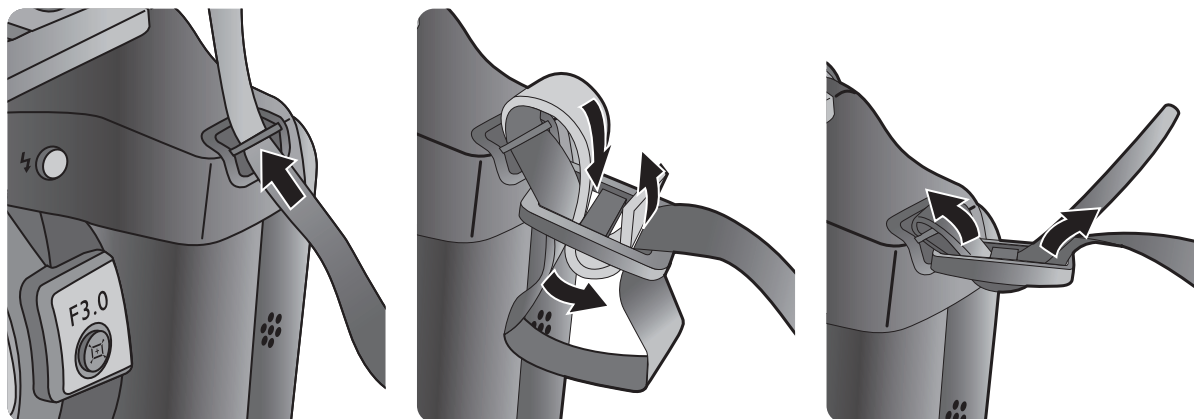

 4. Apply the same steps on the other side of the strap eyelet, and you are done attaching the strap to the camera.

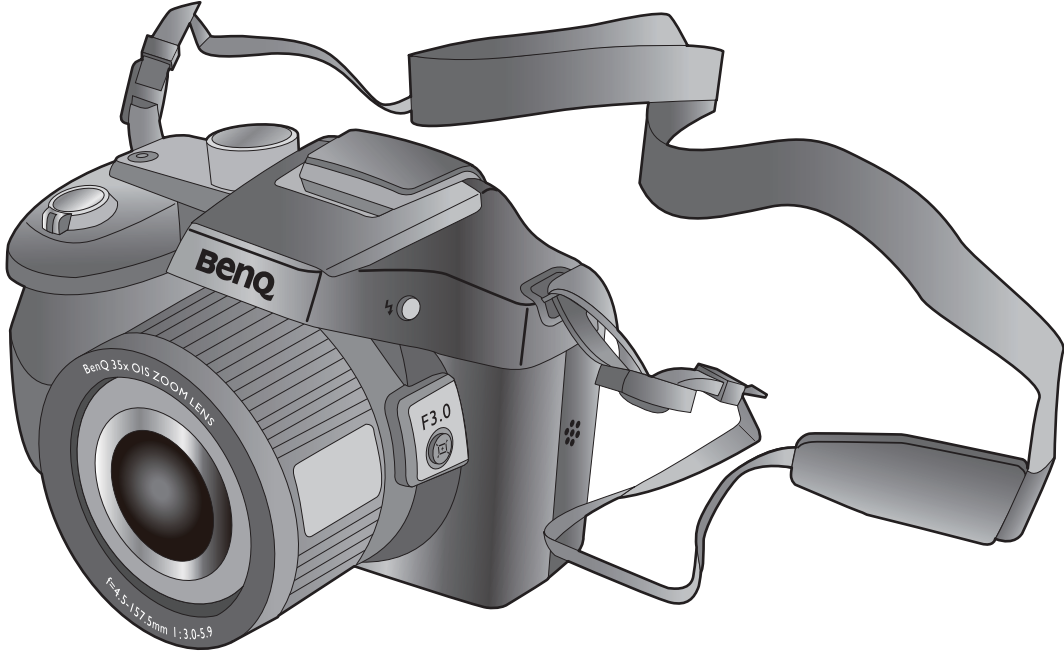



- Wrapping the strap around your neck is dangerous. Refrain children from playing with the strap.
- Remove the lens cover before using the camera.

Installing the battery


Use only the specified battery for the camera, and always turn off the camera before removing the battery.

To install the battery:

 
 
- I. Unlock and open the battery/card cover.

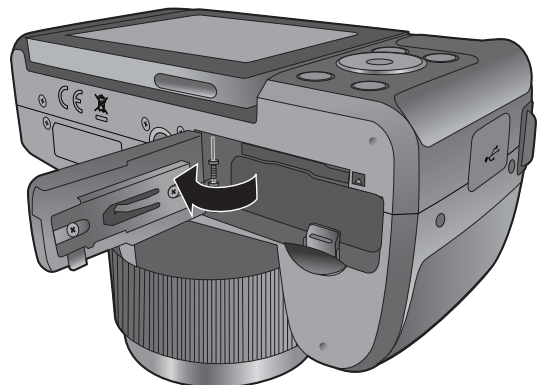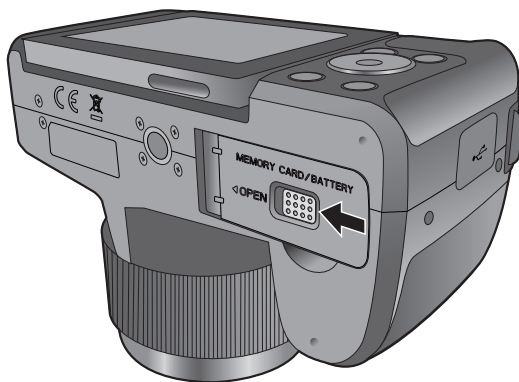

 2. Fully insert the battery in the correct direction by matching the polarity label on the battery slot.

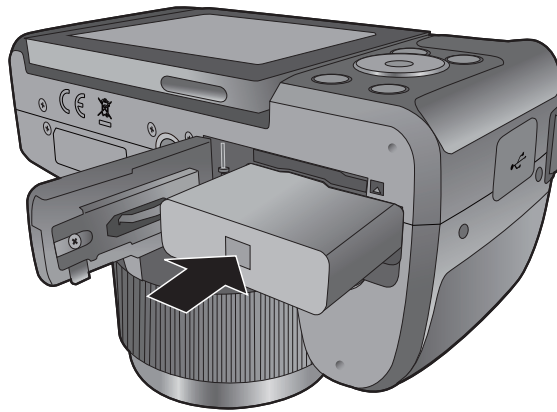

  3. Close and lock the battery/card cover.

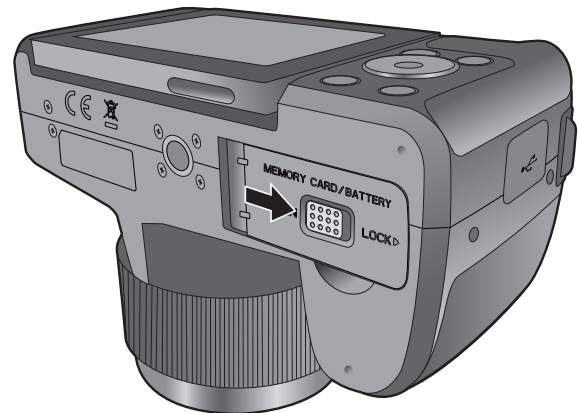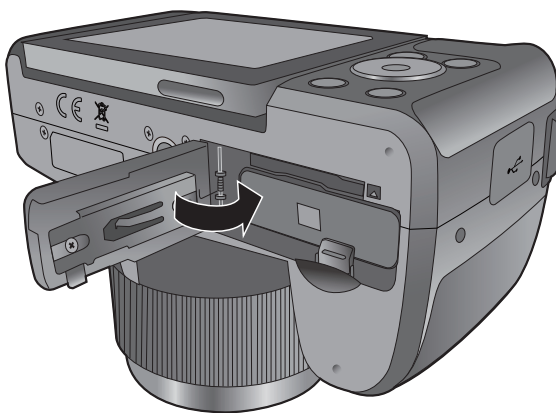

- Turn off the camera before removing the battery.
- Use only the specified battery type. Using other battery type may damage the camera and invalidate the warranty.
- Ensure that the battery is inserted into the product with correct polarity. Incorrect polarity may damage the camera or cause fire.
- Download all pictures and remove the battery from the camera if you are going to store the camera for a long time.
- The battery may be warm after being used. This is normal and not a malfunction.
- When using the camera in a cold environment, keep the camera and its battery warm by holding it inside your jacket or another warm protective environment.

Charging the battery

You must charge the battery before using the camera for the first time.

1. Open the USB/AVport cover.
2. Connect the end of the smaller plug of the USB cable to the camera.
3. Connect the other end of the USB cable to the USB adapter.

4. Plug the USB adapter to a wall outlet to start charging.



- Actual charging time depends on current battery capacity and charging conditions.
- You can also charge the battery via PC.
- Only use the supplied 5W adapter.

Battery status

You may check the battery status on LCD screen when turning on the camera.


Icon	Description
	Battery power is full.
	Battery power remains adequate.
	Battery power is low.
	Battery power is very low. You should replace the battery ASAP.

Installing an SD card


The camera comes with internal memory for storing captured images, video clips, or audio files. You can also add an SD card to store more files.

To install an SD card:

 
1. Unlock and open the battery/card cover.

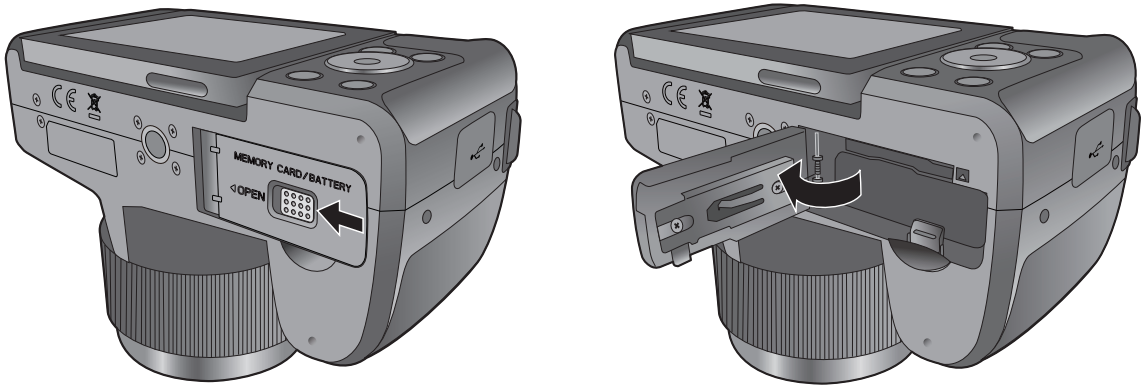

 2. Insert an SD card in the correct direction.

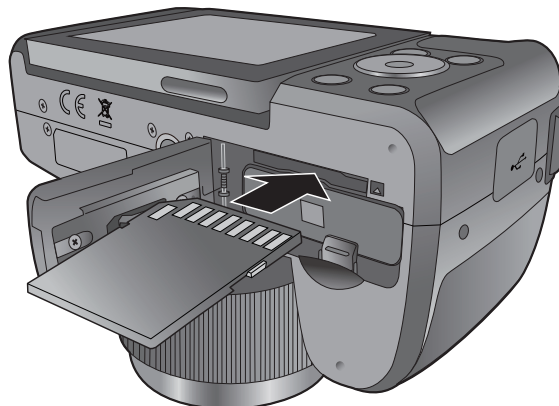

 3. Close and lock the battery/card cover.

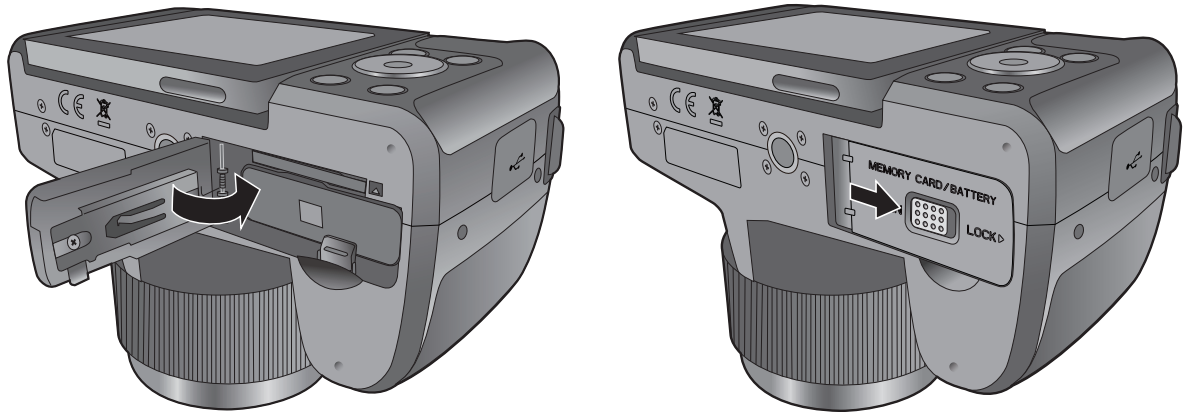

To remove an SD card:

1. Unlock and open the battery/card cover.
2. Lightly press the edge of the memory card to eject.
3. Close and lock the battery/card cover.



Before initial use of an SD card, please format the card first by pressing **MENU** > > **Format** > **OK** / > **Yes** > **OK**.

Turning On and Off



Before turning on the camera, be sure to remove the lens cover. Otherwise, the lens will not be extended and the camera will beep for a few times.

Switch the power lever by the mode dial to **ON**, and the camera is turned on in capture mode. Switch the power lever by the mode dial to **OFF**, and the camera is turned off.

You will be prompted to setup the OSD language and the date and time when the camera is turned on for the first time.

Setting the OSD language

Selects the language to be shown on the screen.

- To select a language:

1. Press **MENU** > .
2. Use 4-way control to select **Language**, and then and press .
3. Use 4-way control and press to locate the language you want.

Setting date and time

When using the camera for the first time or when the battery has been removed from the camera for a long time, you need to set the date and time. The date and time is recorded when a video or image is captured.

 
- To set date and time:

1. Press **MENU** > .


2. Use 4-way control to select **Date & Time**, and then press **OK**.
3. Use 4-way control to select date, time and date format or move to another column as needed. Press **OK** to set the date and time.

Using the LCD screen


Flip the LCD screen outwards 180° to fully open.

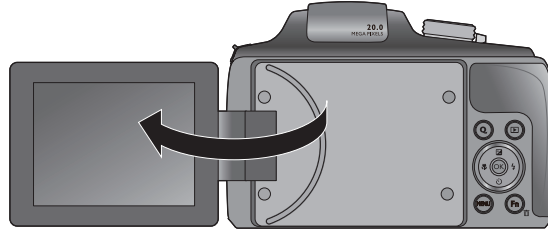

 
- For high- or low-angle photography, twist it down at the appropriate angle. You can rotate the screen to a maximum of 90° downward.

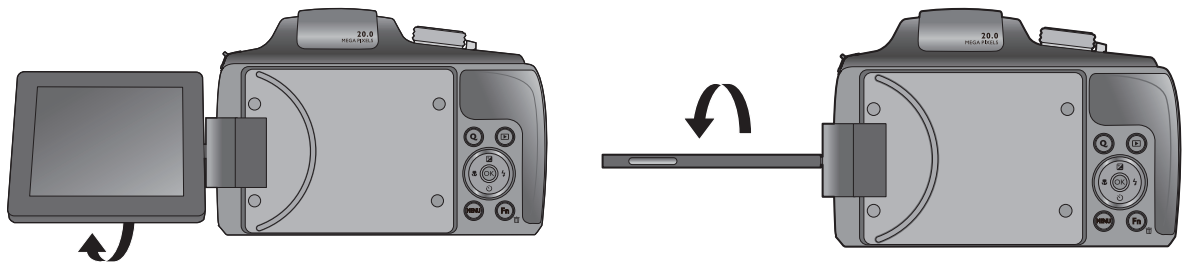

 - For self portrait, rotate it up at the appropriate angle. You can twist the screen to a maximum of 180° upward.

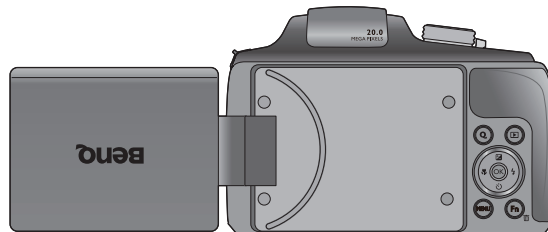

 
- In addition to flipping the LCD screen, you can rotate it 180° upward and fold it fully to the back of camera to secure its position.

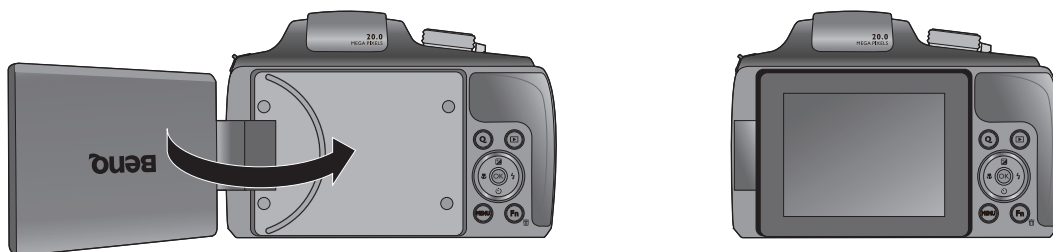

- To avoid damage to the screen hinge or LCD screen, do not twist the screen more than the angle allowed or place excessive force on the hinge or screen.
- The LCD screen on this camera is manufactured with sophisticated technology, and more than 99.99% of the pixels on the LCD screen meet standard specifications. Yet, it is possible that less than 0.01% of the pixels on the LCD screen may have some light spots or show unusual colors. This is normal and does not indicate screen malfunction, nor will this affect the pictures you take with the camera.
- The LCD monitor looks darker in strong sunlight or bright light. This is not a malfunction.

Using the shutter

 - Press the shutter halfway to automatically adjust focus and exposure.
- Once the focus is set, the focus frame color will turn green.
- Press the shutter down fully to capture the image.

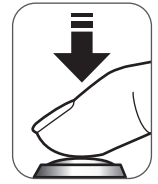

To prevent your images from being blurred, always hold the camera steadily while pressing the shutter. This is especially important when you are shooting under low lighting conditions, under which your camera may reduce the shutter speed to ensure your images are properly exposed.

Opening the flash

You need to manually open the flash before switching the flash mode.

- To open the flash:

Press the flash button to open it.



Do not use your hands to forcibly open the flash.

- To close the flash:

Push down the flash to close it.



When the flash is closed, flash mode is automatically set to flash off.

