

FASHION 2 PLUS

by **CellAllure**[®]

Instructions / Instrucciones
English / Español



Contents

PRECAUTIONS.....	2
01. UNDERSTANDING YOUR PHONE.....	3
02. REMOVING BACK COVER/BATTERY INSTALLATION.....	4
03. INSERTING/REMOVING SIM CARDS.....	4
04. GETTING STARTED.....	5
05. TOUCH BUTTONS.....	6
06. HOME SCREEN.....	6
07. SETTINGS MENU.....	7
08. MAKING AND RECEIVING CALLS.....	8
09. ANSWERING AND REJECTING CALLS.....	9
10. SENDING A MESSAGE.....	9
11. FOR MULTIMEDIA MESSAGE.....	10
12. SOFTWARE KEYBOARD.....	10
13. HOW TO CONNECT TO A COMPUTER.....	11
14. CONNECTION TO INTERNET.....	11
15. MOBILE DATA AND INTERNET CONNECTION.....	11
16. BLUETOOTH.....	12
17. CAMERA.....	12
18. TROUBLE SHOOTING.....	13
19. HOW TO INSERT THE SIM CARD & MEMORY CARD...14	



Warning

**Do not to use the
phone while its charging
in high voltage**

PRECAUTIONS

On the Road

Using a phone while driving is illegal in many countries. Please refrain from using your mobile while driving.

Near Sensitive Electronics or Medical Equipment

Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

While Flying

Your phone can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.

At a Petrol Station

Don't use your phone at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.

Making Repairs

Never take your phone apart. Please leave that to the professionals. Unauthorized repairs could break the terms of your warranty. Don't use your phone if the antenna is damaged, as it could cause injury.

Around Children

Keep your mobile out of children's reach. It should never be used as a toy as this is hazardous.

Near Explosives

Turn off your phone in or near areas where explosive materials are used. Always obey local laws and turn off your phone when requested.

Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press "Send." Explain exactly where you are and don't hang up until help has arrived.

Working Temperature

The working temperature for the phone is between 0 and 40 degree Celsius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.

At very high volume, prolonged listening to a mobile phone can damage your hearing.

1. UNDERSTANDING YOUR PHONE



1	Sensor
2	Speaker
3	8MP front camera
4	Volume up
5	Volume down
6	Power key
7	Touch button/Moves back one step
8	Touch button/Takes you to home page
9	Touch button/Opens recently visited pages
10	13MP camera
11	USB charging port
12	3.5mm headphone jack
13	Flash/Torchlight
14	2MP camera
15	Fingerprint Scanner
16	Loudspeaker

 
2. REMOVING BACK COVER/BATTERY INSTALLATION

1. Lift and remove rear case as shown below on the bottom left corner of the phone.
2. Insert the battery matching up the gold terminals on the top left of the battery and clip in place.
3. Reinstall the back cover and click in place.



3. INSERTING/REMOVING SIM CARDS

- Note: Please ensure your phone is powered "OFF" before inserting SIM cards.

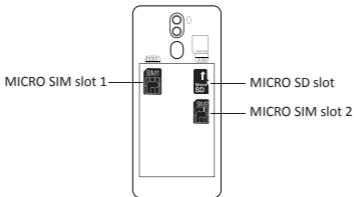

1. SIM Slot 1 takes a standard SIM. Please insert SIM 1 with gold connectors facing "DOWN" as indicated on the phone itself, taking special note of the direction to be inserted. Follow this carefully to avoid damaging your phone or the SIM. Push gently until in place.
2. SIM Slot 2 takes a micro SIM, Note: Please insert SIM 2 with gold connectors facing down as indicated on the phone itself, taking special note of the direction to be inserted, follow this carefully to avoid damaging your phone or the SIM card. Push the SIM gently to lock in place. To remove the SIM cards gently slide the SIM cards downwards.

Inserting/Removing SD Card

- The SD card slot is located next to the SIM card slots near the battery terminals as indicated on the phone itself.
- Gently insert the SD card noting the correct direction as indicated on the phone and push until the SD card clicks in place.
- To remove simply pull gently.

Power ON/OFF

ON

Press the POWER button for a continuous 5 seconds until the phone turns "ON."

OFF

Press the POWER button for a continuous 5 seconds. A selection menu will appear.

Select "OFF" to power "OFF."

Other selections are "REBOOT" to restart the mobile and "AIRPLANE MODE" to put the mobile in flight mode.

4. GETTING STARTED

Charging the Battery

The mobile has a rechargeable Lithium-ion battery.

1. To charge, connect the AC power adapter to the micro USB jack on the top side of the mobile.
2. The battery icon shows the battery status and charging status.



3. The mobile can be used even if the battery is being charged.
4. Recharge the battery for at least half an hour if it has been idling for a long time and fails to start itself.
5. Regularly recharge the phone at least once a month.

Disposal of Batteries

The battery contains polluting material. Please hand it in to a recycling centre to dispose of.

5. TOUCH BUTTONS

The  button displays a menu of recently opened applications.

The  button returns immediately to the main screen.

The  button moves back one step to the previous menu/page.

 
Screen Lock

To lock the phone's screen, simply press the "POWER BUTTON."

Screen Unlock

When the phone is in idle mode, press the "POWER BUTTON" once to wake up the phone.

Screen unlock: To unlock, swipe up as illustrated below:

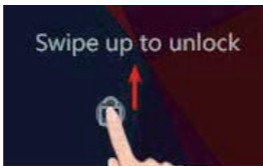

6. HOME SCREEN

 
The home screen will look similar to the picture opposite. To switch between screens, simply slide your finger left or right across the display.

The status bar and navigation buttons are always visible, no matter which home screen you are currently viewing. The desktop contains shortcuts to your most-used applications and widgets. The icon will launch the Application menu.



The status bar displays system information, such as current time, wireless connectivity and battery charge status.

From the home screen, slide your finger from the top of the screen down to the centre to access the notification panel as illustrated below.

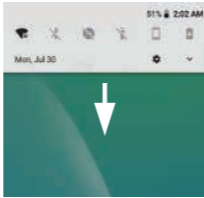


Drag the notification menu down to display the second fast access menu.

Through this menu it is possible to modify the functions such as brightness, auto rotation, Wi-Fi, Bluetooth and more as displayed below.




7. SETTINGS MENU

The settings menu allows you to adjust your phone's system configuration.

- To change settings first press the Settings  icon.
- Touch a category title to view further options on the right side of the screen.

- Wi-Fi – Connect to/disconnect from wireless networks, view connection status.
- Data usage – Enable/disable mobile data, view current usage, set mobile data limit. (note: this function is available only on devices supplied with 3G card functionality)
- Bluetooth – Connect or disconnect Bluetooth devices.
- Display – Adjust display settings.
- Smart Gesture Settings – “ON” / “OFF.”
- Audio Profiles – Adjust the various audio settings such as ringtones.
- Prompts and notifications – Adjust various notification settings.
- Storage – View your phone’s internal and external storage settings.
- Battery – View the status of your battery and make adjustments to power consumption.
- Apps – A list of all apps downloaded and running.
- Delete applications – Select apps to delete.
- Location services – Change approximate location detection, improve search results, GPS satellites.
- Security – Adjust phone’s security settings.
- Accounts – Add or remove email and Google™ accounts such as gmail, Google.
- Language & input – Select Language Add to the dictionary, edit on-screen keyboard settings, vocal search, etc.
- Backup & Reset – Backup and restore data, perform factory reset, etc.
- Date & Time – Set date, time zone, time, clock format etc.
- Accessibility – Set up large text, auto-rotate screen, speak password etc.
- About Phone – Displays information about your phone.

8. MAKING AND RECEIVING CALLS

Once your SIM cards are installed turn on your phone and wait a few minutes for your phone to find a network. Then select the Call  icon. Here you can dial a number or select a contact from your stored contacts list to call. You can also view outgoing and incoming calls that have been made, as well as adding or removing contacts.



• Google is a trademark of Google LLC.

9. ANSWERING AND REJECTING CALLS

To answer a call – Slide your finger to the Green Call answer key.

 


To reject a Call – Slide your finger to the Red Call End key.

To message – touch the message icon.

10. SENDING A MESSAGE


On the home screen, Messaging  , enter message edit interface.

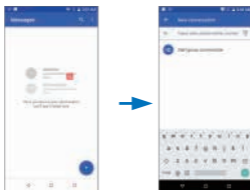

For Text Message

1. Input recipient number on the Type name or number. While you input the number, matching contacts will appear under the bar for you to select.


Note:

- Click to  open contact search screen and select any contact to add to recipient bar.
- Please use commas between each recipient.

2. Click Compose to start composing a message.

3. After you finish typing, click Send.

11. FOR MULTIMEDIA MESSAGE

 
1. Input recipient number on the Type name or number bar.
2. Click Menu > Add Subject, then type the Subject.
3. Click Compose to start composing a message.
4. Click  add Attach.

Note:

- You can select Capture picture, Pictures, Capture videos, Videos, Record audio, Audio, Contact, Calendar, Slideshow from the attachment list.

5. After you finish typing, click Send.

12. SOFTWARE KEYBOARD

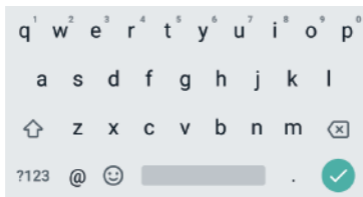

Touchscreen

The touchscreen responds to finger touch.

Note:

- Don't place any object on the touchscreen for it may damage or crush the screen.

Single Click: Single click one icon to choose the icon or option you want.

Long Press: Press and hold an icon to delete or move an icon or app.

Drag: Press the icon and drag it to a different screen.

13. HOW TO CONNECT TO A COMPUTER

Note:

- Turn on your phone before connecting it to a PC by USB cable.

1. Use a USB cable to connect the phone with a computer. The phone will automatically detect a USB connection.
2. A notification will pop up "USB connected" – Select the desired functionality.
3. The PC will detect an external disc named "FASHION 2 PLUS" this is the internal memory of the phone.
4. The USB connection has been successful.

14. CONNECTION TO INTERNET

Wireless:

1. Select "Settings"
2. Select "Wi-Fi" and slide OFF to ON status.
3. All detected wireless networks in the area will be listed. Click to select desired wireless connection.
4. Enter network key if necessary.
5. Once connected to a wireless network, settings will be saved.
6. Wireless icon will appear on the taskbar when connected successfully.

Note:

- When the phone detects the same wireless network in the future, the device will connect to the network automatically with the same password record.

15. MOBILE DATA AND INTERNET CONNECTION

Please note: Cell Data may be turned "OFF" from the factory, to allow Data to flow through your network provider. Please turn Cell Data "ON" either from your quick drop down menu or in Settings – Cell Data. You will not be able to access the Internet when Cell Data is "OFF" without being connected to Wi-Fi.

Note: Mobile data charges apply when this setting is "ON."

Web Browsing

Connect to the Internet and launch the browser.



16. BLUETOOTH

Select "Settings", select Bluetooth from "OFF" to "ON."





Search for the device you would like to pair with and select "PAIR."

You will see a message "Connected Successfully."

17. CAMERA

Touch the icon  to enter camera mode and the interface is shown as follows:




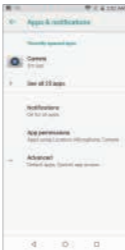 
1. Touch the icon  to take a photo.
2. Touch the icon  to start camera recording.
3. Touch the icon  on the top right to see the previous picture and to delete, share or set it as wallpaper. Click return button to exit camera interface.
4. Touch the icon  to switch from front to back camera.

18.TROUBLE SHOOTING

Close Application

When an application is not responding you can manually shut the app down in “**Running Services**” menu. This will ensure the system responds as desired. Please shut down all idle applications to release memory and get the system speed back to normal.

To close the application, click the icon  on the shortcut bar to enter the system configuration interface. Select the **Apps & notifications** and the interface is shown as follows:



Tap the application you want to close. A pop-up window will be displayed. Tap “**Stop**” to close that application.

Restore Default Setting

If you want to reset the phone to factory settings and erase all materials, please press **Settings** → **Backup & Reset** → **Factory Data Reset**.

19. HOW TO INSERT THE SIM CARD & MEMORY CARD



1 MICRO SIM slot 1

2

Micro
SD

— MICRO SD slot

3



— MICRO SIM slot 2

1 MICRO SIM card 1

2 MICRO SD card

3 MICRO SIM card 2

WARNING:

Factory Data Reset setting will delete ALL your data and system configuration as well as any downloaded apps. Please use this function carefully.

SPECIFICATIONS	
CPU/PCB solution:	MTK 6580
Display:	5.72" HD IPS touch
SIM card support:	Dual SIM
Memory:	1GB
Storage:	16GB
GSM:	850/900/1800/1900MHz
WCDMA:	850/1700/1900MHz
Wi-Fi:	Yes
Front camera:	8MP
Rear camera:	13+2MP
Bluetooth:	Yes
GPS:	Yes
SD card support:	Up to 64GB
Charger:	Telephone 3.8V Input: 100-240V 50/60 Hz, 300mA Output: DC 5.0V 1A ca
USB:	Micro USB
Audio jack:	3.5mm jack
Battery capacity (mAh):	2800mAh Li-ion high performance
Supplied accessories:	1 Handset, 1 Battery, 1 Charger, 1 Data cable, 1 Headset, 1 User manual, 1 Screen protector.
OS:	Android™ 8.1 (Go edition)
Other:	FM radio, Flashlight.

Images used are for illustration purposes only and may differ from actual product. Restrictions Apply.

Thank you for your purchase of the CellAllure® FASHION 2 PLUS Smartphone.

Google and Android are trademarks of Google LLC.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **0.157W/Kg** and when worn on the body, as described in this user guide, is **0.287W/Kg**(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is **0.335W/Kg**. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RFexposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **2AAE9CAPHG53** Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a sub-stancial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **10mm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters,

and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.