

music anywhere

memo

Care and maintenance

- Keep memo and accessories dry and away from the fire, water, and high voltage equipment to avoid damage to the internal circuit of the product.
- Clean any liquid or sweat from the surface of the product immediately to prevent water penetration.
- Store in a cool and dry place to avoid direct sunlight or high temperature.
- Do not shake memo vigorously and avoid impact.
- Clean only with a dry soft cloth. Household cleaners or solvents can damage the finish of your memo.
- Protect the power cable from being walked on or pinched, particularly at plugs and connection points.
- Only use attachments/accessories specified by the manufacturer.
- Unplug memo and its accessories during lightning, storms or when unused for long periods of time.
- Warning: to reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

Warranty

This product's warranty is only applicable for initial purchasers as end users, not including other personnel or transferees.

- **Warranty scope and term** | This product come with 12 months warranty from the date of issuance of related product purchasing invoices or receipts.
- **Warranty exclusion** | This product's warranty doesn't include defects incurred by the following reasons: inappropriate or improper usage or maintenance; not abiding by operation instruction; accidents; high humidity; insects; thundering; electric surge; power supply connection with improper voltage; Changes to default setting without authorization; improper packaging or transportation damage; damage incurred by using together with non-memo products; product usage without modification or adjustment in countries not for product designing, manufacturing, or without usage authorization, or product damage due to modification.
- **Service we provided** | Within the warranty period, we reserved the right and our own discretion to repair for free(using new parts) or replace any defective part within reasonable time limit. For more after-sales protection, please go to the official website www.nexum-design.com

Specification

Rated power	6W
Frequency response	80Hz~20KHz
Signal to noise ratio	≥80dB
Power supply	5V / 2A
Music play time	WiFi up to 8 hours / Bluetooth up to 15 hours (varies by volume and audio content)
Battery charge time	5V 2A: approx. 2.5 hours
Input connections	Wi-Fi ,Bluetooth,Line-in (requires extra accessories)
Dimensions (L x W x H)	127mm*82mm*28mm
Weight	236g
Bluetooth Version	v4.2
Bluetooth transmitter frequency range	2.402GHz – 2.480GHz
2.4G Wi-Fi network compatibility	IEEE 802.11b/g/n
2.4G Wi-Fi transmitter frequency range	2.412GHz – 2.462GHz

his device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Contact us



+886-2-87707666

cs@nexum-design.com

Design By NEXUM | Assembled In China




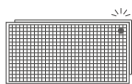
Quick Start

/ WiFi mode play

* Power-on initial settings

step 1 / turn on the memo

Long press  for three seconds to turn on the memo, and wait for LED light in blue flashing for the WiFi connection mode



step 2 / open NEXUM App for connection setup


Open the NEXUM app (please refer to the download link), follow the instructions to complete the setup, There will be a "beep" sound when the network setting is completed



NEXUM APP

step 3 / listening to music

Enjoy the music instantly from AirPlay, DLNA, Spotify Connect and more

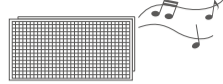

Tips: WPS quick connection settings

If the home WiFi router has "WPS key", just press the "WPS key", then press  on memo to complete the connection.


* WiFi mode is only suitable for use in the environment with wireless network connection (indoor)

Use Amazon Alexa Voice Service

1. Download the Amazon Alexa app.
2. Sign in your Amazon account via "NEXUM" APP. Once linked, short press  button and wait for the tone. Then talk to memo directly.

More Functions




After successfully connect to Wi-Fi, sign in your Amazon account via "NEXUM" APP. Once linked, short press  button and wait for the tone. Then talk to memo directly, you will be able to ask Alexa to play music, news, check the weather, and more. See the "things to try" card to explore what you can do with Alexa.

Explore the Alexa App to see thousands of skills.

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Bluetooth Connection Mode

Short press  button to switch memo to the Bluetooth mode, LED light is in white flashing. Turn on Bluetooth on your device (like a smart phone, tablet, PC, Mac, etc.) and connect to memo. LED light is in solid white when memo is connected and now you can play music wirelessly.


Remarks:

*When memo is not connected to the power adapter, it will automatically power off if there is no music playing or other operation for more than 30 minutes.

*When the power indicator light is flashing automatically and you want to charge and play music at the same time, it is suggested to charge with a 5V 2A adapter. If a 5V 1A adapter is applied under this condition, there will be some music distortion in the early stage of charging.



Control Panel

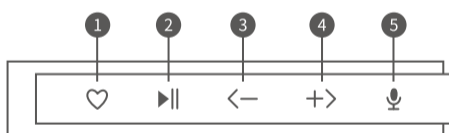



1. Play song list
Short press (Play / Switch) preset playlists.
Long press 3 seconds will save the current playlist (up to 6 groups)
2. Play/Pause
3. decrease volume / Press for 3 seconds to play previous song
4. increase volume / Press for 3 seconds to play next song
5. Wi-Fi mode: short press to use Alexa
Bluetooth mode: short press to answer/hang up phone, long press to reject phone call



- 6 Power button: Press for 3 seconds to Power on/Power off
Mode switch: Short press to switch Wi-Fi mode or Bluetooth mode
- 7 WPS: Press once to set the network configuration
Reset: Press and hold for 5 seconds to restore the factory settings
Bluetooth mode: short press once to enter the pairing mode
- 8 5V 1A~ 2A power interface

Magnet adhesion position

*Important Safety Tips: When using magnet function, make sure the surface smooth, avoid product damage and falling

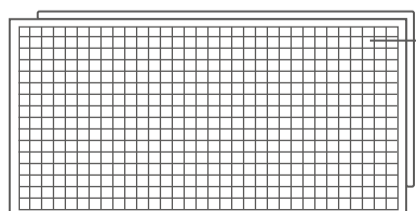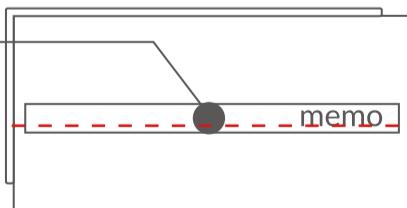

- 9 Mode indicator Light:
Blue flashing: Waiting for Wi-Fi connection
Blue solid: Wi-Fi connected
White flashing: Searching for Bluetooth
White on: Bluetooth connected
- Power Indicator Light
Solid: Fully charged
Flashing: Charging/Battery capacity is less than 20%
*Battery capacity detection (automatic detection when power off)