



OPERATING FREQUENCY	240MHz - 247.5MHz
ERP (MAX.)	<math>3.0008m</math>

1. Pull the left joystick of the remote control forward (backward) to move the vehicle forward (backward); 2. Pull the left joystick of the remote control forward (backward), put the right joystick to the left (right), and the vehicle will turn left (right)