

# USER MANUAL


E560-003

Radio Control Toys



## 1 Main parameters

Material: plastic and electronic components  
Batteries: Car battery: 4.8V AA rechargeable battery;  
Remote controller battery: 2 pcs of 1.5V AA batteries.

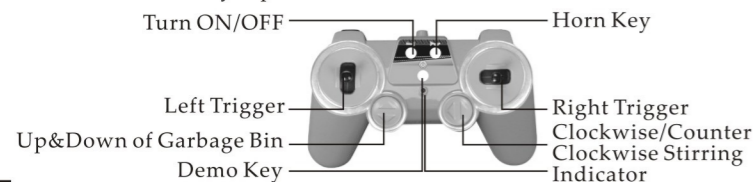


## 2 Battery Installation

1. Open the cover of battery case locates in the back of controller, inserts 2 pcs of 1.5V AA batteries into the battery case, and then screw the cover (Fig 2A).
2. Please screw out the cover at the back of car by screwdriver, open the cover as the arrow showed, insert 1pcs of 4.8V AA battery, then screw the cover (Fig 2B).




Fig 2A

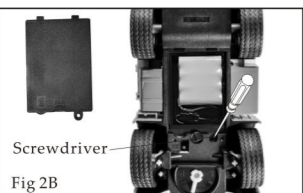

Screwdriver

Fig 2B

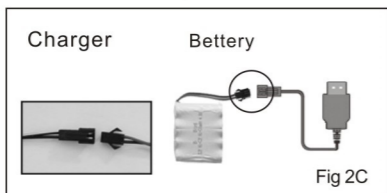

Charger

Battery

Fig 2C

**Notice:** This product shall be charged for two to three hours. The supporting USB charger shall not be used for other devices other than this product.

## 3 2.4G Auto Coding (Fig 3A)

1. After installing the batteries of truck and remote controller, open the switch of both. The indicator of remote controller and the front lights of truck would be flashing slowly, and then at a state of auto-coded. When the car with a sound of DI-DI, it means the auto-coding is successfully.
2. One remote controller only could code one car. After the success of coding, there is non-interference of each car.
3. If the remote controller could not find out the 2.4G signal of the car in 1 minute, it would turn in a sleeping state (light off of the indicator). To press any key to activate.
4. To remake a pair with other cars or remote controllers after turning off the power of both.



Fig 3A



Forward

Fig 4A

Backward

## 4 Basic Operation & Functions

1. Turn ON/OFF
  - To press the ON/OFF key, there would be a start-up sound; to press the key again after starting to turn off the power.



Turn Right

Turn Left

Fig 4B

## 2. Horn Key

- To press the Horn Key on remote controller after starting the car, the car would emit a simulated sound.

## 3. Forward/Backward

- To move the Left Handle forward/backward, the car would go forward/backward. (Fig 4A)

## 4. Turn Left/Right

- To move the Left Handle forward/backward, Right Handle turns left/right, the car would turn left/right. (Fig 4B).

## 5. Trash transportation

- To press the Up & Down of Garbage Bin button, the trash could be littered onto the trash chute. (Figure 4C)



Fig 4C

## 6. Trash Loading

- To press the Clockwise/Counter-clockwise Stirring Button, the trash could be transported from the trash chute to the storage section of the body. The minimum volume articles as trash could not be smaller than 5\*5mm, the maximum could not be larger than 10\*10mm. (Figure 4D)



Fig 3D

## 7. Manual function

- The trunk could be tilted forward to display the detail, plus the lift gate
- opens and the body inclines to dump the contents.

The big trunk can be tilted manually (Figure 4E)

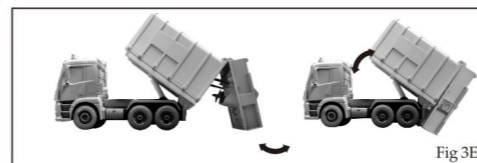


Fig 3E

## 5 Advanced Functions

### 1. DEMO Function

- To press the DEMO key, the car could operate a series of the functions automatically; to exit this function through pressing any key.

### 2. Auto off

- After turning on the remote controller, the car would be auto off without receiving any signal from the remote controller by 60sec.

### 3. Multi-playing function

- The product is remote controlled by 2.4GHz, so many cars could be played together by players.

## 6 Recharging

Notice: Please push the power switch to "OFF" position if the product will not be used for a long time. Take the batteries out of the remote controller and the truck for storing. Please charge the battery for 4 to 5 hours, 8 hours for initial use.

## 7 Notice

1. Don't play the toy on the road, select a safe place for operating to avoid dangerous.
2. Plays the toy in water may cause short-circuit damage. Please use the dry cloth to clean the car.
3. If abnormal speed or reaction, it may be because of insufficient battery power, please charge the battery.
4. The batteries should be charged under adult supervision. Please use the batteries recommended.
5. Please install the battery in a correct polarity.
6. Do not mix new and old batteries together, short-circuited.
7. Please charge the battery before initial use.
8. Please check the plug, case and other units of charger regularly to make sure that it is not broken. Don't use again if you find abnormality of the charger.
9. Please do not connect the product to different performance power.

Frequency bands : 2405MHz to 2475MHz

Maximum output power : -10.4dBm (Declaration for EU)

Manu facturer : Doubleeagle Industry (China) Limited.

Address : Xingda Industrial Park, Chenghai District, Shantou City, Guangdong Province, China.

Importer : JAMARA e.K.

Address : Inh. Manuel Natterer

Am Lauerbühl 5 - DE-88317 Aichstetten

CHOKING HAZARD-small parts, not for children under 3 years.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.