USER MANUAL

1 Main Parameters

Item No.: E571-003

Material: plastic and electronic components


Batteries: Car battery: 1pc of 3.6V AA rechargeable battery Remote controller battery: 2pcs of 1.5V AA batteries




2 Battery Installation


- 1.Open the battery cover of remote controller as the Fig 2A showed, inserts 2pcs of 1.5V AA batteries and then screws the cover.
- 2.Open the cover under the truck by screwdriver, inserts 1pc of 3.6V AA rechargeable battery as the correct polarity, and then screw the cover. (Fig 2B)



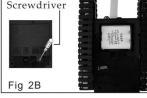

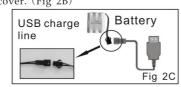

Notice: USB charging time is about 3 to 4 hours.

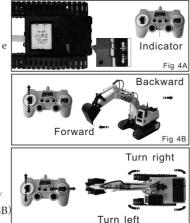

4 Basic Operation and Functions

- 1.Forward/backward:To push the Left Trigger ahead/back, the truck would go forward/backward.(Fig 4B)
- 2.Turn Left/Right:To push the Left Trigger forward/backward, and Right Trigger turns left/right, the truck would turn left/right. (Fig 4C)
- $3. Excavating: press \ the \ key \ of \ "Excavating" \ after \ starting \ the \ car, \ the \ car \ will \ do \ a \ motion. (Fig \ 4D)$

- 4.Unloading: press the key of "Uoloading" after starting the car, excavator will do a motion. (Fig 4D)
- 5.Left/Right Rotation: press the key of "Left(or Right) Rotation", excavator will do a motion of left (or right) rotation.(Fig 4E)

Auto-OFF: after starting the excavator, the car will automatically shut down without receiving any controlling signal in 60 seconds. then all the functions are at a status of standby.

5 Notice

- 1.Don't play the toy on the road, select a safe place for operating to avoid dangerous.
- 2. Plays the toy in water may cause short circuit damage. Please use the dry cloth to clean the car.
- 3.If abnormal speed or reaction, it may be because of insufficient battery power, please charge the battery.
- $4. The \ batteries\ should\ be\ charged\ under\ adult\ supervision.\ Please\ use\ the\ batteries\ recommended.$
- 5. Please install the battery in a correct polarity.
- 6.Do not mix new and old batteries together, short-circuited.
- 7. Please charge the battery before initial use.
- 8. Please check the plug case and other units of charger regularly to make sure that it is not broken. Don't use again if you find abnormality of the charger.
- 9. Please do not connect the product to different performance power.

CHOKING HAZARD-small parts, not for children under 3 years.

Specifications colors and contents may vary from illustrations.

Frequency bands: 2405MHz to 2475MHz
Maximum output power: -5.70dBm (for EU)

Manufacturer: Doubleeagle Industry (China) Limited.

Address: Xingda Industrial Park, Chenghai

District, Shantou City, Guangdong Province, China.

Importer: JAMARA e.K.

Address: Inh. Manuel Natterer

Am Lauerbühl 5 - DE-88317 Aichstetten Germany


changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class

digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.



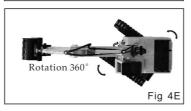

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.