 


IMPORTANT SAFETY INSTRUCTION

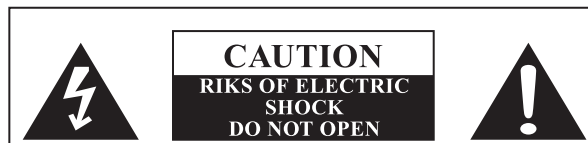

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



 
DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER

Invisible and hazardous laser radiation when open and inter-lock failed or defeated. Avoid direct exposure to beam.

FCC WARNING:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LASER SAFETY : This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.
CAUTION : USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

1) Read these instructions.

All the safety and operating instructions should be read before the product is operated.

2) Keep these instructions.

The safety and operating instructions should be retained for future reference.

3) Heed all warnings.

All warnings on the product and in the operating instructions should be adhered to.

4) Follow all instructions.

All operating and use instructions should be followed.

5) Do not use this apparatus near water.

Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

6) Clean only with dry cloth.

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug.

A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11) Only use attachments/accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

An appliance and cart combination should be moved with care.

Quick stops, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

15) Power source

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

16) Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17) Overloading

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) Object and liquid entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper to grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

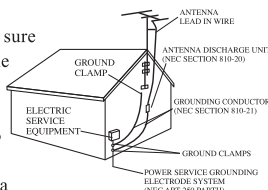

20) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operation condition.

23) Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will and require extensive work by a qualified technician to restore in the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance-this indicates a need for service.

25) Note to CATV system installer

 
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

CARE AND MAINTENANCE

Caring for Compact Discs

- Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the compact disc.
- Do not attach adhesive tape, stickers, etc. to the compact disc label.
- Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit.
- If a compact disc skips or gets stuck on a section of the compact disc, it is probably dirty or damaged (scratched).
- When cleaning the compact disc, wipe in straight lines from the centre of the compact disc to the outer edge of the compact disc. Never wipe in circular motions.

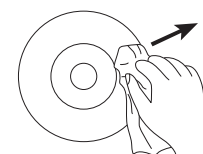

- This unit is designed to play only compact discs bearing the identification logo as shown here. Other discs may not conform to the CD standard and may not play properly.
- Compact Discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing instruments, or the ink, may damage the surface.

Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$15.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email:service@craigelectronics.com

CRAIG®

3-PIECE CD SHELF SYSTEM

 
 
AM/FM Stereo Radio and
Bluetooth® Wireless Technology

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

LOCATIONS OF CONTROLS


MAIN UNIT:

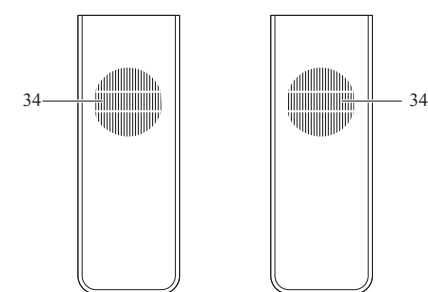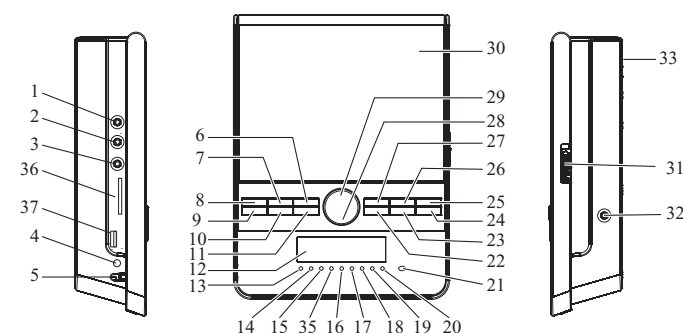

1. AUX IN JACK
2. PHONE JACK
3. SPEAKER L JACK
4. DC IN JACK (DC 5.9V; ⏻)
5. ANT (FM ANTENNA)
6. ►/ TUNE + BUTTON
7. ⏸ (Play/Pause) BUTTON
8. ◀/ TUNE - BUTTON
9. M - (Memory down) BUTTON
10. SNOOZE / ■ (Stop) BUTTON
11. M + (Memory up) BUTTON
12. LED DISPLAY
13. STANDBY INDICATOR
14. SLEEP INDICATOR
15. SNOOZE INDICATOR
16. REP (Repeat) INDICATOR
17. CD INDICATOR
18. FM INDICATOR
19. AM INDICATOR
20. AUX INDICATOR
21. IR (REMOTE RECEIVER)
22. PROG/M/TIME SET BUTTON (Program/Memory/Time Set) BUTTON
23. REPEAT BUTTON
24. FUNCTION/⏻ (Standby) BUTTON
25. ALARM 2 BUTTON
26. ALARM 1 BUTTON
27. SLEEP BUTTON
28. VOL -/MIN (Volume down/Minute set) BUTTON
29. VOL+/HOUR (Volume up/Hour set) BUTTON
30. CD DOOR
31. CD DOOR OPEN SWITCH
32. SPEAKER R JACK
33. BATTERY DOOR (on the rear)
34. SPEAKERS
35. PROG (Program) INDICATOR
36. SD Card SLOT
37. USB PORT

CONNECTIONS:

 Connect the small plug from the speakers to the Speaker Jacks on the side of main unit as the figure below:

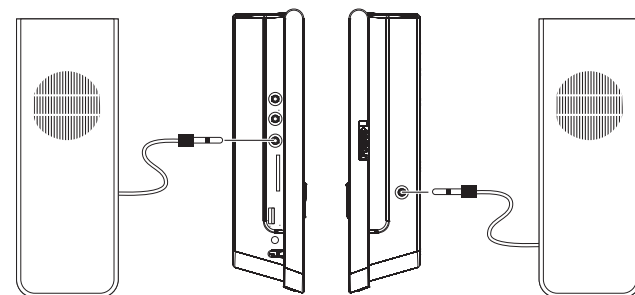

POWER SOURCE:

 
MAIN UNIT:

Connect the small plug of supplied AC/DC Adaptor to the DC IN Jack on the Left side of the unit then plug the AC/DC Adaptor to a wall outlet having AC 100-240V~, 50/60Hz.

NOTES:

1. The AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.
2. If the AC/DC Adaptor is disconnected or if there is a power failure, this electronic clock is designed to continue operating internally (without showing the time on the Clock Display) with 1 x 9V battery (not included). Install the batteries as follows:
 - Open the battery door on the rear of the unit by presses the tabs and then lifting it.
 - Install a 9V battery to the battery cap. (Alkaline batteries are recommended for longer playing time.)
 - Replace the battery door.


REMOTE CONTROL:

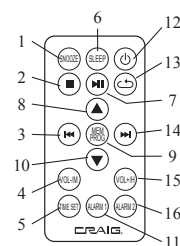

REMOTE CONTROL:

- First Time Use
- Remove and discard the insulation film as the figure on the right.

 - Replacing the button cell when it is consume:
 1. Push and slide out the battery holder as figure 1 below.
 2. Replace the button cell with new CR2025 button cell as the polarity markings on the rear of the Remote Control.
 3. Close the battery holder.

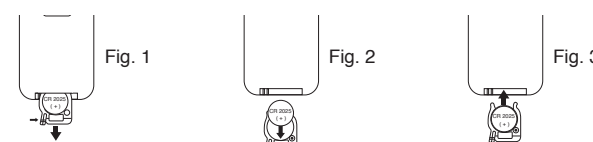

BATTERY PRECAUTIONS

Follow these Battery Precaution when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the battery to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)
6. Do not dispose of battery in fire. Battery may explodes or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burn in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

OPERATION:

GENERAL OPERATION:

1. Connect the unit to AC power as previously instructed.
2. Press the FUNCTION/⏻ (Standby) Button on the unit or Remote Control to turn on the unit from standby mode.
3. Press the FUNCTION/⏻ (Standby) Button repeatedly to switch to desired playback mode. The correspondent indicator will illuminate (or appear on the LED Display) with your selection (see list below):

Playback Mode:

- CD
- Radio FM Band
- Radio AM Band
- BT (Bluetooth)
- USB
- SD Card
- AUX (in)

Indicators:

- CD Indicator will illuminate
- FM Indicator will illuminate
- AM Indicator will illuminate
- "bt" will appear on the display
- "USB" will appear on the display
- "Sd" will appear on the display
- AUX Indicator will illuminate

4. During playback, press the VOL +/HOUR or VOL -/MIN Buttons on the unit (or the VOL +/H or VOL -/M Buttons on the Remote Control) to adjust volume level as desired.
5. When finished listening, press and hold the FUNCTION/⏻ (Standby) Button on the unit or Remote Control approximate 1 second to turn the unit to standby mode.

PHONE JACK:

For private listening, insert the 3.5mm plug of the earphone/headphone (not included) to the PHONES Jack on the left side of unit. The speaker will disconnect automatically.

TIME SET:

To set or reset the actual time:

1. In Standby mode, press the PROG/M/TIME SET Button on the unit or press the TIME SET Button on the Remote Control to enter to time set mode. Time on display will blink.
2. Press the VOL +/HOUR Button on the unit or the VOL +/H button on the Remote Control to set hour. (Make sure the PM Indicator on the display is illuminate if the time is PM and not light if the time is AM).
3. Press the VOL -/MIN Button on the unit or the VOL -/M button on the Remote Control to set minute.
4. When finished, press the PROG/M/TIME SET Button on the unit or press the TIME SET Button on the Remote Control to save the settings, time on display will stop blinking.

ALARM :

To set or reset the alarm time:

Alarm 1 setting:

1. In Standby mode, press and hold the ALARM 1 Button on the unit or Remote Control, alarm 1 time will appear on the display and blink.
2. Press the VOL +/HOUR Button on the unit or VOL+/H Button on the Remote Control to set hour. (Make sure PM Indicator is illuminate if the alarm time is PM and not light if the alarm time is AM).

3. Press the VOL -/MIN Button on the unit or VOL-/M Button on the Remote Control to set minute.
4. Press ALARM 1 Button again to save the setting and exit. The display will resume to actual time.
5. After setting:
 - Press the ALARM 1 Button once to activate the alarm function and set the wake up mode to buzz. AL 1 Indicator will illuminate.
 - Press the ALARM 1 Button twice to activate the alarm function and set the wake up mode to CD.
 - Press the ALARM 1 Button three times to activate the alarm function and set the wake up mode to Radio FM Band.
 - Press the ALARM 1 Button four times to activate the alarm function and set the wake up mode to Radio AM Band.
 - Press the ALARM 1 Button five times to turn off alarm. AL 1 Indicator will not light.

Alarm 2 setting:

Same as Alarm 1 settings. But, press the ALARM 2 Button instead of ALARM 1 Button.

Important Notes:

1. Alarm will not operation when the unit is in power on mode.
2. If radio was selected, received the desired radio station before activate alarm. Make sure the volume was set to suitable level. Otherwise, when Alarm goes off, no sound output from the speaker or sound weak.

Shut off alarm:

When alarm goes off, press the FUNCTION/⏻ (Standby) Button on the unit or Remote Control to shut it off. Alarm will turn on again on next day. To turn off alarm completely (alarm will not turn on next day), press the Alarm 1 or 2 Button repeatedly until the correspondence alarm indicator turned off.

Snooze:

The alarm can be temporarily turned off manually by pressing the SNOOZE/■ Button on the unit or SNOOZE Button on Remote Control; the alarm will turn back on automatically nine (9) minutes later. This feature can be repeated until the the FUNCTION/⏻ (Standby) Button on the unit or Remote Control was pressed.

Sleep Timer:

In the power on mode, press the SLEEP Button to activate the sleep function, SLEEP time will appear on the display. Press the SLEEP Button repeatedly to set the sleep timer to 15- 120 minutes as desired. To turn off the sleep timer before time up, press and hold the FUNCTION/⏻ (Standby) Button to power off the unit.

BT (Bluetooth):

The first time you use the unit or pair it to a new Bluetooth Device, pair it as follows:

1. Power on the unit from standby mode and enter to BT (Bluetooth) mode as previously instructed. "bt" will appear on the display and blink.
2. Power on the external BT Device and enter to BT searching mode. Start pairing following on screen instructions from the external BT Device. After pairing, the "bt" on the display will stop blinking.
3. Plays the music in the paired BT Device as usual.
4. During playback:
 - Press the ►| Button on the unit or Remote Control to pause; press again to resume normal playback.
 - Press the TUNE +/►| or TUNE -/◀| Buttons on the unit or the ◀|►| Buttons on the Remote Control to skip tracks.

Notes:

- When the external Bluetooth Device searched the unit, our model number "CM427BT" will appear on the display of external Bluetooth Device.
- Pairing code "0000" or "1234" may need to enter.

Normal operation after pairing:

1. Power on the external BT Device and enter to BT mode.
2. Power on the unit from standby mode and enter to BT (Bluetooth) mode as previously instructed. "bt" will appear on the display and blink.
3. Wait a few seconds until the unit is auto paired to the external BT Device, "bt" on display will stop blinking.
4. Plays the music in the paired BT Device as usual


USB Playback:

1. Insert the USB Device (up to 32 GB; with MP3 files) into the USB Port on the Left side of the unit.
2. Power on the unit from standby mode and enter to USB (playback) mode as previously instructed. "USB" will appear on the display and blink.
3. Wait a few seconds, "USB" on display will stop blinking and the unit will start to plays the MP3 files in the USB Device automatically.

4. During playback:
 - Press the ►| Button on the unit or Remote Control to pause; press again to resume normal playback.
 - Press the TUNE +/►| or TUNE -/◀| Buttons on the unit or the ◀|►| Buttons on the Remote Control to skip tracks.

SD Card Playback:

 1. Insert the SD Card (up to 32 GB; with MP3 files) into the SD Card Slot with contact fingers face to rear on the Left side of the unit as the figure on the right:

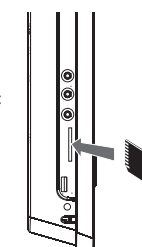

2. Power on the unit from standby mode and enter to SD Card (playback) mode as previously instructed. "Sd" will appear on the display and blink.
3. Wait a few seconds, "Sd" on display will stop blinking and the unit will start to plays the MP3 files in the SD Card automatically.
4. During playback:
 - Press the ►| Button on the unit or Remote Control to pause; press again to resume normal playback.
 - Press the TUNE +/►| or TUNE -/◀| Buttons on the unit or the ◀|►| Buttons on the Remote Control to skip tracks.

Notes:

- A. When inserting the USB Device/SD Card, make sure the direction you selected is correct. Never insert violently to avoid damaging the USB Device; SD Card or the unit. If it doesn't work, please check if the direction is correct.
- B. Please download the MP3 files into the USB Device/SD Card through the Computer before insert into the unit

Radio:

1. Power on the unit from standby mode and enter to Radio AM or FM Band as desire. The AM or FM Indicators will illuminate.
2. Press and hold the TUNE-/►| or TUNE +/◀| Buttons on the unit or ◀|►| Button on the Remote Control to auto search and plays the previous/next available radio stations. The frequency of it will show on the display.
3. Repeat the same procedure until the desired station was searched.

Radio stations presetting:

1. Receive the desired radio station as the previously procedure.
2. Press the PROG/M/TIME SET Button on the unit or MEM/PROG Button on the Remote Control, "P XX" (XX is the current program number) will appear on the display and blinking.
3. Press the M - or M + Button on the unit or ▲/▼ Button on the Remote Control repeatedly to select the program number (P 01 - P 20) you want stored to. Then press the PROG/M/TIME SET Button on the unit or MEM/PROG Button on the Remote Control again to store it.
4. Repeat the same procedures until all the desired radio stations were stored into the program list.
5. After settings, press the M- or M+ Button on the unit or ▲/▼ Button on the Remote Control to select the desired stored radio station to play.

CD:

CD Playback:

1. Open the CD door by slide the CD OPEN Switch upward. Place a CD disc on the center spindle, with the printed label side up.
2. Close the CD Door.
3. Power on the unit from standby mode and enter to CD (playback) mode as the previously instructed. "CD" will appear on the display and blink.
4. Wait a few seconds until the total number of tracks appears on the display. Then press the ►| Button on the unit or Remote Control to start playback.

Repeat Playback:

- During CD playback:
 - Press the REPEAT Button on the unit or the ◂ Button on the remote control once to play current track repeatedly. The REP Indicator will illuminate and blink.

- Press the REPEAT Button on the unit or the ◂ Button on the Remote Control twice to play all the tracks on the current disc repeatedly. The REP Indicator will stop blinking.
- Press the REPEAT Button on the unit or the ◂ Button on the Remote Control three times to cancel repeat playback. The REP Indicator will turn off.

Programmed Playback:

1. In stop playback mode, press the PROG/M/TIME SET Button on the unit or MEM PROG Button on the Remote Control, "01" will appear on the display.
2. Select the first specific track to be programmed by pressing the TUNE+/►| or TUNE -/◀| Buttons on the unit or ◀|►| Button on the Remote Control.
3. Press the PROG/M/TIME SET Button on the unit or MEM/PROG Button on the Remote Control again to store the selected track into the memory. The PROG Indicator will illuminate and blink.
4. Repeat same steps until all the specific tracks stored into the memory.
5. Press the ►| (Play/Pause) Button on the unit or Remote Control to start playback.
6. To stop program playback, press the SNOOZE / ■ Button on the unit or the ■ Button on the Remote Control twice. The PROG Indicator will turn off.

AUX (in):

To listen the music from the external audio device such as MP3 Player; Discman; iPods ... etc as follows:

1. Connected the external audio device by an audio connection cable with 3.5mm stereo plug on both ends (Cable not included).
2. Insert one end to the AUX IN Jack on the left of unit. Insert the other end to the Phones Jack; Line Out Jack or AUX Out Jack on the external audio device.
3. Power on the unit by press the FUNCTION/⏻ (Standby) Button.
4. Press the FUNCTION/■ (Standby) Button repeatedly until the AUX Indicator illuminate.

TROUBLE SHOOTING GUIDE

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	AC Power cord had not connected	Connect the AC/DC Adaptor to wall outlet and the unit as section: POWER SOURCE
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume by press VOL +/HOUR Button on the unit or press the VOL +/H Button on the Remote Control
	Volume level of paired / connected device is in low level	Rise the volume level of the paired / connected device
Sound distortion	Volume level too high	Reduce the volume level by press the VOL -/MIN Button on the unit or press the VOL -/M Button on the Remote Control
	Volume level of the connected paired device too high	Reduce the volume level of the connected/paired device
BT not functioning	The external BT Device had NOT paired to the unit	Pair the external BT Device to the unit as section: BT (Bluetooth)
	The external BT device too far from the unit	Place the external BT device close to the unit

SPECIFICATIONS :

- Power Source: DC 5.9V, 1.2A, Center positive ⏻
- Clock Back Up: 1x DC 9V battery (not included)
- Power source of AC/DC Adaptor: AC 100-240V~, 50/60Hz, 0.3A
- Output of the AC/DC Adaptor: DC 5.9V, 1.2A, Center positive ⏻
- Audio Power: 1.2W per Channel
- Impedence of Speakers: 8 Ohm; 2W x 2
- Radio Band Coverage: AM 520 - 1710 KHz
FM 87.5 - 108 MHz
- BT version: 3.0
- BT Operation Distance: 96 Feet in opera area

ACCESSORIES:

- 1x User's Manual
- 1x Remote Control (Uses 1 x CR2025 Button Cell, included)
- 1x AC/DC Adaptor

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE