VIRTUOSO MAX

WIRELESS HIGH-FIDELITY GAMING HEADSET MANUAL | QUICK START GUIDE

IN THIS GUIDE

PACKAGE CONTENTS **GETTING TO KNOW YOUR HEADSET** RF WIRELESS MODE

Search...

BLUETOOTH MODE ACTIVE NOISE CANCELLATION ANSWERING AND ENDING PHONE CALLS

LISTENING TO MUSIC (MEDIA PLAYBACK) FOR OPTIMAL WIRELESS PERFORMANCE CORSAIR iCUE **VOLUME CONTROL** MICROPHONE CONTROL CHARGING

BATTERY STATUS LED INDICATIONS (ON HEADSET) WIRELESS STATUS LED INDICATIONS (ON WIRELESS USB TRANSMITTER)


BATTERY REMOVAL INFORMATION COPYRIGHT/LEGAL INFORMATION



PACKAGE CONTENTS






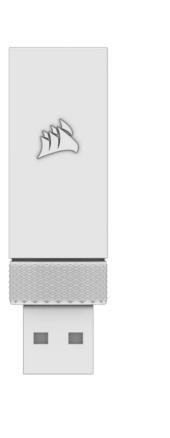



GETTING TO KNOW YOUR HEADSET

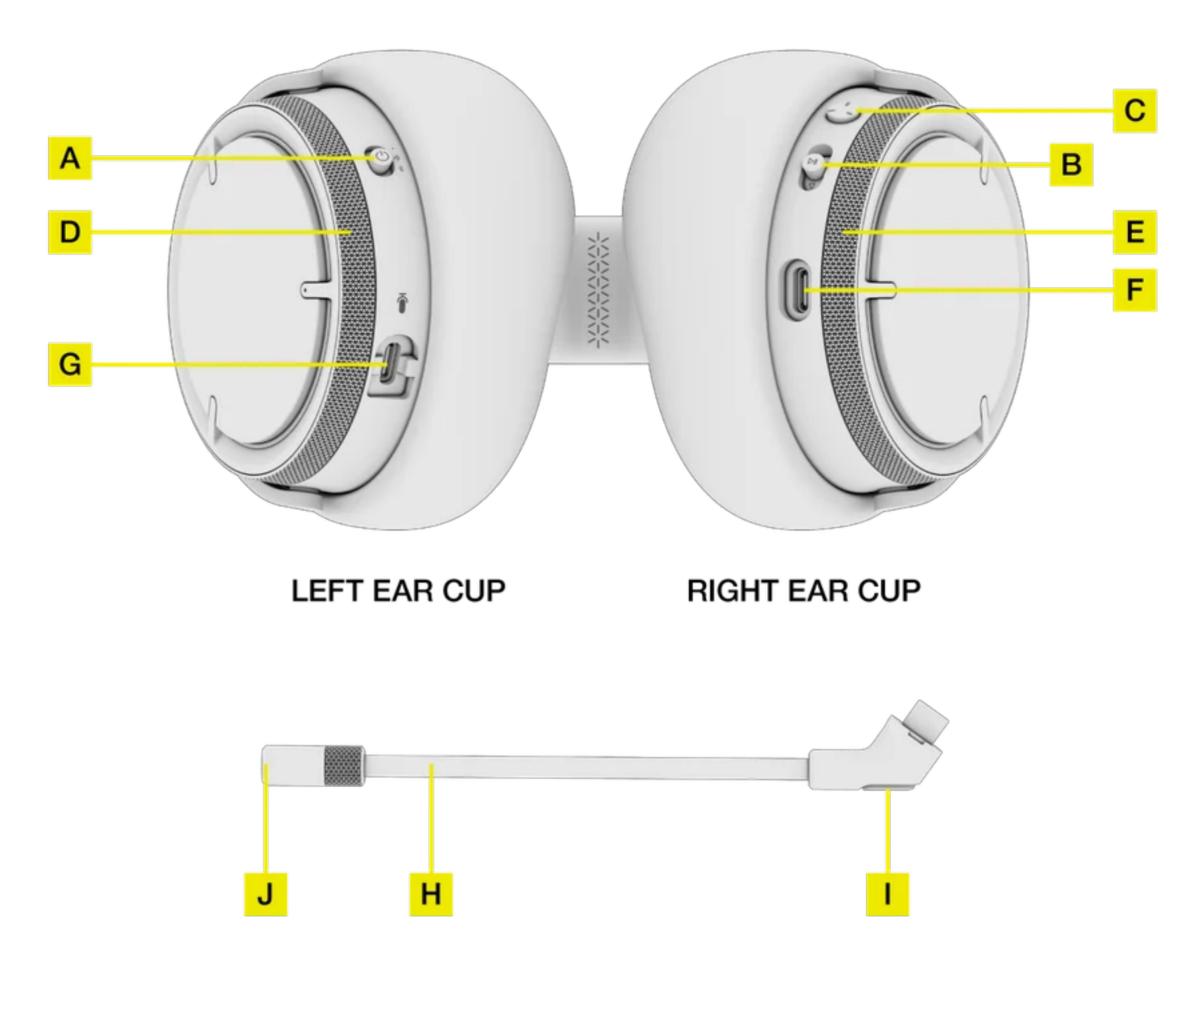

D. VOLUME CONTROL RING

A. WIRELESS MODE SWITCH

B. ACTION SWITCH

C. CUSTOM BUTTON

E. MULTIFUNCTION CONTROL RING

RF WIRELESS MODE

UPDATE FIRMWARE

PC - Connect the wireless USB transmitter to any USB (type-A) port on your PC. Slide the WIRELESS MODE SWITCH (A) from Off to Wireless mode on the headset. The headset powers on in RF wireless mode by default. The headset is designed to operate at a range of up to 50 feet (15.24m) from the transmitter, but other wireless devices, electronics and obstructions such as walls may impact performance.

H. MIC BOOM I. MIC MUTE BUTTON

J. MIC LED

F. USB TYPE-C PORT

G. MIC BOOM CONNECTION

Please install CORSAIR iCUE software prior to use.

On first setup, please run iCUE and check for the latest firmware update via the Device Settings. Note: The first time you use the CORSAIR VIRTUOSO MAX headset on a PC, the operating system will automatically install a device driver. After the device driver is installed, we recommend you reboot your PC before use.

PLAYSTATION - Connect the wireless USB transmitter to any USB port on your PS4 or PS5 console. Use the PlayStation UI to set "Output to

Headphones" to "All Audio". Adjust volume control (Headphones) to maximum level. Then adjust volume with the headset volume control.

BLUETOOTH MODE The headset can connect to simultaneous RF and Bluetooth®.

will pulse blue.

Slide the WIRELESS MODE SWITCH (A) to Bluetooth and release to power on Bluetooth Mode. The headset will automatically connect to the last paired device. If there is no previous paired device, the headset will automatically enter pairing mode. To enable pairing mode, slide the WIRELESS MODE SWITCH (A) to Bluetooth® and hold for 2 seconds. The LEDs will alternate blinking blue. When the headset is paired, the LED

ACTIVE NOISE CANCELLATION Active Noise Cancellation (ANC) is Off by default, you can cycle the ANC mode On, to Transparency mode, or back to Off by pressing the CUSTOM BUTTON (C) for 1 second.

To answer an incoming call, single press the ACTION SWITCH (B). To end the call, single press the ACTION SWITCH (B) again. LISTENING TO MUSIC (MEDIA PLAYBACK)

ANSWERING AND ENDING PHONE CALLS

To play a track, single press the ACTION SWITCH (B). To pause playback, single-press the ACTION SWITCH (B) again. To skip forward, slide the ACTION SWITCH (B) forward and release quickly. To skip backwards, slide the ACTION SWITCH (B) backwards and release quickly.

Make sure the battery is fully charged before initial use. • Do not leave the battery fully discharged for long periods. Battery life is maximized by keeping the battery in a partially charged state. Keep the headset at room temperature (20-30° C or 68-86° F).

• Place the USB wireless transmitter in an open, unobstructed area.

FOR OPTIMAL WIRELESS PERFORMANCE

NOTE: Prolonged listening at high volumes may adversely affect your hearing. Take breaks between sessions and always begin with the volume at a low level before increasing.

Using iCUE software will enable the full feature set of the VIRTUOSO MAX headset. The USB Wireless Receiver must be connected to your PC to use iCUE software. Note: If the headset is used without software, some features will be disabled.

• Enable SoundID™ audio personalization. Requires USB Wireless Receiver to enable. (Not available with *Bluetooth*®)

 Create and assign lighting effects. Adjust and control microphone volume and Sidetone. • Remap the CUSTOM BUTTON (C) and configure the VOLUME CONTROL RING (D) and MULTIFUNCTION CONTROL RING (E) control.

After installation is complete, reboot your PC, and launch iCUE.

Go to corsair.com/support/downloads to download the CORSAIR iCUE software.

• Install the iCUE software on a PC running Windows 10 or later, or on macOS.

Select and customize audio equalizer (EQ) settings.

iCUE software can be used to:

Set Dolby Atmos® Spatial Audio on or off.

CORSAIR ICUE

The software's built-in documentation explains how to use the VIRTUOSO MAX features in greater detail. Please note: headset must be in USB mode (powered off and connected to PC) to update firmware.

VOLUME CONTROL

MICROPHONE CONTROL Press the MIC MUTE BUTTON (I) to mute. Press the MIC MUTE BUTTON (I) again to unmute. NOTE: iCUE software can also be used to control these features.

Bluetooth Volume.

is a good place to start, but feel free to increase or decrease this if your mic is too loud or too soft. **CHARGING**

 Connect the USB charging cable to any working USB port on your PC. Connect the USB charging cable to the CORSAIR VIRTUOSO MAX headset. The CORSAIR VIRTUOSO MAX headset battery has no "memory effect", so there is no need to completely discharge it before recharging.

LOW

RED

to the headset.

The CORSAIR VIRTUOSO MAX headset must be fully charged before its first use.

support USB 2.0. BATTERY STATUS LED INDICATIONS (ON HEADSET)

MEDIUM

ORANGE

The LEDs will pulse while being charged and turn solid green at full charge. When not being charged, the LEDs will blink based on the power

HIGH

GREEN

Remember that the USB charging cable requires a high power (USB 2.0 or better) port. Some USB ports found on older devices do not

The VOLUME CONTROL RING (D) and MULTIFUNCTION CONTROL RING (E) can be used to separately control volume and can be configured

For best performance, bend the flexible microphone boom to best fit near the left corner of your mouth. We've found that a 30-degree bend

within iCUE. By default, the VOLUME CONTROL RING (D) will control RF volume and the MULTIFUNCTION CONTROL RING (E) will control

levels shown above. WIRELESS STATUS LED INDICATIONS (ON WIRELESS USB TRANSMITTER)

• If the transmitter cannot connect to the headset, LED will blink red rapidly.

• When the transmitter is connected to the headset and operating normally, LED will turn solid white.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. **D** Dolby **ATMOS** BATTERY REMOVAL INFORMATION

This product uses a rechargeable battery and safety guidelines must be followed in the event that the product is disabled for the disposal

and recycling. To safely remove the battery for disposal and recycling, follow the numbered steps with the below diagrams.

• If headset is turned on and the transmitter is powered on and LED is still blinking red, please use iCUE software to re-pair the transmitter



COPYRIGHT/LEGAL INFORMATION

© 2024 CORSAIR MEMORY, Inc. All rights reserved. CORSAIR and the sails logo are registered trademarks of CORSAIR in the United States and/or other countries. All other


IC: 10954A-RDA0049 (Headset) IC: 10954A-RDA0050 (Receiver)

Privacy Policy

Terms of Use

FCC ID: 2AAFM-RDA0049 (Headset) FCC ID: 2AAFM-RDA0050 (Receiver)



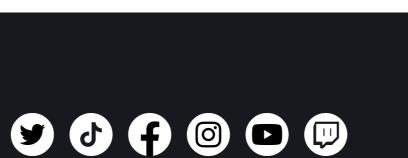





New Products

Best Sellers

Where to Buy

Corsair.com Exclusives

Certified Refurbished

SIGN UP

Enter your email