

FOLD

FOLD

Marshall

MAJOR III VOICE

MARSHALLHEADPHONES.COM

USER MANUAL



QR-CODE
HERE

FOLD

FOLD

- I. ● = 🔋
- II. ● = 🔋
- III. ☀️ = ||
- IV. ● = 📶
- V. ○ = 🚫🎵



- I. 🕒 0:03 = ⏻
- II. 🎵 x1 = ⏸
- III. 🎵 x1 = ⏪
- IV. 🎵 x1 = ⏩
- V. 🎵 x1... = ▶
- VI. 🎵 x1... = ◀
- VII. 🎵 x1 = 🔊+
- VIII. 🎵 x1 = 🔊-
- IX. 🎵 x1 = 🔄
- 🎵 x2 = 🔄
- X. 🎵 x2 = 📶



Marshall is a trademark of Marshall Amplification Plc. Permission granted. Design of product and packaging are intellectual properties of Zound Industries International AB, Centralplan 15 111 20 Stockholm, Sweden. © Zound Industries International AB. All Rights Reserved.

The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Zound Industries International AB is under license.

Siri and macOS are trademarks of Apple Inc., registered in the U.S. and other countries. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

CONTENTS

LANGUAGES

ENGLISH	002.	ITALIAN – ITALIANO	014.
DANISH – DANSK	004.	NORWEGIAN – NORSK	016.
DUTCH – NEDERLANDS	006.	RUSSIAN – РУССКИЙ	018.
FRENCH – FRANÇAIS	008.	SPANISH – ESPAÑOL	020.
GERMAN – DEUTSCH	010.	SWEDISH – SVENSKA	022.
HINDI – HINDI	012.		

DEVICE LAYOUT

1 CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

2 VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

3 LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

4 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3.5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

5 USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

5 REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

ENGLISH

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

1 CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

2 VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

3 LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

4 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3,5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

5 USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

5 REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

DEVICE LAYOUT

DUTCH

1 CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

2 VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

3 LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

4 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3,5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

5 USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

5 REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

① CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

② VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

③ LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

④ 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3,5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

⑤ USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

⑤ REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

DEVICE LAYOUT

1 CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

2 VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

3 LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

4 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3,5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

5 USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

5 REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

GERMAN

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

DEVICE LAYOUT

1 CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

2 VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

3 LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

4 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3.5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

5 USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

5 REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

HINDI

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

1 CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

2 VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

3 LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

4 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3,5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

5 USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

5 REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

DEVICE LAYOUT

1 CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

2 VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

3 LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

4 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3.5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

5 USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

5 REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

NORWEGIAN

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

DEVICE LAYOUT

1 CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

2 VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

3 LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

4 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3.5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

5 USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

5 REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

RUSSIAN

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

DEVICE LAYOUT

1 CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

2 VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

3 LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

4 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3.5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

5 USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

5 REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

SPANISH

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

DEVICE LAYOUT

1 CONTROL KNOB

- I. **POWER ON/OFF**
PUSH AND HOLD FOR 2 SECONDS
- II. **PLAY/PAUSE**
SINGLE-CLICK
- III. **SKIP FORWARD**
PUSH TO THE RIGHT
- IV. **SKIP BACK**
PUSH TO THE LEFT
- V. **FAST FORWARD**
PUSH TO THE RIGHT AND HOLD
- VI. **REWIND**
PUSH TO THE LEFT AND HOLD
- VII. **TURN UP THE VOLUME**
PUSH UPWARDS
- VIII. **TURN DOWN THE VOLUME**
PUSH DOWNWARDS
- IX. **HANDLE CALLS**
 - SINGLE-CLICK TO ANSWER OR END CALL
 - DOUBLE-CLICK TO REJECT AN INCOMING CALL
- X. **ACTIVATE/STOP SIRI***
DOUBLE-CLICK

2 VOICE BUTTON

THE VOICE BUTTON IS ENABLED FROM THE GOOGLE ASSISTANT APP.

- I. **PUSH AND HOLD THE VOICE BUTTON TO TALK TO YOUR GOOGLE ASSISTANT.**
- II. **ASK A QUESTION OR SAY A COMMAND, THEN RELEASE THE BUTTON.**

3 LED INDICATOR

- I. **CHARGING**
- II. **FULLY CHARGED**
- III. **AUDIO PAUSED**
- IV. **BLUETOOTH® PAIRING MODE**
- V. **BLUETOOTH OFF OR PLAYING**

4 3.5 mm INPUT/OUTPUT SOCKET

SHARE YOUR AUDIO BY PLUGGING IN ANOTHER PAIR OF HEADPHONES INTO THE 3.5 mm SOCKET.

IF YOU ARE LOW ON POWER, SIMPLY USE THE DOUBLE ENDED 3,5 mm CORD WITH BUILT-IN REMOTE AND MICROPHONE.

- SINGLE-CLICK TO PLAY, PAUSE, ANSWER CALLS OR HANG UP.
- DOUBLE-CLICK FOR NEXT SONG OR TO REJECT CALLS.
- TRIPLE-CLICK FOR PREVIOUS SONG.

5 USB PORT FOR CHARGING BATTERY

WHEN THE BATTERY CHARGE IS LOW, A BATTERY LOW ALERT WILL SOUND. PLUG YOUR HEADPHONES TO A USB POWER SOURCE VIA THE MICRO USB CABLE TO CHARGE THE BATTERY.

A FULL BATTERY RECHARGE TAKES APPROXIMATELY 3 HOURS.

5 REMOVABLE EAR CUSHIONS

HOLD THE EAR CAP AND TURN IT COUNTER-CLOCKWISE.

SWEDISH

GETTING STARTED

01. PUSH AND HOLD THE CONTROL KNOB FOR 4 SECONDS UNTIL THE LED BLINKS BLUE.
02. SELECT **MAJOR III VOICE** FROM YOUR SOUND DEVICE'S BLUETOOTH® LIST. THE INDICATOR TURNS OFF WHEN PAIRING IS COMPLETE.
03. OPEN OR DOWNLOAD THE GOOGLE ASSISTANT APP AND FOLLOW THE IN-APP INSTRUCTIONS TO ENABLE THE GOOGLE ASSISTANT.
04. PRESS PLAY, AND ENJOY YOUR NEW HEADPHONES

 
 

IT IS RECOMMENDED TO CHARGE THE BATTERY BEFORE USING YOUR HEADPHONES FOR THE FIRST TIME.

VISIT US ONLINE

VISITEZ-NOUS EN LIGNE / VISITE NUESTRA WEB / BESÜCHEN SIE UNS ONLINE / VIENI A FARCI VISITA ONLINE



MARSHALLHEADPHONES.COM

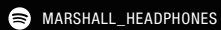

R 0.1

Marshall

MAJOR III VOICE

LEGAL & SAFETY

LEGAL NOTICE

Design of device and packaging are intellectual properties of Zound Industries International AB. © All Rights Reserved.

MARSHALL, Marshall Amps, their respective logos, "Marshall" and "Marshall" trade dress are trademarks and intellectual property of Marshall Amplification Plc and may not be used without permission. Permission granted to Zound Industries International AB.

The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Zound Industries is under license.

Google, Google Assistant and other related marks and logos are trademarks of Google LLC.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

All other trademarks are the property of their respective owners and may not be used without permission.

For more legal information related to this product and to its use in your specific region, and for more detailed information about Zound Industries and partner & license information, please visit the website: www.marshallheadphones.com. The user is recommended to visit the website regularly for up-to-date information.

Zound Industries International AB, Centralplan 15, 111 20 Stockholm, Sweden

FCC STATEMENT

FCC ID is located under the right ear cushion. To remove, hold ear cushion and turn counter-clockwise.

WARNING: Any changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

U.S. responsible party, contact information:
Zound Industries USA, Inc.
260 W 39th Street Suite 1101, New York, NY 10018, USA
Telephone number: 646-214-1003

IFETEL

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

ANATEL

Este produto está homologado pela ANATEL, de acordo com os procedimentos regulamentados pela Resolução nº. 242/2000 e atende aos requisitos técnicos aplicados. Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

Para maiores informações, consulte o site da ANATEL – www.anatel.gov.br

IC STATEMENT

IC ID is located under the right ear cushion. To remove, hold ear cushion and turn counter-clockwise.

Les numéros d'identification IC ID est situés juste sous le coussinet d'oreillette droit. Pour l'enlever, maintenez le coussinet d'oreillette et tournez dans le sens inverse des aiguilles d'une montre.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme à la norme RSS sans licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférence et (2) cet appareil doit supporter les interférences, y compris les interférences susceptibles de provoquer un fonctionnement inattendu.

This Class B digital device complies with Canadian ICES-003.

Cet appareil numérique de classe B est conforme à la norme ICES-003 au Canada.

CAN ICES-3 (B)/NMB-3(B)

低功率電波輻射性電機管理辦法

第十二條經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

R 0.1

ENGLISH

IMPORTANT SAFETY INSTRUCTIONS



Not suitable for children under age three. Contains small parts, which may be a choking hazard.



Long time exposure to loud music or sounds may cause hearing loss. To prevent possible hearing damage, do not listen at high volume levels for long periods.



Electrical products, cables, batteries, packaging, and the manual, should not be mixed with general household waste. For proper recycling, please take these products to a designated collection point where they will be accepted free of charge or return them to your local retailer. Correct product disposal saves resources and prevents negative effects on human health and the environment.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, dispose of defective rechargeable battery at special collection points or return them to your specialist dealer.

WARNINGS

- Set your sound source to low volume before using the headphones.
- Do not use these headphones when operating a motor vehicle, a bicycle, machinery or where your inability to hear outside sounds may present a danger to you or others.
- Using these headphones limits your ability to hear noises around you, regardless of listening volume.
- Keep away from fire, water, and high voltage equipment.
- Do not modify, disassemble, open, drop, crush, puncture, shred the headphone or heat above 113°F (45°C).
- Do not short-circuit the included battery or its cells.
- In the event of cell leakage, do not allow the liquid to come in contact with the skin or the eyes.

Note: The internal battery is not end-user replaceable.

DISCLAIMER

Zound Industries International AB makes no claims of compatibility of the microphone and remote with any mobile device.

For use with mobile devices using 3.5 mm plug unprotected two-way standard.

Stated play time is calculated using random selection of music, played at medium volume.

Hereby, Zound Industries International AB, declares that this product is in compliance with 2014/53/EU.

Maximum RF transmit power: < 20 dBm

For the declaration of conformity, please visit the following website: www.marshallheadphones.com/doc

Designed in Stockholm • Produced in China

DANSK

VIKTIGE SIKKERHEDSINSTRUKTIONER



Ikke egnet til børn under tre år. Indeholder små dele som kan være en kvælningssfare.



Lang tids eksponering af høj musik eller lyd kan forårsage tab af hørelse. For at forhindre høreskade, så lyt ikke til høj musik i lange perioder.



Elektriske produkter, kabler, batterier, emballage og manualen må ikke blandes med almindeligt husholdningsaffald. For korrekt bortskaffelse skal du medtage disse produkter til en genbrugsstation, hvor de vil blive accepteret gratis, eller returnere dem til din lokale forhandler. Korrekt bortskaffelse af produktet sparer ressourcer og forhindrer negative påvirkninger på folkesundheden og miljøet.

For at forebygge miljøskader eller skade på menneskers sundhed mod ukontrolleret bortskaffelse af affald, så bortskaf brugte genopladelige batterier på special indsamlingssteder, eller returner dem til din detailhandler.

ADVARSLER

- Indstil lav volumen på lydskilden inden brug af hovedtelefonerne.
 - Brug ikke disse hovedtelefoner når du betjener maskineri, kører et motorfartøj eller på cykel eller hvis det kan være til fare for dig og andre at du ikke kan høre dine omgivelser.
 - Når du bruger disse hovedtelefoner begrænser det din evne til at høre dine omgivelser, uanset lydstyrken.
 - Hold hovedtelefonerne væk fra ild, vand og udstyr med høj spænding.
 - Undlad at modificere, skille ad, åbne, tabe, knuse, punktere, snitte i hovedtelefonerne eller udsætte dem for varme over 45° C (113° F).
 - Kortslut ikke det inkluderede batteri eller dets celler.
 - I tilfælde af at batterierne lækker, så undgå at væsken kommer i kontakt med huden eller øjnene.
- Bemærk: det interne batteri er ikke en del, som kan udskiftes af brugeren.

ANSVARSRFRASKRIVELSE

Zound Industries International AB gør ingen krav på kompatibiliteten af mikrofonen og fjernbetjeningen med enhver mobilenhed.

Til brug for mobileenheder med et 3,5 mm ubeskyttet tovejs standardstik.

Den angivne spilletid beregnes ved at bruge et tilfældigt udvalg af musik afspillet ved middel lydstyrke.

Zound Industries International AB erklærer hermed, at dette produkt overholder direktiv 2014/53/EU.

Maksimal RF-sendeeffekt: < 20 dBm

For erklæringen om overensstemmelse, se venligst følgende website: www.marshallheadphones.com/doc

Designet i Stockholm – Fremstillet i Kina

NEDERLANDS

BELANGRIJKE VEILIGHEIDSIJNSTRUCTIES



Niet geschikt voor kinderen tot drie jaar. Bevat kleine onderdelen die verstikkingsgevaar kunnen veroorzaken.



Langdurige blootstelling aan luide muziek of geluid kan gehoorbeschadiging veroorzaken. Luister niet op hoge geluidsniveaus gedurende langere tijd om gehoorschade te voorkomen.



Elektrische producten, kabels, batterijen, verpakking en de handleiding dienen niet te worden gemengd met huishoudelijk afval. Voor de juiste afvoer dient u deze producten naar een speciaal inzamelpunt te brengen waar ze gratis worden ingenomen, of u brengt deze naar uw lokale winkel. De juiste afvoer bespaart op grondstoffen en voorkomt negatieve effecten op de gezondheid van mens en milieu.

Breng de defecte opblaadbare batterij naar een speciaal ophaalpunt of terug naar de winkel, om mogelijke schade voor het milieu of de menselijke gezondheid door vuilstof te voorkomen.

WAARSCHUWINGEN

- Stel uw geluidsbron in op laag volume voordat u de hoofdtelefoon gebruikt.
- Gebruik deze hoofdtelefoon niet als u een motorvoertuig, fiets, of machine bestuurt, of in situaties waarin het niet kunnen horen van geluiden van buitenaf een gevaar kan opleveren voor u of anderen.
- Het gebruik van deze hoofdtelefoon beperkt uw capaciteit om geluiden om u heen te horen, ongeacht het geluidsniveau.
- Buiten bereik houden van vuur, water en apparatuur met hoog voltage.
- Pas de hoofdtelefoon niet aan, haal hem niet uit elkaar, maak hem niet open, laat hem niet vallen, maak hem niet kapot, maak er geen gat en scheuren in en verhit hem niet boven de 45° C.
- Veroorzaak geen kortsluiting van de meegeleverde batterij of de cellen daarvan.
- Laat in het geval van een lekkende batterij de vloeistof niet in contact komen met de huid of de ogen.

Let op: de interne accu kan niet door de eindgebruiker vervangen worden.

VRIJWARING

Zound Industries International AB doet geen bindende uitspraken over de compatibiliteit van de microfoon en afstandsbediening met mobiele apparaten.

Voor gebruik met mobiele apparaten met onbeschermde tweerichtings 3,5 mm-contact, standaard.

De weergegeven speeltijd wordt berekend aan de hand van een willekeurige selectie van muziek, afgespeeld op een gemiddeld volume.

Hierbij verklaart Zound Industries International AB, dat dit product voldoet aan de bepalingen van richtlijn 2014/53/EU.

Maximaal RF-zendvermogen: < 20 dBm

Ga voor de conformiteitsverklaring naar deze website: www.marshallheadphones.com/doc

Ontworpen in Stockholm • Geproduceerd in China

FRANÇAIS

CONSIGNES DE SÉCURITÉ IMPORTANTES



Ne convient pas aux enfants de moins de trois ans. Contient des éléments de petite taille qui peuvent être avalés et présenter un risque d'étouffement.



Une exposition prolongée à une musique ou des sons à volume élevé peut causer une perte d'audition. Pour prévenir d'éventuels dommages à l'audition, n'écoutez pas à des niveaux de volume élevés durant de longues périodes.



Les éléments électriques, les câbles, les piles, l'emballage et le manuel ne doivent pas être mélangés aux déchets ménagers. Pour un recyclage approprié, veuillez confier ces produits à un point de collecte approprié où ils seront acceptés gratuitement, ou bien les rapporter à votre revendeur local. Le fait de jeter les produits de manière appropriée économise des ressources et évite les impacts négatifs sur la santé et l'environnement.

Pour éviter des dommages éventuels à l'environnement ou à la santé si l'éclair est jeté sans précautions, veuillez déposer la batterie rechargeable défectueuse à un point de collecte approprié ou bien la rapporter à votre revendeur.

AVERTISSEMENTS

- Avant d'utiliser le casque, réglez le volume de votre source audio au minimum.
- N'utilisez pas ce casque lorsque vous utilisez un véhicule à moteur, un vélo, une machine, ou lorsque le fait de ne pouvoir entendre les sons extérieurs peut présenter un danger pour vous ou pour autrui.
- L'utilisation de ce casque limite votre capacité à entendre les bruits qui vous entourent, quel que soit le volume de l'écoute.
- Tenez-le éloigné du feu, de l'eau et des équipements haute tension.
- Ne pas modifier, démonter, ouvrir, laisser tomber, écraser, percer, déchirer le casque ni l'exposer à une température supérieure à 113°F (45°C).
- Ne pas court-circuiter la batterie incluse ou les piles.
- Si une pile fuit, ne pas laisser le liquide entrer en contact avec la peau ou les yeux.

Remarque: La batterie interne n'est pas remplaçable par l'utilisateur.

AVERTISSEMENT

Zound Industries International AB ne garantit pas la compatibilité du microphone et de la télécommande avec tous les appareils mobiles.

Conçu pour les appareils mobiles utilisant une prise de 3,5 mm standard bidirectionnelle non protégée.

Le temps d'écoute indiqué est calculé avec une sélection aléatoire de musique écoutée à volume moyen.

Par la présente, Zound Industries International AB déclare que ce produit respecte la directive 2014/53/UE.

Puissance de transmission RF maximale: < 20 dBm

Pour la déclaration de conformité, veuillez consulter le site Web suivant : www.marshallheadphones.com/doc

Conçu à Stockholm • Fabriqué en Chine

DEUTSCH

WICHTIGE SICHERHEITSHINWEISE



Nicht geeignet für Kinder unter drei Jahren. Enthält kleine Teile, die verschluckt werden können und eine Erstickungsgefahr darstellen.



Eine langfristige Belastung durch laute Musik kann zu vorübergehendem oder bleibendem Hörverlust führen. Um einen möglichen Gehörschaden vorzubeugen, sollten Sie zu einem hohen Lautstärkepegel über längere Zeit vermeiden.



Elektrische Produkte, Kabel, Batterien, Verpackungen und das Handbuch dürfen nicht mit dem allgemeinen Hausmüll vermischt werden. Für eine ordnungsgemäße Entsorgung bringe diese Produkte bitte an eine dafür vorgesehene Sammelstelle, wo sie kostenlos angenommen werden, oder bringe sie zum örtlichen Händler zurück. Eine ordnungsgemäße Entsorgung des Produkts schon Ressourcen und verhindert negative Auswirkungen auf die menschliche Gesundheit und die Umwelt.

Um schädliche Auswirkungen auf Umwelt und Gesundheit durch unsachgemäße Entsorgung zu verhindern, entsorge den defekten Akku bei einer speziellen Annahmestelle oder gib ihn bei deinem Fachhändler ab.

WARNUNG

- Stelle die Lautstärke deiner Klangquelle auf eine niedrige Stufe ein, bevor du die Kopfhörer verwendest.
- Verwende diese Kopfhörer nicht beim Auto- oder Fahrradfahren, beim Betrieb von Maschinen oder wenn das Überhören von Umgebungsgeräuschen eine Gefahr für dich oder andere darstellen kann.
- Das Tragen dieses Kopfhörers schränkt deine Fähigkeit, Umgebungsgeräusche wahrzunehmen, bei jeder Lautstärke ein.
- Halte dich von Kopfhörern vor Feuer, Wasser und Hochspannungsanlagen fern.
- Nehme keine Veränderungen am Kopfhörer vor, demonchiere und öffne ihn nicht, lasse ihn nicht fallen, zerbreche, durchbohre oder zerschlage ihn nicht. Setze das Gerät keiner Temperatur von über 45° C aus.
- Erzeuge keinen Kurzschluss am Akku oder an den Zellen.
- Falls eine Zelle undicht wird, achte darauf, dass die Flüssigkeit nicht mit der Haut oder den Augen in Berührung kommt.

Hinweis: Der eingebaute Akku kann nicht durch den Benutzer ausgetauscht werden.

HAFTUNGSAUSSCHLUSS

Zound Industries International AB garantiert nicht die Kompatibilität des Mikrofons oder der Fernbedienung mit mobilen Endgeräten.

Zur Verwendung mit Mobilgeräten über einen 3,5-mm-Stecker, ungeschützter, bidirektionaler Standard.

Die angegebene Spieldauer wird basierend auf einer zufälligen Musikauswahl bei mittlerer Lautstärke kalkuliert.

Hiermit erklärt Zound Industries International AB, dass dieses Produkt den Bestimmungen der EU-Richtlinie 2014/53/EU entspricht.

Maximale RF-Sendeleistung: < 20 dBm

Um die Konformitätserklärung zu lesen, besuche bitte die folgende Website: www.marshallheadphones.com/doc

Entworfen in Stockholm • Produziert in China

HINDI



Nicht geeignet für Kinder unter drei Jahren. Enthält kleine Teile, die verschluckt werden können und eine Erstickungsgefahr darstellen.



Eine langfristige Belastung durch laute Musik kann zu vorübergehendem oder bleibendem Hörverlust führen. Um einen möglichen Gehörschaden vorzubeugen, sollten Sie zu einem hohen Lautstärkepegel über längere Zeit vermeiden.



Elektrische Produkte, Kabel, Batterien, Verpackungen und das Handbuch dürfen nicht mit dem allgemeinen Hausmüll vermischt werden. Für eine ordnungsgemäße Entsorgung bringe diese Produkte bitte an eine dafür vorgesehene Sammelstelle, wo sie kostenlos angenommen werden, oder bringe sie zum örtlichen Händler zurück. Eine ordnungsgemäße Entsorgung des Produkts schon Ressourcen und verhindert negative Auswirkungen auf die menschliche Gesundheit und die Umwelt.

Um schädliche Auswirkungen auf Umwelt und Gesundheit durch unsachgemäße Entsorgung zu verhindern, entsorge den defekten Akku bei einer speziellen Annahmestelle oder gib ihn bei deinem Fachhändler ab.

ITALIANO

IMPORTANTI ISTRUZIONI DI SICUREZZA



Non adatto a bambini di età inferiore ai tre anni. Contiene pezzi di piccole dimensioni che possono causare soffocamento.

L'esposizione prolungata a musica o suoni ad alto volume può causare la perdita dell'udito. Per prevenire possibili danni all'apparato uditivo, evitare l'ascolto a volume elevato per lunghi periodi di tempo.



Gli apparecchi elettrici, i cavi, le batterie, la confezione e il manuale non dovrebbero essere inseriti tra i rifiuti domestici indifferenziali. Per un corretto riciclaggio, si prega di portare questi prodotti presso un centro di raccolta preposto, dove saranno presi gratuitamente in consegna, oppure di restituire a un rivenditore di fiducia. Il corretto smaltimento del prodotto risparmia le risorse e previene danni alla salute dell'uomo e all'ambiente.

Per prevenire possibili danni all'ambiente o alla salute umana causati dallo smaltimento incontrollato dei rifiuti, riportare le batterie difettose presso un centro di raccolta abilitato o restituire a un rivenditore autorizzato.

AVVERTENZE

- Prima di utilizzare le cuffie, assicurarsi di aver impostato la sorgente sonora su un volume basso.
- Non utilizzare queste cuffie alla guida di un veicolo a motore, di una bicicletta, di un macchinario o qualora l'incapacità di percepire i rumori esterni rappresenti un pericolo per se stessi e per gli altri.
- L'utilizzo di queste cuffie limita la capacità di percepire i rumori circostanti, a prescindere dal volume di ascolto.
- Tenere lontano da fuoco, acqua, e apparecchiature ad alta tensione.
- Non modificare, smontare, aprire, far cadere, schiacciare, forare, deformare le cuffie o non esporle a temperature superiori a 45°C (113°F).
- Non cortocircuitare la batteria inclusa o le sue celle.
- In caso di perdita da una cella, evitare che il liquido entri in contatto con occhi o pelle.

Nota: La batteria interna non è sostituibile dall'utente finale.

ESCLUSIONE DI RESPONSABILITÀ

Zound Industries International AB non fornisce alcuna garanzia sulla compatibilità del microfono e del telecomando con i dispositivi mobile.

Da utilizzare con dispositivi mobile dotati di spinotto doppio standard non protetto da 3,5 mm.

Il tempo di riproduzione indicato viene calcolato utilizzando la selezione casuale di musica riprodotta a volume medio.

Con la presente, Zound Industries International AB dichiara che questo prodotto è conforme alle direttive 2014/53/UE. Massima potenza di trasmissione RF: <20 dBm

Per la dichiarazione di conformità, visitare il seguente sito web: www.marshallheadphones.com/doc

Progettato a Stoccolma • Prodotto in Cina

NORSK

VIKTIGE SIKKERHETSINSTRUKSJONER



Ikke egnet for barn under tre år. Inneholder små deler, som kan utgjøre en kveldningsfare.

Dersom hørselen utsettes for høyt volum over lengre tid, kan den bli dårligere. For å unngå mulig hørselsskade, bør du ikke lytte til musikk på høyt volum over lengre tid.



Elektriske produkter, ledninger, batterier, innpakning og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til en utpekt henteplass der de vil ta det mot gratis, eller du kan levere tilbake til din lokale leverandør. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avheng defekte oppladbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avhending av avfall.

ADVARSLER

- Skru volumet på lydkilden ned før du bruker hodetelefonene.
- Disse hodetelefonene må ikke brukes når du kjører, sykler, betjener maskiner eller der din manglende evne til å høre lyder kan utgjøre en fare for deg og andre.
- Disse hodetelefonene begrenser evnen din til å høre lyder rundt deg, usansett volumnivå.
- Hold unna lid, vann og høyspenningstryk.
- Du må ikke endre på, demontere, åpne, miste, knuse, stikke hull på eller ødelegge hodetelefonene eller la dem varmes opp til over 60 °C.
- Ikke kortslutt batteriet eller battericellene.
- Dersom batteriet lekker, må væsken ikke komme i kontakt med huden eller øynene.

Merk: Det interne batteriet kan ikke skiftes ut av sluttbrukeren.

FRASKRIVINGSKLAUSUL

Zound Industries International AB stiller ingen krav om kompatibilitet for mikrofonen og fjernkontrollen med noen som helst mobilenheter.

For bruk med mobilenheter som anvender 3,5 mm propp av type ubeskyttet toveis standard.

Erkært spilletid regnes ut ved bruk av et tilfeldig utvalg musikk, spilt på middels volum.

Zound Industries International AB erklærer herved at dette produktet er i samsvar med 2014/53/UE.

Maksimal RF-overføringseffekt: < 20 dBm

Samsvarserklæringen finner du på denne nettsiden: www.marshallheadphones.com/doc

Utformet i Stockholm • Produisert i Kina

РУССКИЙ

ПРАВИЛА БЕЗОПАСНОСТИ



Не предназначено для использования детьми младше трех лет. Мелкие детали опасны при заглатывании.



Длительное прослушивание громкой музыки или звуков может негативно сказаться на слухе. Чтобы снизить опасность ухудшения слуха, постарайтесь долго не слушать громкую музыку.



Электрические изделия, кабели, батареи, упаковка и руководство нельзя утилизировать вместе с бытовыми отходами. Эти изделия следует бесплатно передать на утилизацию в специализированный пункт сбора или вернуть в магазин в вашем регионе. Правильная утилизация позволяет экономить ресурсы и предотвращает отрицательное воздействие на здоровье людей и окружающую среду.

Чтобы предотвратить возможный вред окружающей среде или человеческому здоровью от неконтролируемой утилизации мусора, пожалуйста, передавайте неработающие аккумуляторы в специализированные пункты приема батареек или верните их вашему специализированному дилеру.

ВНИМАНИЕ

- Перед тем, как пользоваться наушниками, установите на источнике звука небольшой громкость.
- Не пользуйтесь этими наушниками во время управления автомобилем, велосипедом или производственным оборудованием и в случаях, когда неспособность слышать окружающие звуки может представлять опасность для вас или других людей.
- Использование этих наушников ограничивает вашу возможность слышать окружающие звуки независимо от уровня громкости.
- Держите наушники вдали от огня, воды и высоковольтного оборудования.
- Запрещается модифицировать, разбирать, вскрывать, ронять, ломать, прокалывать, изменять или нагревать наушники до температуры выше 45°C (113°F).
- Запрещается закорачивать комплектную батарею или ее ячейки.
- В случае протечки элемента питания не допускайте попадания жидкости на кожу или в глаза.

Примечание. Встроенная батарея не подлежит замене конечным пользователем.

ОТКАЗ ОТ ОТВЕТСТВЕННОСТИ
Zound Industries International AB не гарантирует совместимость микрофона и устройств дистанционной связи с какими-либо мобильными устройствами.

Для использования с мобильными устройствами по назначению двухстороннему подключению через разъем 3,5 мм

Оставшееся время воспроизведения рассчитывается по случайной выбранной композиции, воспроизводимой при средней громкости.

Настоящим Zound Industries International AB заявляет, что данное изделие соответствует требованиям Директивы 2014/53/ЕУ.

Максимальная мощность радиочастотной передачи: < 20 дБм.

Для ознакомления с декларацией о соответствии посетите сайт: www.marshallheadphones.com/doc

Разработано в Стокгольме • Изготовлено в Китае

ESPAÑOL

INSTRUCCIONES DE SEGURIDAD IMPORTANTES



No adecuados para niños menores de tres años. Contienen partes pequeñas que pueden hacer que un niño se atragante.



Escuchar música u otros sonidos a un nivel de volumen alto durante períodos prolongados puede provocar pérdida de audición. Para evitar posibles daños auditivos, no escuche música a niveles de volumen altos durante períodos prolongados.



Los productos eléctricos, cables, baterías, envoltorios y el manual no se deben mezclar con los desechos domésticos generales. Para un reciclaje correcto, lleve estos productos a un punto de recogida designado, donde los recogerán de manera gratuita, o devuélvalos a su punto de venta local. Eliminar el producto de manera correcta ahorra recursos y evita daños sobre las personas y el medioambiente.

Para evitar posible daños al medioambiente o a la salud causados por el desecho incontrolado de residuos, lleve las baterías recargables defectuosas a puntos de recogida adecuados o devuélvalos a su distribuidor especializado.

ADVERTENCIAS

- Baje el volumen antes de empezar a utilizar los auriculares.
- No utilice estos auriculares cuando conduzca un vehículo motorizado, monte en bicicleta o trabaje con máquinas, ni en cualquier actividad en la que el hecho de no poder oír sonidos exteriores pueda suponer un peligro para usted u otras personas.
- Usar estos auriculares limita la capacidad para oír sonidos a su alrededor, cualquiera que sea el ajuste del volumen.
- Manténgalos alejados del fuego, agua y equipos de alto voltaje.
- No modifique, desmonte, abra, deje caer, aplaste, perforo o destruya el auricular ni lo exponga a temperaturas superiores a 45 °C (113 °F).
- No provoque cortocircuitos en la batería que se incluye ni en las celdas.
- En caso de que se produzcan fugas en una celda, no permita que el líquido entre en contacto con la piel o los ojos.

Nota: el usuario no puede reemplazar la batería interna.

AVISO LEGAL

Zound Industries International AB huye de cualquier pretensión de compatibilidad del microfono y el mando con cualquier dispositivo móvil.

Para utilizar con dispositivos móviles con una clavija estándar de 3,5 mm protegida y bidireccional.

El tiempo de reproducción indicado se calcula utilizando una selección de música aleatoria, reproducida a volumen medio.

Por la presente, Zound Industries International AB, declara que este producto cumple las directiva 2014/53/UE.

Potencia máxima de transmisión de radiofrecuencia: <20 dBm

Si desea consultar la declaración de conformidad, visite el sitio web: www.marshallheadphones.com/doc

Diseñado en Estocolmo • Fabricado en China

SVENSKA

VIKTIGA SÄKERHETSINSTRUKTIONER



Produkten är inte lämplig för barn under tre år, eftersom den innehåller smådelar som kan orsaka kvävning.



Långvarig exponering för hög musik eller andra ljud kan skada din hörsel. Lyssna därför inte på hög volym under en längre tid.



Elektriska produkter, kablar, batterier, förpackningar och manualen ska inte slängas bland vanliga hushållssopor. För korrekt återvinning, ta dessa produkter till en uppsamlingsplats där de kan lämnas in utan avgift eller återlämna dem till din lokala återförsäljare. Korrekt bortskaftning av produkter sparar resurser och förebygger negativa effekter på människors hälsa och miljön.

För att förhindra skador på vår hälsa och miljön bör defekta laddningsbara batterier lämnas in vid en särskild uppsamlingsplats eller där du köpte produkten.

VARNING!

- Ställ ljudkällan på låg volym innan du börjar använda hörlurarna.
- Använd inte hörlurarna medan du kör ett motorfordon, cyklar eller använder någon typ av maskin. Använd dem inte heller om din begränsade förmåga att höra yttre ljud kan innebära en risk för dig eller någon annan.
- När du använder hörlurarna begränsas din förmåga att höra omgivande ljud, oavsett vilken volym du lyssnar på.
- Ha inte hörlurarna i närheten av elden, vatten eller högsprängningsutrustning.
- Hörlurarna får inte modifieras, monteras isär, öppnas, tappas, krossas, punkteras, dras isär eller utsätts för värme över 60 °C.
- Kortsitt inte det medföljande batteriet eller battericellerna.
- Om någon av battericellerna skulle läcka: Låt inte vätskan komma i kontakt med hud eller ögon.

Obs! Det interna batteriet är inte utbytbar för slutanvändare.

ANSVARSRISKRIVNING

Zound Industries International AB anger ingen kompatibilitet av mikrofonen eller vid fjärranvändning med någon mobil enhet.

För användning med mobila enheter, använd en 3,5 mm oskyddad tvåvägs standardkontakt.

Den angivna speltiden beräknas genom ett slumpmässigt musikalisk som spelas på medelhög volym.

Härmed deklarerar Zound Industries International AB, att denna produkt efterlever 2014/53/UE.

Maximal RF-sändningseffekt: < 20 dBm

En försäkran om överensstämmelse återfinns på följande webblat: www.marshallheadphones.com/doc

Designad i Stockholm • Tillverkad i Kina