


USER MANUAL - COVER : FRONT & BACK

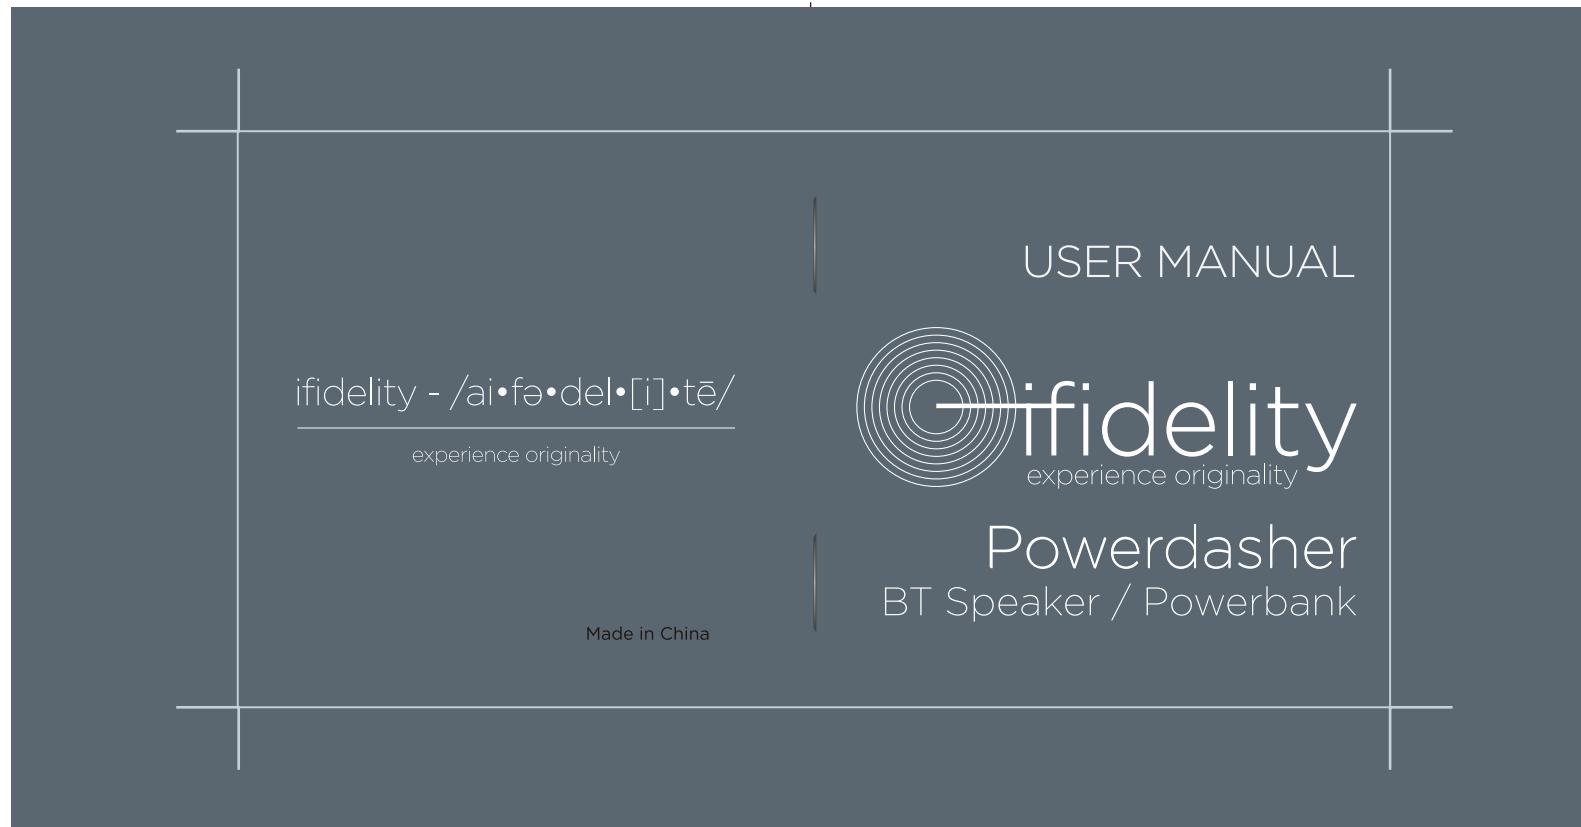

Bluetooth Speaker

Model:SPK311

FRONT SIDE

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

BACK SIDE

USER MANUAL - PAGE 1 AND 2 : FRONT & BACK

USER MANUAL - PAGE 3 AND 4 : FRONT & BACK

Care and Maintenance:

Do not subject the item to excessive force, shock, dust or extreme temperature.
Do not tamper the internal components of the item.
Clean the item with a clean dry cloth.
Avoid leaving item in hot, humid or dusty places.
Always keep your finger dry and clear before touching buttons.

This unit should only be serviced by qualified service personnel when exposure to liquids, force, or heat cause damage or a marked change in the item's performance.

User's Manual

Congratulations on your new ifidelity Powerdasher BT Speaker / Powerbank!

Read carefully and follow all instructions in this User's Manual before you use the Powerdasher BT Speaker / Powerbank.

Keep this User's Manual in a convenient location for future reference.

12

01

FRONT SIDE

Safety Information

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- Avoid contact with liquids and damp areas.
- Do not subject to excessive force or shock.
- Do not block the ventilation openings.
- Charge battery fully before use

02

Specifications:

Wireless Range: 30 ft
Max Play Time: 6 Hours
Time to Charge: 3 - 4 Hours
Lithium Ion Battery: 5V/1A, 2600 mAh

The right to make technical and design modifications in the course of continuous product development remains reserved. This device has been tested according to all relevant and current CE guidelines, such as electromagnetic compatibility and low voltage directives, and has been constructed in accordance with the latest safety regulations.

ASSEMBLED IN CHINA

11

BACK SIDE

Included:

- Powerdasher BT Speaker / Powerbank
- Micro-USB to USB cable
- 3.5mm audio line in cable
- Instruction Manual


Troubleshooting

1. Trouble connecting BT device to Powerdasher:
 - Ensure battery is fully charged
 - Ensure Bluetooth device is discoverable
 - Ensure device supports Bluetooth connection
 - Ensure both devices are within range
 - Ensure volume levels are audible
2. Audio is not functioning once device is connected with the 3.5mm splitter cable:
 - Ensure the non-Bluetooth device is set to a comfortable listening level.
3. Audio quality is abnormal:
 - Try charging the Powerdasher battery


10

03

FRONT SIDE

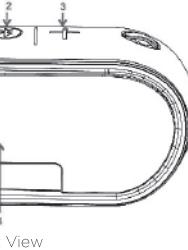

Overview:

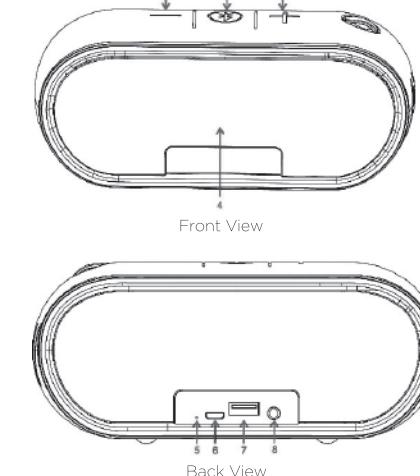

04

09

BACK SIDE

Periods of Non Use:

If the unit is to be left unused for a period of 1 week or more, the power cord should be unplugged from the unit to prevent damage or corrosion.

USER MANUAL - PAGE 5 AND 6 : FRONT & BACK

Charging the Battery:

1. Plug micro USB tip - from the included cable, into the micro USB port on the back of the Powerdasher Speaker
2. Plug USB tip - from the included cable, into USB compatible wall charger or computer USB port
3. LED indicator will alight red while charging. When the Rewind Speaker is fully charged, the LED indicator will alight blue.

1. Decrease Volume
2. ON/OFF button
Play/Pause/Answer Call/Ignore Call
3. Increase Volume
4. Power/Bluetooth Status Indicator
5. LED Battery Charging Indicator
6. Micro-USB Power Input
7. USB Power Output (Backup function)
8. 3.5mm AUX Line-in Port

08

05

FRONT SIDE

Connecting via Bluetooth:

1. Press and hold the ON/OFF button to power on the speaker. The Power/Bluetooth Status indicator flashes blue. Double press ON/OFF again to activate pairing mode and tone will sound. To play/pause/answer calls, press the ON/OFF button once. To ignore an incoming call, press twice.
2. On your Bluetooth device, turn on Bluetooth and scan for devices in the Bluetooth menu.
3. Select "Powerdasher" when it appears on device list. Once paired, the indicator stops blinking and displays a solid blue light. If a passcode is required, enter "0000".

Charging a Device:

1. Plug the included Micro-USB cable - or appropriate cable from device - into the power input on personal device.
2. Plug the USB end of the cable into the back of the Powerdasher Speaker.

06

07

BACK SIDE