

MB810 INSTRUCTION MANUAL

Warning Information

* Keep this instruction manual for future reference. * For adult use only.



STRANGULATION HAZARD Children have STRANGLED in cords. Keep this cord out of reach of children (more than 3 feet/1 meter away from the crib). Never use extension cords with AC adapters. Only use the AC Adapters provided.

 


Adult assembly required. Keep small parts away from children when assembling.

Setup and use your digital video baby monitor

Installing Baby Unit

A. Place Baby Unit on a flat surface, such as a desk or shelf or mount the camera on a wall. Never place the baby unit or the cord within 1 meter of the crib.



B. Connect the small plug of the power adapter to the Baby Unit and the other end to a suitable electrical outlet. Only use the enclosed adapter (5V DC 1000mA). Baby unit turns on automatically.



C. Connecting the power supply for the Parent Unit.

Connect the small plug of the power adapter to the parent unit and the other end to a electrical outlet. Only use the enclosed adapter (5V DC/1000mA). Recommend charging time of at least 3 hours before first use.





2

Precaution: use of battery for Parent Unit

Only charge the battery when the battery life indicator is low. Constant recharging of your battery before the low battery indicator light comes on will decrease the life of your batteries.

When battery is low, the power on off LED (icon) will flash red and on screen display battery icon will flash red indicating that the battery needs to be charged.

On/Off button



Press and hold to switch "On/Off" the unit.

3

Function of keys

Φ


◄ 》 ◄ »	Volume up/down button	Press to increase and decrease volume.	
무	Talk button	Press and hold to talk to baby unit. Press to switch on/off VOX (voice activation mode)	
VOX	VOX button		
≡	Menu button	Press to open and exit menu options.	
▲ ▼	Up/Down button	Menu mode (Press to adjust menu settings)	
4 •	Left/Right button	Menu mode (Press to adjust menu settings)	
4	Select button Menu mode (Press to select menu option)		
4	Camera Pan & tilt control button	Press to active the pan and tilt function.	

Baby Unit

Parent Unit

P	airing @	Pairing button	Press and hold for 3 seconds to activate camera paring mode for pairing to Parent Unit.

Features and components

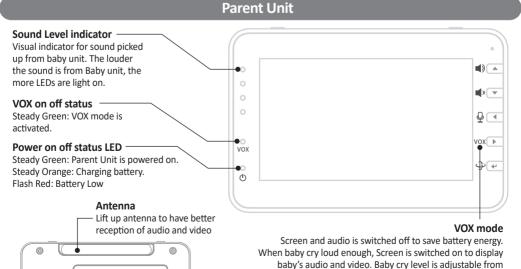


Kick Stand Flip out the kick stand and

place the Parent Unit on a stable, level surface.

Battery Door Open the battery door to change battery.

 Baby Unit



Menu setting (Sensitivity Level L, M, H)

5

Special features and menu operation



Adjust Parent Unit LCD lighter or darker.



Select and play lullaby in Baby Unit.



HIGH High: Beep Alarm is issued when room temperature is higher than this setting.

Low Beep Alarm is issued when room temperature is lower than this setting.

°C Display temperature in Celsius scale.

F: Display temperature in Fahrenheit scale.

ON ON: Activate room temperature and alarm function.

OFF: Deactivate room temperature and alarm function.



ADD: Add additional camera.

Step 1: Move the parent unit to the same area as the camera. Both parent and baby unit are switched on.

Step 2: Select ADD in Menu. The next available camera will automatically be highlighted. Press "Select" to begin pairing.

Step 3: Within 10 seconds, press "Pairing button" of camera.

Step 4: Once successfully paired, the camera night light will stop flashing and video will appear on the monitor screen within 20 seconds.

DEL: Delete paired camera from the list.

SCAN: Display paired camera one by one.

View: Select and display the camera



Sensitivity

** HIGH: Baby cry a little bit to activate the Parent Unit.

MED: Baby cry moderate to activate the Parent Unit.

LOW: Baby cry louder to activate the Parent Unit.

WARNING

THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION

- When an AC Adapter is plugged into an electrical outlet, do not the exposed end.
- Test baby monitor before first use, periodically, and when changing location of the baby unit(Camera).
- Do not use monitor near water (Such as bathtub, Sink, etc)
- ★ Keep parent unit away from heat

sources (Such as stoves, radiators, etc)

- Make sure there is proper ventilation around baby unit and parent unit.
- ☆ This product is not a toy. Do not allow children to play with it.



Battery Warning

- Use only the original rechargeable battery provided.
- ☆ Do not shot-circuit supply terminals.
- Remove battery when product is stored for long periods of time or when battery is exhausted.
- Dispose of exhausted battery properly.
- Keep all batteries away from children.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Statement

This device complies with Industry Canada licence-exempt RSS standard. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limit set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Cet équipement est conforme aux CNR-102 d'Industrie Canada. Cet équipement doit êtreinstallé et utilisé avec une distance minimale de 20 centimètres entre le radiateur et votrecorps. Cet émetteur ne doit pas être co-localisées ou opérant en conjonction avec autreantenne ou émetteur. Les antennes utilisées pour cet émetteur doivent être installés etfournir une distance de séparation d'au moins 20 centimètre de toute personne et doit pas être co-située ni fonctionner en conjonction avec une autre antenne ou émetteur.