

Product Instructions

Thank you for purchasing our product. Please refer to the instruction manual for better understanding of operating this product.


*Photos on manual are for reference only, please take the actual product as the standard.



MECHANICAL FOOTBALL

- 1 -

Product Content

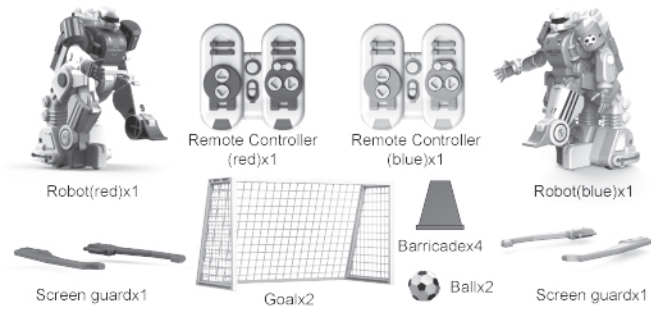

Version B Rechargeable



1. The robot is equipped with 2x3.7V 400MAH built-in battery (battery included).
2. 4*1.5V AAA batteries are needed for the remote controller (Batteries are not included).
3. Include 2xUSB charging cable.


Version A Non-rechargeable



1. The robot is equipped with 6 x 1.5V AAA batteries (batteries are not included).
2. 4*1.5V AAA batteries are needed for the remote controller (Batteries are not included).


Transmitter

Soccer Robot Functions Diagram

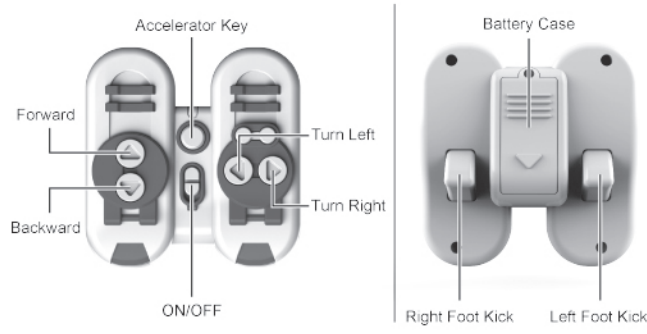

Transmitter function diagram



1. The remote control is equipped with 2 x 1.5V AAA non-rechargeable batteries (batteries are not included).
2. Use a screwdriver to open the battery pack first.
3. Install 2 x 1.5V AAA non-rechargeable batteries. Batteries are not included.
4. Close the battery cover and assemble the screws.

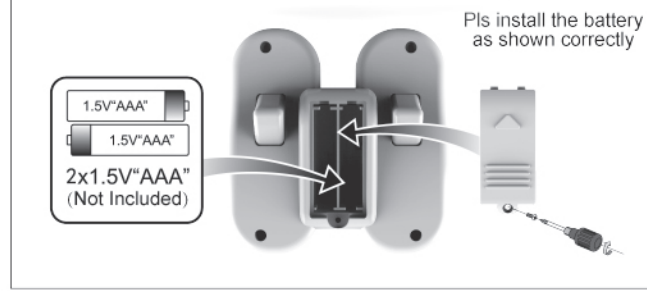

- 3 -

Robot


Diagram of robot battery installation (rechargeable)

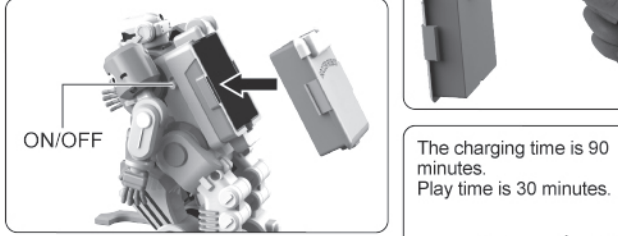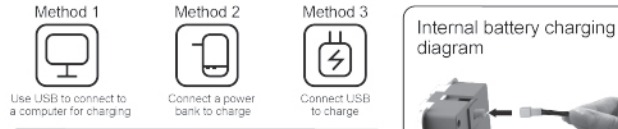

1. The robot is equipped with 3.7V built-in battery (battery included).
2. Firstly, open the battery box by hand.
3. Install 3.7V built-in battery.
4. Close the battery cover and fix tightly.


- 4 -

Diagram of robot battery installation (not rechargeable)

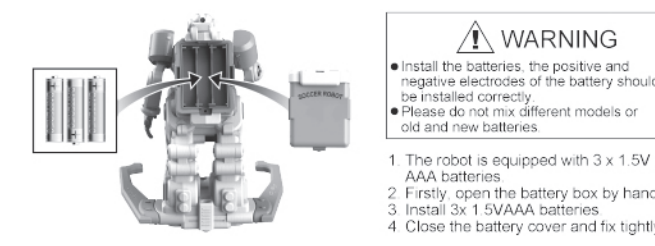


Preparation before operation

1. When the robot and the remote control are frequency aligned, the switch shall be ON to achieve frequency alignment, the time is 5-6 seconds and the frequency alignment is successful.

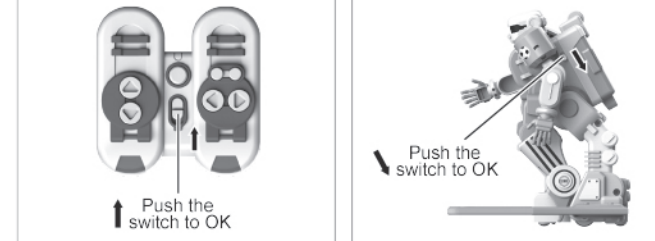

2. When the robot switch is turned on, the robot's eyes twinkle.

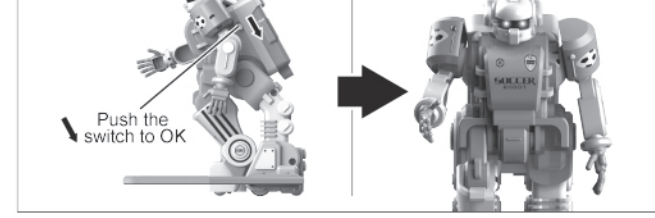


- 5 -

Operating procedure

Common land and water control functions


1. Forward

As shown in figure 1, press the forward button of the transmitter and the football robot will slide forward in a straight line.

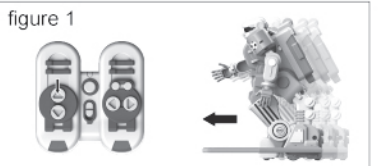


2. Backward

As shown in figure 2, press the back button of the transmitter and the football robot will slide backward in a straight line.

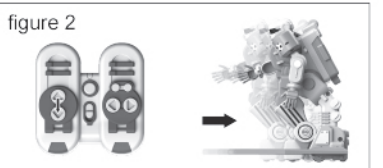

3. Turn Left

As shown in figure 3, press the left button of the transmitter and the football robot turns left.

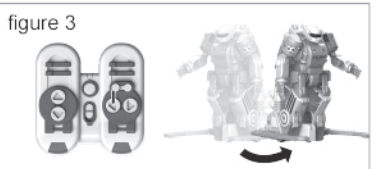

4. Turn Right

As shown in figure 4, press the right button of the transmitter and the football robot turns right.



- 6 -

5. Clockwise rotation

As shown in figure 5, long press the left button of the transmitter and the football robot will rotate 360 degrees in clockwise.



6. Counterclockwise rotation

As shown in figure 6, long press the right button of the transmitter and the football robot will rotate 360 degrees in counterclockwise.




7. Left Foot Kicking

As shown in figure 7, press the left foot button of the transmitter and the football robot will kicking the ball forward with its left foot.



8. Right Foot Kicking

As shown in figure 8, press the right foot kick button of the transmitter and the football robot will kicking the ball forward with its right foot.

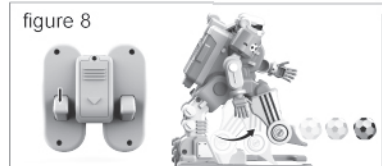


Note: during the robot operation function, the accelerator key can accelerate the speed of forward, backward, left and right turns, so as to improve the combat effectiveness.

- 7 -

Instruction of Operation

9. Assembly diagram of ball guard


As shown in figure 9, assemble the left and right ball protection boards manually by aligning them with the holes in the direction indicated by the arrows in the diagram.

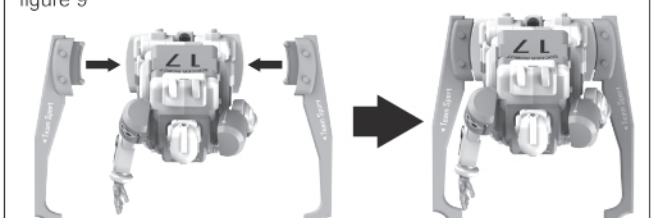

Note: the ball guard can be disassembled flexibly and play as you like.

10. Arm Rotating

As shown in figure 10, the left and right arms can rotate freely in 360 degrees manually, and the arms can be rotated freely to form a shape.

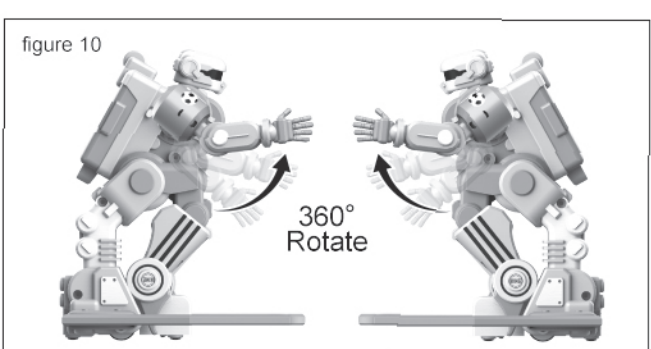

- 8 -

- ⚠ Warning! Not suitable for children under 36 months. Choking hazard. We recommend that you retain this packing for future reference.
- ⚠ Warnung! Nicht für Kinder unter 36 Monaten geeignet. Verschluckungsgefahr. Sie sollten diese Packung zum späteren Nachschlagen aufbewahren.
- ⚠ Waarschuwing! Niet geschikt voor kinderen jonger dan 36 maanden. Verstikkingsgevaar. Het wordt aanbevolen deze verpakking te bewaren voor raadpleging in de toekomst.
- ⚠ Attention! Ne convient pas aux enfants de moins de 36 mois. Risque d'étouffement. Nous vous recommandons de garder cet emballage afin de vous y référer à l'avenir.
- ⚠ Avvertenza! Non adatto ai bambini di età inferiore a 36 mesi. Pericolo di soffocamento. Si consiglia di conservare questo imballaggio per una consultazione successiva.
- ⚠ ¡Advertencia! No adecuado para niños de menos de 36 meses. Peligro de asfixia. Le recomendamos guardar este embalaje para consultas futuras.
- ⚠ Advertência! Não adequado para crianças com menos de 36 meses. Perigo de asfixia. Recomendamos que guarde esta embalagem para referência futura.
- ⚠ Varoitust! Ei sovelletä alle 36-kuukautisille lapsille. Tukehtumisvaara. Suosittelemme tämän pakkauksen säätämistä myöhempää tarvetta varten.

- 9 -

- ⚠ Advarsel! Ikke egnet til barn under 36 måneder. Kvelningsfare. Vi anbefaler at du oppbevarer denne innpakningen til fremtidig henvisning.
- ⚠ Varning! Ej lämpligt för barn under 36 månader. Kvävningssrisk. Vi rekommenderar att du sparar denna förpackning för framtida bruk.
- ⚠ Advarsel! Ikke velegnet til barn under 36 måneder. Kvelningsfare. Vi anbefaler, at du oppbevarer denne emballage til fremtidig brug.
- ⚠ Figyelmeztetés! Nem felel meg a 36 évesnél fiatalabb gyermekek számára. Fulladás veszély. Ajánljuk, hogy későbbi referenciára céljából őrizze meg ezt a csomagolást.
- ⚠ Внимание! Неподходящо за деца под 36 месеца. Опасност от задавяне. Препоръчваме Ви да запазите тази опаковка за бъдеща референция.
- ⚠ Ateňte! Nu se recomandă copiilor sub 36 de luni. Pericol de sufocare. Vă recomandăm să păstrați ambalajul pentru referințe ulterioare.
- ⚠ Varování! Nevhodné pro děti mladší 36 měsíců. Nebezpečí poknutí. Doporučujeme, abyste si tento obal uschovali pro pozdější potřebu.
- ⚠ Varovanie! Nie je vhodné pre deti do 36 mesiacov. Riziko udusenja. Odporučujeme, aby ste si obal uschovali pre použitie v budúcnosti.
- ⚠ Uprozorenje! Nije prikladno za djecu ispod 36 mjeseci starosti. Opasnost od gušenja. Preporučujemo vam da ovu ambalažu sačuvate za buduće potrebe.

- 10 -

- ⚠ Ostrzeżenie! Nie nadaje się dla dzieci w wieku poniżej 36 miesięcy. Niebezpieczeństwo zadławienia. Zaleca się zachowanie tego opakowania do wglądu.
- ⚠ Ispėjimas! Netinka vaikams iki 36 mėnesių amžiaus. Pavojus užspringti. Rekomenduojame šią pakuotę išsaugoti dėl informacijos panaudojimo ateityje.
- ⚠ Внимание! Не предназначено для детей младше 36 месяцев. Существует опасность попадания деталей в дыхательные пути. Рекомендуем сохранить данную упаковку для использования в дальнейшем.
- ⚠ Hoiatusi! Alla 36-kuusteelse lastele kasutamiseks keelatud. Lõmbumisohu. Soovitame hoida selle pakendi tulevikus kasutamiseks alles.
- ⚠ Bridinájums! Nav piemērots bērniem, kas jaunāki par 36 mēnešiem. Aizrīšanās briesmas. Mēs iesakām saglabāt šo iepakojumu turpmāka izziņai.
- ⚠ Uyarı! 36 aylıktan küçük çocuklar için uygun değildir. Boğulma tehlikesi. Daha sonra başvurmak üzere, bu kutuyu muhafaza etmeniz önerilir.
- ⚠ Προειδοποίηση! Δεν είναι κατάλληλο για παιδιά κάτω των 36 μηνών. Κίνδυνος πνιγμού. Σας συνιστούμε να κρατήσετε αυτή τη συσκευασία για μελλοντική παραπομπή.

- 11 -

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may fluids that can cause a chemical burn injury or ruin your toy(product). To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery (ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- 12 -