

User Manual

Read me first

- ◆ Please read this manual before operating your mobile phone, and keep it for future reference.
- ◆ The descriptions in this manual are based on the default settings.
- ◆ Images and screenshots used in this manual may differ from the actual product.
- ◆ Available features and additional services may vary by device, software or service provider.
- ◆ Our company is not liable for performance issues caused by third-party applications.

Contents

Assembling	- 1 -
Unpack	- 1 -
Charge the battery	- 1 -
Install the SIM card	- 1 -
Install the memory card	- 1 -
Getting started	- 2 -
Turn your device on ,reboot and off	- 2 -
Switch to flight mode	- 2 -
Home screen	- 2 -
Task bar	- 2 -
Notification panel	- 3 -
Auto rotation	- 3 -
Lock & unlock the screen	- 3 -
Customize your device	- 4 -
Manage applications	- 4 -
Security	- 4 -
Display size	错误！未定义书签。
Data saver	- 4 -
Quick Switch	- 5 -
Reset mobile phone	- 5 -
Communication	- 5 -
Phone	- 5 -
Contacts	- 6 -
Messaging	- 7 -
Email	错误！未定义书签。
Web	错误！未定义书签。
Browser	错误！未定义书签。
Entertainment	- 10 -
Camera	- 10 -
Tools	- 11 -
Calendar	- 11 -
Alarm	- 11 -
File Manager	- 11 -
Sound Recorder	- 12 -
Calculator	- 12 -
Connectivity	- 12 -
USB Connection	- 12 -
Wi-Fi	- 12 -
Bluetooth	- 13 -
Safety Precautions	- 13 -
Care & Maintenance	- 14 -
warnings	- 15 -

Assembling

Unpack

Check your product box for the following items.

- Mobile phone
- User manual
- Adapter

You can purchase additional accessories from your local retailer.

Charge the battery

Before using the device for the first time, you must charge the battery.

- 1 . You can charge the device with a travel adapter or by connecting the device to a PC with a USB cable.
- 2 . Battery full icon is shown when finished if your device is off.

Warning : Use only original batteries and chargers. Unapproved chargers or cables can cause batteries to explode or damage your device.

Install the SIM card

You need to insert a SIM card to use the Phone function. To install the SIM card, follow the instructions below.

1. Make sure that the card's gold contacts face into the device.
2. Push the SIM card into the slot.

Install the memory card

To store additional multimedia files, you need insert a memory card.

1. Insert a memory card with the gold contacts facing downwards.
2. Push the memory card into the slot.

Notice: Our company uses approved industry standards for memory cards, but some brands may not be fully compatible with your device.

Getting started

Turn your device on ,reboot and off

To turn on your device, press and hold the power key.

To reboot your device, press and hold the power key, select “**Restart**” .

To turn off your device, press and hold the power key, select “**Power off**”.

Switch to flight mode

To use only your device’s non-network services, switch to flight mode. Please follow the instructions below to turn on flight mode:

Tap **Settings** → **Network & internet** → **Airplane mode** from application list to turn on flight mode.

Home screen

The home screen has multiple panels. Scroll left or right to the panels on the home screen, you can view indicator icons, widgets, shortcuts to applications, and other items.

Task bar

The task bar is shown at the top of the screen. It displays commonly used option buttons, battery level indicator, current time and other indicator icons.

Indicator icons

Icon	Definition	Icon	Definition
	Open WiFi available		Flight mode activated
	WiFi connected		New email
	Signal strength		New text or multimedia message
	BT connected		Call in progress
	Uploading data		Missed call
	Downloading data		Call on hold
	Connected to PC		Call diverting activated
	Alarm activated		Battery power level

	Music being played		Do't disturb
	Auto-rotate		Location
	Flashlight		

Notification panel

Pull down to open the top of the notification bar to show the 6 users commonly used shortcut switch, support click on the switch, and long press to enter the corresponding settings. If you continue to pull down the notification bar to display all the quick switch, fast switch in the lower right corner of page will display a "Edit" button, click to add / delete custom shortcut switch, or drag the sort.

Tap icon to activate or deactivate wireless connection features and other settings.

Wi-Fi : Activate or deactivate the Wi-Fi connection.

Bluetooth : Activate or deactivate the Bluetooth connection.

Notifications : Activate or deactivate the notification feature.

Flashlight : Activate or deactivate the Flashlight.

Auto-rotate screen : Activate or deactivate the auto rotation feature.

Battery Saver : Activate or deactivate the Battery Saver.

Brightness : Adjust the basic brightness level of the display to lighter or darker.

Settings : Access Settings application.

Auto rotation

If you rotate the device while using some features, the interface will automatically rotate as well.

To prevent the interface from rotating, open the notifications panel and select **Auto-rotate screen**, then tap it to **Off**.

Lock & unlock the screen

Slide to unlock the screen.

To lock the screen manually, press **Power** key.

Customize your device

To customize your device according to your preferences, tap **Settings** from application list or notification panel.

Manage applications

To manage the applications installed on your device, tap **Settings** \rightarrow **Apps & notifications**.

1. To uninstall an application, select an item and tap **UNINSTALL**, tap **OK** to confirm.
2. To stop or change the settings of an application, select an item and tap the option you need.

Security

You can protect your device and data by setting screen lock or encrypting your mobile phone.

◆ Set a screen lock

To set a screen lock, tap **Settings** \rightarrow **Security** \rightarrow **Screen lock** from application list.

- **None** : Deactivate the screen lock.
- **Swipe** : Slide to unlock the screen.
- **Pattern** : Draw a pattern to unlock. Follow the instructions to draw your lock pattern. When prompted, draw the pattern to unlock the screen.
- **PIN** : Enter a numeric PIN to unlock. When prompted, enter the PIN to unlock the screen.
- **Password** : Enter a passcode to unlock. When prompted, enter the passcode to unlock the screen.

◆ Screen timeout

Select **Settings** \rightarrow **Display** \rightarrow **Advanced** \rightarrow **Screen timeout** from application list, you can set the time before the screen times out and goes into lock mode. (you have not entered any characters or made other selections).

Display size

1. You can set it **Settings** \rightarrow **Display** \rightarrow **Advanced** \rightarrow **Display size**

Data Saver

1. You can set it **Settings** \rightarrow **Network & internet** \rightarrow **Advanced** \rightarrow **Data Saver**

Quick Switch

1. You can switch applications by simply double clicking the "**Recents**" button

Reset mobile phone

You can reset system and desktop settings to their original values by the following steps:

1. Select **Settings** \rightarrow **System** \rightarrow **Advanced** \rightarrow **Reset options** from application list.
2. Tap **Erase all data** (factory reset).
3. Tap **Erase all data**.
4. Tap **Erase all data**.

The device resets to the factory default settings automatically.

Warning: Factory data reset will erase all data from your device, including your Google account, system and application data and settings, and downloaded applications.

Communication

Phone

To use calling functions, tap **Phone** from application list.

◆ Make calls

To make calls, you can use any of the three ways:

- Enter numbers by using the virtual numeric keypad on the screen
- Make a call from call log.
- Make a call from contacts.

◆ Answer a call

To answer a call, Swipe up the screen.

◆ Decline or end a call

To decline a call, Swipe down the screen.

To end a call in progress, tap the red button.

◆ Call settings

To change call settings, tap the option button at the lower Right below the dial-up interface.

1. **Ringtone & Vibrate**

- You can set different ringtones for incoming calls. **Settings** \rightarrow **Sound** \rightarrow Select **Phone**

ringtone to open a list of ringtones, select the desired ringtone, and then select **OK** to confirm.

- **Settings** ↳ **Sound** ↳ Select **Vibrate for calls** to open the vibration function and the phone vibrates to notify you when call is coming.

2. Dial pad touch tones

Settings ↳ **sound** ↳ **Advanced** ↳ **Dial pad tones** You can open or close the Dial pad tones.

3. Voice mail

With the call divert network service, you can direct incoming calls to your voice mailbox.

Phone ↳ **Settings** ↳ **Voicemail** ↳ **Select SIM card**

- Tap **Service** in **Advanced Settings** to set your voice mail service provider.
- Tap **Setup** in **Advanced Settings** to set your voice mail number.
- Tap **Sound** in **Notifications** ↳ **Advanced Settings** to set the desired ringtone for your voice mail.

4. Fixed Dialling Numbers

If FDN mode is activated, your device will restrict outgoing calls, except for the numbers stored in the FDN list.

5. Quick responses

Quick response is a feature to reject the call with the predefined messages.

Tap one of the pre-written messages to be displayed when you want the call to be rejected, then tap **OK**.

6. Call forwarding

Call diverting is a network feature to send incoming calls to another number that you specify.

7. Call waiting

If **call waiting** is activated, the network notifies you of a new incoming call while you have a call in progress or you can make a new call during a call.

Contacts

Tap **Contacts** from application list to access contacts.

- **All** : List all your contacts saved in the device memory and SIM cards.
- **Favorites** : List the contacts that you have set as favorites or the contacts that you have sent message to or dialed.

◆ Add new contact

1. Access Contact number.



2. Click
3. Enter necessary Contact name.
4. Click ✓.

◆ **Edit a contact**

1. To edit a contact, select and click the contact you want to change.
2. Click the edit icon at the upper right.
3. Change necessary fields.
4. Click ✓.

◆ **Import/Export contacts**

1. **Import from the SIM card**

To import the contacts from the SIM card, click the option button at the upper left and then select **Settings** ➔ **Import** ➔ **Select USIM** ➔ **Click OK** ➔ **Select contacts** ➔ **Click ✓**.

2. **Import from MEMORY card**

To import contacts files (in vcf format) from a memory , tap the option button at the upper left and then select **Import** ➔ **Select .vcf file** ➔ **Click OK** ➔ **Select .vcf file** , and then the contacts will be imported to your device.

◆ **Search for contacts**

1. Enter the desired information in Search contacts input box , then your device shows the result.

Messaging

Learn to create and send a text or multimedia message, and view or manage messages that you have sent or received.

◆ **View messages**

1. Click **Messaging** from application list.
2. Click the message to view the detailed information.

◆ **Create and send SMS**

1. Click enter **NEW MESSAGE**.
2. In **Type name or number** field, enter the recipient's mobile phone numbers manually. If you enter more than one number, separate the numbers with a comma.
3. In **Type test message** field, enter the text of the message.

4. Click **Send** to send the message.

◆ **Create and send MMS**

Multimedia message can include pictures, sound and text.

1. Click  enter **NEW MESSAGE**.
2. In **Type name or number** field, enter the recipient's mobile phone numbers manually. If you enter more than one number, separate the numbers with a comma.
3. Click **Attach** to Select one of the items below.
 - Pictures: Insert image.
 - Capture picture: Capture new picture and insert the picture.
 - Videos: Insert video clip.
 - Capture video: Capture new video clip and insert the video clip.
 - Audio: Insert sound clip.
 - Record audio: Record sound clip and insert the sound clip.
 - Slideshow: Add more than one slide.
 - Contact: Insert contacts
 - Calendar: Insert Calendar
4. In **Type test message** field, enter the text of the message.
5. Click **Send** to send the Multimedia message.

Email

To receive and send mail, you must have a remote mailbox service. This service may be offered by a service provider. Your device is compliant with applicable internet standards for POP3/IMAP/Exchange.

Before you can send or receive mail on your device, you need to set up an email account and define the email settings correctly. You can define more than 1 mailbox.

◆ **Set up your email**

1. Click **Email** from application list.
2. You can use mailbox guide to set up your mailbox, tap **Next** until it's done.
3. If you need to add another email account, tap the **option button** at the upper left  **Settings**  **Add account**, then set up the email account with the mailbox guide.

When you are finished setting up the email account, the email messages are downloaded to

your device. If you have created more than two accounts, you can switch between email accounts. Select an account name at the top left of the screen and select the one you want to retrieve messages from.

◆ **Delete your email account**

Click **Settings** from application list → **Users & accounts** → Click on the email address → Click the "REMOVE ACCOUNT" button

◆ **Create and send email**

1. Open **Email** application.
2. Click the write button.
3. In **To** field, enter the recipient's email addresses manually and separate them with a comma.

Add more recipients by tapping **Cc/Bcc**.

4. Click  to choose attachments that you want to insert.
5. Enter the subject and the text.
6. Click **SEND** button to send the email.

Web

Browser

Tap **Browser** from application list to access to the web.

◆ **Browser webpages**

1. Select **Browser** to launch a specified homepage.
2. To access a specific webpage, select the URL input field, enter the web address of the webpage, and select **Go**.

◆ **Set homepage**

1. Tap the option button  at the upper right.
2. Select **Settings** → **General** → **Set homepage**.
3. Enter the web address of the desired webpage.

◆ **Add bookmarks**

While navigating a website, click  → select "**Save to bookmarks**" to Save bookmarks and easily access it later.

◆ **View bookmarks and history**

Tap the option button  at the upper right \rightarrow select “**Bookmarks/History**” to open the bookmark list and the recent history. click a bookmark or any entry to display the webpage.

◆ **Customize browser**

To make adjustments in your browser settings, click the option button  at the upper right, and then select **Settings**.

Entertainment

Camera

With the camera function, you can capture photos and take videos.

◆ **Capture a photo**

1. Open the application list and select **Camera**.
2. Before taking a picture, you need to know some settings.

Place two fingers on the screen and spread them apart or move fingers closer together to zoom in or zoom out.

Icon	Definition
	Settings
	Change to video mode.
	take photos
	Tap to switch between the front and rear camera lenses
	Smile Mode
	Change to panorama mode to take a landscape photo.

3. Aim the lens at the subject and tap  to take a photo. The photo is saved automatically to the folder DCIM.
4. Select the image viewer icon at the lower right to view the pictures.

◆ **Record a video**

1. Open the application list and select **Camera**. Tap  to change to video mode.
2. Tap  to start recording. The length of the video recording is restricted by the available space on your storage.
3. Tap  to stop recording. The video is saved automatically to the folder DCIM.
4. After recording videos, select the image viewer icon at the lower right to view the recorded videos.

Tools

Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

To access the calendar, tap **Calendar** from application list.

1. To create an event, tap the option button at the upper right and then select **New event**.
 - Fill in the fields, and set category, date, time & an alarm.
 - After you finish, select **DONE**.
2. You can view calendar in different views, Day, Week, Month and All.
3. To delete an entry, tap the event to open it → tap the option button at the upper right and then select **Delete** → select **OK**.

Alarm

From application list, tap **Clock**, and then select .

1. Tap  to add alarm.
 - Tap the numeric pad to set alarm time, and then select **AM** or **PM**, when you are finished, tap **OK**.
 - Tap the time to change alarm time.
2. Set repeat cycle, alarm ringtone, Vibrate ,and edit Label message, tap **OK** after finished.
3. Tap “**DISMISS**” to shut down the alarm, and tap “**SNOOZE**”, then the alarm will stop ringing for a few minutes.
4. Tap the Arrow of one alarm and click  to Delete this alarm.

File Manager

Many features of the device, such as images, videos, documents, received attachments and downloaded files or applications, use memory to store data. With **File manager**, you can store and browse files and folders in your device, or edit, move, copy files; you can send files to compatible devices as well.

Note:

1. Some files formats are not supported depending on the software of the device.
2. Some files may not play properly depending on how they are encoded.

Sound Recorder

With Recorder, you can record a voice memo. From application list, tap **Sound Recorder**.

1. To record a voice memo, tap .
2. To stop the recording, tap .
3. To listen to a voice recording that you just recorded, tap .

Calculator

With this feature, you can use the device as a calculator. The calculator provides the basic arithmetic functions. Tap the virtual numeric and calculation keys to perform a calculation.

Connectivity

USB Connection

You can connect your device to a PC and use it as a removable disk, which allows you access the file directory.

1. If you want to transfer files from or to device, insert a memory card into the device.
2. With a USB cable, connect your device to a PC.
3. Open the notification panel, Use USB to select **Transfer files**.
4. Open the folder to view files.
5. Copy files from the PC to the device memory or memory card.

Wi-Fi

With Wi-Fi, you can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

◆ Activate the Wi-Fi feature

1. From application list, tap **Settings**  **Network & internet**, turn on the **Wi-Fi** feature.

◆ Find and connect to Wi-Fi

1. Once the Wi-Fi feature is activated, the device automatically search for available Wi-Fi connection.
2. Select a network.
3. Enter a password for the network (if necessary).
4. Select **Connect**.

Bluetooth

With bluetooth, you can share music, pictures, video, contacts with another phone. You can use bluetooth headset phone or listening to music.

◆ Activate the bluetooth feature

1. From application list, tap **Settings** ➔ **Connected devices** ➔ **Pair new device**.

◆ Scan and connect to other Bluetooth devices

1. The device automatically search for other Bluetooth devices.

2. Select a device and pair.

Safety Precautions

Read these simple guidelines before using your device. Not following them may be dangerous or illegal.

◆ Aircraft

Switch off in aircraft and follow any restrictions. Wireless devices can cause interference in aircraft.

◆ Vehicles

Never use your device while driving. Place it in a safe place.

Position your device within easy reach. Be able to access your device without removing your eyes from the road.

◆ Electronic devices

In some circumstances your device may cause interference with other devices.

◆ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

◆ Pacemakers and other medical devices

Pacemaker manufacturers recommend that a minimum separation of 8 inches be maintained between a wireless device and a pacemaker to avoid potential interference with the pacemaker.

Operation of any radio transmitting equipment, including wireless phones may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions.

Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so.

◆ **Operating environment**

When connecting to other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

Do not place your device in the air bag deployment area.

Use the device only in its normal operating positions as explained in the product documentation.

Always switch off your device when its use is prohibited or when it may cause interference and danger.

◆ **Areas with posted regulations**

Switch off your device when any regulations posted in these areas instruct you to do so.

Care & Maintenance

- ◆ Use only manufacturer-approved accessories. Use general accessories may shorten the life of your device or cause device to malfunction.
- ◆ Keep your device dry. Humidity and all types of liquids may damage device parts or electronic circuits.
- ◆ Do not use or store the device in dusty, dirty areas.
- ◆ Do not store the device in hot or cold areas.
- ◆ Do not store your device near magnetic fields.
- ◆ Do not store your device with such metal objects as coins, keys and necklace.
- ◆ Do not drop your device or cause impacts to your device.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

warnings

◆ FCC RF EXPOSURE INFORMATION:

◆ WARNING!! Read this information before using your phone

- ◆ In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

◆ BODY-WORN OPERATION:

- ◆ This device was tested for typical body-worn operations with the back/front of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

- ◆ that cannot maintain 0.5cm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.
- ◆ For more information about RF exposure, please visit the FCC website at www.fcc.gov
- ◆ Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:
- ◆ **<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP>**

(1999)

- ◆ Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).
- ◆ Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

◆ NORMAL POSITION:

- ◆ Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

◆ RF Exposure Information:

- ◆ This product is in compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID:2AC83ZOCAD42Z to gain further information include SAR Values.
- ◆ This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
 - ◆ (1) this device may not cause harmful interference, and
 - ◆ (2) this device must accept any interference received, including interference that may cause undesired operation.

- ◆ NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.
- ◆ NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - ◆ - Reorient or relocate the receiving antenna.
 - ◆ - Increase the separation between the equipment and receiver.
 - ◆ - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - ◆ - Consult the dealer or an experienced radio/TV technician for help
 - ◆ Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.
 - ◆ Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 - ◆ Ad Hoc function is supported but not able to operate on non-US frequencies.

Google, Android, Google Play and other marks are trademarks of Google LLC.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **0.597W/Kg** and when worn on the body, as described in this user guide, is **0.798W/Kg** (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is **1.161W/Kg**. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: **2AAH8-OSIDDV1** Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **10mm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

IC STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s)

Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue.

The highest SAR value for this model phone when tested for use at the ear is **0.597 W/Kg** and when worn on the body is **0.798 W/Kg**. The maximum scaled SAR in hotspot mode is **1.161 W/Kg**. This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **10mm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

Ce dispositif est conforme aux normes autoriser-exemptes du Canada RSS d'industrie

L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Cet équipement est conforme avec l'exposition aux radiations IC définies pour un environnement non contrôlé. L'utilisateur final doit respecter les instructions de fonctionnement spécifiques pour satisfaire la conformité aux expositions RF. Cet émetteur ne doit pas être co-localisées ou opérant en conjonction avec une autre antenne ou transmetteur. Ces exigences définissent la valeur SAR limite à 1.6 W / kg en moyenne par gramme de tissu. La valeur SAR la plus élevée pour ce modèle de téléphone testé à l'oreille est **0.597 W/Kg** et lorsque porté sur le corps est **0.798 W/Kg**. L'échelle maximale sar en mode hotspot est de **1.161 W kg**

Cet appareil a été testé pour des opérations portés sur le corps typiques. Pour se conformer aux exigences d'exposition aux radiofréquences, une distance minimale de 15 mm doit être maintenue entre le corps de l'utilisateur et le combiné, y compris l'antenne. Les pinces de ceinture, les étuis et autres accessoires similaires utilisés par cet appareil ne doivent pas contenir de composants métalliques. Les accessoires portatifs qui ne répondent pas à ces exigences peuvent ne pas se conformer aux exigences d'exposition RF et doit être évitée.

Utilisez uniquement l'antenne fournie ou une antenne approuvée