

# Orpyx SI® Sensory Insoles Digital Display

## Mobile Phone

### User Manual

Important information enclosed. Do not discard.



## Orpyx SI Sensory Insoles Digital Display Table of Contents

<b>1 General Information</b>	<b>2</b>
1.1 Profile	2
1.2 Safety warning and Attentions	2
<b>2 Your phone</b>	<b>4</b>
2.1 Phone overview	4
2.2 Functions of Keys	4
2.3 Functions of icons	4
<b>3 Getting started</b>	<b>4</b>
3.1 Installing the SIM Card and the Battery	4
3.2 Charging the Battery	5
3.3 Linking to the Networks and devices	5
3.4 Using the touch screen	6
3.5 Using the onscreen keypad	7
3.6 Dialing Calls	8
<b>4 Using the Menu</b>	<b>8</b>
4.1 Calendar	8
4.2 Camera	8
4.3 Chrome	9
4.4 Clock	9
4.5 Contacts	9
4.6 Files	9
4.7 FM Radio	9
4.8 Gallery	9
4.9 Messaging	10
4.10 Phone	10
4.11 Settings	10
4.12 SIM Toolkit	10
<b>5 Appendix</b>	<b>12</b>

## 1. General Information

### 1.1 Profile

Please read this pamphlet carefully in order to make your phone in perfect condition.

Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

### 1.2 Safety warning and Attentions

#### Safety warning

- **ROAD SAFETY COMES FIRST**  
Do not use a hand-held phone while driving. Use hands-free fittings when calls are unavoidable while driving. In some countries, dialing or receiving calls while driving is illegal!
- **SWITCH OFF IN AIRCRAFT**  
Wireless devices can cause interference in aircraft. Using a mobile phone in flight is illegal and risky. Please make sure that your mobile phone is powered off in flight.
- **SWITCH OFF BEFORE ENTERING RISKY AREAS**  
Strictly observe the relevant laws, codes, and regulations on the use of mobile phones in risky areas. Turn off your mobile phone before entering a place susceptible to explosion, such as an oil station, oil tank, chemical plant or a place where a blasting process is under way.
- **OBSERVE ALL SPECIAL REGULATIONS**  
Follow any special regulations in force in any area such as hospital and always switch off your phone whenever it is forbidden to use it or when it may cause interference or danger. Properly use your mobile phone near medical apparatuses, such as pacemakers, hearing aids and some other electronic medical devices, as it may cause interference to such apparatuses.
- **QUALIFIED SERVICE**  
Only qualified personnel may install or repair phone equipment. Installing or repairing the mobile phone on your own may bring great danger and violates the warranty rules.
- **ACCESSORIES AND BATTERIES**  
Use only approved accessories and batteries.
- **USE SENSIBLY**

## 2. Your Phone

### 2.1 Phone overview

### 2.2 Functions of Keys

The mobile phone provides the following keys:

- Power key  
Power key situates at the right side of the phone. While using the phone, you can press this key to lock screen; if you press and hold this key, a phone-options dialog would pop out. Here, you can select to power on/off, restart and dial the emergency number.
- Volume key  
Volume key situates at the upper side of the power key. You can press it to adjust ring volume.

### 2.3 Functions of icons

- Overview icon  
Touch this icon to view images of applications recently used. Click the image to open the corresponding application;
  - Home icon  
Touch it to open home screen. If you're viewing the left or right extended Home screen, touch it can enter the home screen;
  - Back icon  
Touch this icon to return to the previous screen.
- Precautions
- This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:
  - Keep the mobile phone and all its fittings beyond children's reach.
  - Keep the mobile phone dry. Keep away from rain, moisture, liquid or other substances that may corrode electronic circuits.
  - Do not use or store the mobile phone in dusty place, lest that active parts of the mobile phone be damaged.
  - Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of electronic circuits and damage the battery and some plastic parts.
  - Do not store the mobile phone in a chilly place. Otherwise, moistures will be formed inside the mobile phone to damage electronic circuits when the mobile phone is moved to a constant temperature place.
  - Do not throw, knock or shock the mobile phone, as that will destroy the internal circuits and high-precision components of the mobile phone.

## 3. Getting Started

### 3.1 Installing the SIM Card

A SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note: After powering off your mobile phone, wait for a few seconds before removing or inserting A SIM card. Exercise caution when operating A SIM card, as friction or bending will damage the SIM card. Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.

### Installation

## 3.2 Charging the Battery

Battery level indication:

- Your mobile phone can monitor and display the battery state.
- Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.
- When the battery energy is insufficient, the mobile phone prompts "Battery may run out soon".
- Using a travel adapter.
- Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.
- Insert the plug of the travel charger to an appropriate power outlet.
- During charging, there is a lightning bolt icon in the battery icon until the battery is fully charged.
- Battery icon do not have lightning icon at the end of charging.

Note: Ensure that the plug of the charger, the plug of the headphones, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems. Before the charging, ensure that the standard voltage and frequency of the local mains supply match the rated voltage and power of the travel charger.

### Optimizing battery life

You can extend your battery's life between charges by turning off features that you don't need. You can also monitor how applications and system resources consume battery power. To guarantee the optimal performance of your battery, please stick to the following rules:

- Turn off radios that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPRS, use the Setting application to turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- If you don't need them, turn off automatic syncing for Gmail, Calendar, Contacts, and other applications.

### 3.3 Linking to the Networks and devices

Your phone can connect to a variety of networks and devices, including mobile networks for voice and data transmission, Wi-Fi data networks, and Bluetooth devices, such as headsets. You can also connect your phone to a computer, to transfer files from your phone's SD card and share your phone's mobile data connection via USB.

### Connecting to mobile networks

When you assemble your phone with a SIM card, your phone is configured to use your provider's mobile networks for voice calls and for transmitting data.

### Connecting to Wi-Fi networks

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

Touch Settings> Network & internet >Wi-Fi. Check Wi-Fi to turn it on. The phone scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

Note: If the phone finds a network that you connected to previously, it connects to it.

Touch a network to connect to it. If the network is open, you are prompted to confirm that you want to connect to that network by touching Connect. If the network is secured, you're prompted to enter a password or other credentials.

### Connecting to Bluetooth devices

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 8 meters. The most common Bluetooth devices are headphones for making calls or listening to music, hands-free kits for cars, and other portable devices, including laptops and cell phones.

Touch Settings>Connected devices. Check Bluetooth to turn it on. You must pair your phone with a device before you can connect to it. Once you pair your phone with a device, they stay paired unless you unpair them.

Your phone scans for and displays the IDs of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, make it discoverable.

### Connecting to a computer via USB

You can connect your phone to a computer with a USB cable, to transfer music, pictures, and other files between your phone's SD card and the computer.

### 3.4 Using the touch screen

- Touch-screen tips

## 3.5 Using the onscreen keypad

You enter text using the onscreen keyboard. Some applications open the keyboard automatically. In others, you touch a text field where you want to enter text to open the keyboard.

- To enter text
- Touch
- To act on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons, you simply touch them with your finger.
- Touch & hold
- Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a menu for customizing the Home screen, you touch an empty area on the Home screen until the menu opens.
- Drag
- Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position.
- Swipe or slide
- To swipe or slide, you quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you slide the screen up or down to scroll a list.
- Lock screen
- When Screen lock in Security setting is enabled, press Power key to lock the handset. This helps to prevent accidental touching of keys and as well as power saving. When Sleep function in Display setting is enabled, after the handset device has been idle for preset period, the screen will be locked automatically to save power.
- Unlock screen
- Press Power key to switch on the handset device. The lock screen appears. Swipe up to unlock screen, and the screen being locked last time will show.

- Touch a text field, and the onscreen keyboard opens. Some applications open the keyboard automatically. In others, you touch a text field where you want to enter text to open the keyboard.
- Touch the keys on the keyboard to type.
- The characters you've entered appear in the text field, with suggestions for the word you are typing below.
- Use the Delete icon to erase characters to the left of the cursor.
- After finishing typing, touch Back icon to close the keyboard.

### 3.6 Dialing Calls

- Dialing a call to a number in the contacts
- Touch the Phone icon or the phone application icon on the Home screen, then select the Contacts tab. Swipe or slide upward/downward to pick out the target contact. Then you can touch the dial icon to originate a call.
- Dialing a call to a number in call log
- Touch the Phone icon or the phone application icon on the Home screen, then select the call log tab. Swipe or slide upward/downward to pick out and touch the target contact. Then you can originate a call.
- Answering incoming calls
- Drag the Answer icon towards up to answer an incoming call.
- Touch the End icon to end the current conversation.
- Managing multiple calls
- If you accept a new call when you're already on a call, you can drag the Answer icon towards up to answer the current calls.

## 4. Using the Menu

### 4.1 Calendar

You can open the calendar to see today's date and the calendar for a month.

### 4.2 Camera

Touch the Camera icon in the main menu interface or on the home screen, camera opens in Normal mode, ready to take a picture. In this mode, you can touch the bottom icon to take a photo or record a video.

### 4.3 Chrome

You can use Chrome to view web pages and search for information on the web.

### 4.4 Clock

Clock opens with the date and time displayed on your status bar.

You can set an alarm by modifying an existing alarm or by adding a new one.

### 4.5 Contacts

- **Create contact:** Touch add contacts icon in the right down side, fill in the information and save it.
- **Delete contact:** Long press the target contacts. Touch the delete icon and confirm **DELETE** button.
- **Contacts to display:** you can select the contacts on different group to display.
- **Import/export contacts:** you can import/export the contacts form SIM card or storage; you can also share the visible contacts.
- **Blocked numbers:** you can screen calls and SMS from specific phone numbers.
- **Batch delete:** you can delete all contacts conveniently.

### 4.6 Files

The phone supports the SD card. You can use the File to conveniently manage various directories and files on the phone and the SD card. Use this application to get a rundown of how much space is being used and some tools you can use to clean up your phone's files. You can also transfer files to other devices and filter files based where they came from to more easily comb through them on your phone.

### 4.7 FM Radio

Please plug in the compatible headphones to the device and then turn on the radio. The headphones cable can be used as FM Antenna. Please adjust appropriate volume when listening to the radio. Continue to use higher volume is harmful for your ear.

### 4.8 Gallery

Both pictures and videos taken by camera or stored in the phone and the SD card can be scanned through this function.

### 4.9 Messaging

You can use Messages to exchange text messages (SMS) and multimedia messages (MMS) with your friends on their mobile phones.

### Sending a message

1. Touch message icon on the home screen and touch + icon to edit a new message.
2. Enter a contact's name or call number in the To field. As the information is entered, all matching contacts appear. Touch a suggested contact or multiple contacts as message recipient(s).
3. Touch Enter message to compose your message.
4. After completing the message, touch Send icon to send your message.

### 4.10 Phone

Touch the phone icon on the Home screen or in main menu interface. Three tabs are listed at the bottom of the screen. You can find a dialpad screen where you can input phone number to originate a call.

Note: During a conversation, you can't originate a new call by open the dialpad, enter number and press dial key. If you press dial key, the current conversation would hold.

### 4.11 Settings

- **Network & internet**
  - You can use Network & Internet settings to manage your SIM cards, configure and manage connections to networks and devices by using Wi-Fi. You can also set Mobile network, Data usage, Hotspot & tethering , VPN, and Airplane mode in this interface.
- **Connected devices**
  - You can configure and manage connection to devices by using Bluetooth and USB.
- **Apps & notifications**
  - You can use the Apps settings to view details about the applications installed on your phone, to manage their data and force them to stop, to view and control currently running services, etc. You can also set Notifications, Do Not Disturb preferences.
- **Battery**
  - You can view your battery status, battery level and battery use in this interface.
- **Storage**
  - Use the Storage settings to monitor the used and available space on your phone and on your SD card and to manage your SD card.
- **Sound**

- You can set the phone's various alerts, scene mode, volume, etc.
- **Display**
- You can set Brightness level, Adaptive brightness, Sleep, Auto-rotate screen, Screen saver, Font size and Display size in this interface.
- **Wallpaper**
- You can set various wallpaper of the phone.
- **Accessibility**
- You use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.
- **Security**
- You can set the Settings and information about the security of the phone, such as the security status, device security including how the screen is locked.
- **Privacy**
- You can see some information about the privacy of the mobile phone including permissions, account activity, personal data and so on.
- **Location**
- You can set app permissions for your phone to access location information.
- **Safety & emergency**
- You can add medical information and emergency contacts, as well as set emergency SOS and wireless emergency alerts.
- **DuraSpeed**
- Use the DuraSpeed to foreground APP boosting by restricting background Apps switched off in the list.
- **System**
- You can use System to view some phone related information, update your system. You can also set Languages & input , Gestures, Date & time, Backup and Reset options in this interface.
- **About phone**
- Here is some basic information about the machine such as device name, model and version, IMEI number and so on.

### 4.12 SIM Toolkit

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended by SIM card and network. Service

menu will be auto added to the phone menu when supported by network and SIM card.

## 5. Appendix

### Appendix 1 : Troubleshooting

If you find exceptions when operating the mobile phone, restore the factory settings and then refer to the following table to solve the problem. If the problem persists, contact the distributor or service provider.

Fault	Cause	Solution
SIM card error	The SIM card is damaged.	Contact your network service provider
	The SIM card is not in position.	Check the SIM card
	The metal face of the SIM card is polluted.	Clean the SIM card with a clean cloth
Poor received signal quality	Signals are obstructed. For instance, radio waves cannot be effectively transmitted nearby a high building or in a basement.	Move to a place where signals can be effectively transmitted
	Line congestions occur when you use the mobile phone in high-traffic hours	Avoid using the mobile phone in high-traffic hours
The mobile phone cannot be powered on	The battery energy is exhausted.	Charge the battery
Calls cannot be dialed	Call barring is activated	Cancel call barring
The mobile phone cannot	The SIM card is invalid	Contact your network service provider

connect the network	The mobile phone is not in a service area of the GSM network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high
The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An improper charger is used	Use the charger specially designed for the mobile phone
	Poor contact	Ensure the charger plug is in good contact with the mobile phone

©2023 Orpyx® Medical Technologies Inc.  
Version 1.0\_March 2023

Manufactured For:  
Orpyx® Medical Technologies Inc.  
Suite 205, 1240 – 20th Avenue S.E.  
Calgary, AB T2G 1M8 Canada  
www.orpyx.com

Orpyx Customer Care:  
+1 (855) 996-7799  
[support@orpyx.com](mailto:support@orpyx.com)

### FCC Radiation Exposure Statement:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. The SAR limit of USA (FCC) is 1.6 W/kg averaged. Device types: Mobile Phone (FCC ID: 2AAH8-OSIDDV2) has also been tested against this SAR limit. SAR information on this and other pad can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested simulation typical 10mm to body. To maintain compliance with FCC RF exposure requirements, use accessories should maintain a separation distance between the user's bodies mentioned above, the use of holsters and similar accessories should not contain metallic components in its assembly, the use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

### FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### IC Radiation Exposure Statement:

For body worn operation, this device has been tested and meets the IC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10mm from the body. Noncompliance with the above restrictions may result in violation of RF exposure guidelines.

Pour une utilisation sur le corps, l'appareil a été testé et est conforme aux directives d'exposition IC RF lorsqu'il est utilisé avec les accessoires spécifiés pour ce produit ou lorsqu'il est utilisé avec des accessoires qui ne contiennent pas de métal et qui placent le téléphone à au moins 10 mm du fuselage. Le non-respect des restrictions ci-dessus peut entraîner une violation des directives d'exposition aux RF.

### IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;

2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is restricted to indoor use only when operating in the 5150 to 5250 MHz frequency range.

Lorsque l'appareil fonctionne dans la gamme de fréquences de 5150 à 5250 MHz, il est limité à une utilisation en intérieur uniquement.