

MONSTER®

DDIET

WATERPROOF BLUETOOTH® SPEAKER
ALTAVOZ BLUETOOTH® IMPERMEABLE
HAUT-PARLEUR BLUETOOTH® IMPERMÉABLE

USER MANUAL
MANUAL DE USUARIO
MANUEL UTILISATEUR

 **Bluetooth®**

 **eZSYNC®**



MODEL/MODELO/MODÈLE:
MNDRIFT

THANK YOU FOR CHOOSING MONSTER

Congratulations on your Monster DRIFT speaker! Please take your time to explore all of the features and utilities we have built into this product.

We put all of our products through rigorous testing and quality control. For your peace of mind, we offer a one-year limited warranty against manufacturing defects and workmanship. Please refer to the warranty section of the user manual for more details.

For more information on all of our products, please visit:

MyMonsterAudio.com

FOLLOW US:



@MyMonsterAudio

GRACIAS POR ELEGIR MONSTER

¡Felicidades por su altavoz Monster DRIFT! Por favor tómese su tiempo para explorar todas las funciones y utilidades que hemos incorporado en este producto.

Ponemos todos nuestros productos a través de rigurosas pruebas y control de calidad. Para su tranquilidad, ofrecemos una garantía limitada de un año contra defectos de fabricación y mano de obra. Consulte la sección de garantía del manual de usuario para obtener más detalles.

Para obtener más información sobre todos nuestros productos, visite:

MYMONSTERAUDIO.COM

SÍGANOS:



@MyMonsterAudio

MERCI DE CHOISIR MONSTER

Félicitations pour l'achat de votre haut-parleur Monster DRIFT! Veuillez prendre le temps d'explorer toutes les fonctionnalités que nous avons intégrées à ce produit.

Tous nos produits sont soumis à des tests rigoureux de contrôle de la qualité. Pour votre tranquillité d'esprit, nous vous offrons une garantie d'un an limitée contre les défauts de fabrication et de main-d'œuvre. Veuillez vous référer à la section sur la garantie de votre manuel de l'utilisateur pour plus de détails.

Pour plus d'information sur tous nos produits, veuillez visiter:

MyMonsterAudio.com

SUIVEZ-NOUS:



@MyMonsterAudio

PACKAGE CONTENTS | CONTENIDO DEL PAQUETE CONTENU DE L'EMBALLAGE

Included with your purchase: | Incluido con su compra: | Inclus dans votre achat:



**Monster DRIFT
Speaker**

**Altavoz
Monster DRIFT**

**Haut-parleur
Monster DRIFT**



5 V / 2 A USB Cord
(Length: 21";
USB to Micro USB)

Cable USB 5 V / 2 A
(Largo: 21";
USB a Micro USB)

Câble USB 5 V/2 A
(Longueur : 53 cm ;
USB vers micro USB)



AUX Cord
(Jack: 3.5mm; Length: 6')

Cable Auxiliar
(Toma: 3.5 mm; Longitud: 182 cm)

Câble Auxiliaire
(Prise : 3,5 mm; Longueur : 182 cm)



**User Manual &
Quick Start Guide**
(Incl. Warranty Statement)

**Manual de Usuario y Guía
de Inicio Rápido**
(Incluye Garantía Limitada)


**Manual de l'utilisateur et
Guide de démarrage rapide**
(Déclaration de Garantie Incluse)

TABLE OF CONTENTS

PRODUCT CONTROLS	1	NOTES	3
POWER		SPECIFICATIONS	4
Charging	1	TROUBLESHOOTING	
Power		IMPORTANT SAFETY INSTRUCTIONS	5
AUDIO		LIMITED WARRANTY	6
Bluetooth® Pairing & Controls	2	WARNING STATEMENTS	7
EZ-SYNC Pairing			
AUX IN (3.5mm)			
FEATURES			
Light Modes	3		
IPX7 Waterproof			
Floats			


PRODUCT CONTROLS

 Button & LED Lights

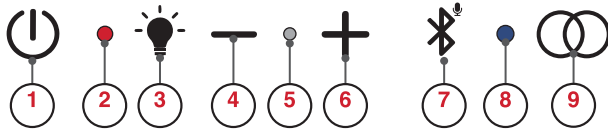

1. Power Button
2. Power LED (**RED**)
3. Light Mode Button
4. Decrease Volume Button
5. Microphone
6. Increase Volume Button
7. Bluetooth® Button
8. Bluetooth®/EZ-SYNC LED (**Blue/White**)
9. EZ-SYNC Button

 Port & Miscellaneous

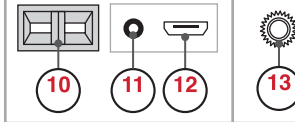

10. Carrying Strap Bracket
11. AUX IN (3.5mm)
12. Micro USB Charging Port
13. 1/4" Universal Mount



IMPORTANT: Charge for ~6 hours before first use.

POWER

Charging

1 **CONNECT** the speaker's Micro USB Port to an external power source using the included Micro USB Cord.



While **CHARGING**, the **RED** LED indicator blinks every 2 seconds.



When **FULLY** charged, the **RED** LED indicator will stay on.



When **LOW**, the **RED** LED indicator will flash rapidly.



 
FULL CHARGE – achieved in **6** hours while powered **OFF**.
– achieved in **12** hours while powered **ON**.

Power

1 Press and hold the **POWER** button, 3 seconds, to turn the speaker **ON**.



*Unit will confirm with lit **Power LED** for 5 seconds and audible sound.*



Press and hold the **POWER** button, 2 seconds, to turn the speaker **OFF**.



Unit will confirm audible sound.










 




"Power Off"













Unit will turn **OFF** when left idle after ~10 minutes.

AUDIO

Bluetooth® Pairing & Controls

- Place your smart device within **3 FEET** of the speaker. Make sure **Bluetooth** is enabled on your device.
 -   **3 Ft.** 
- The unit will search to pair with a Bluetooth® device when turned on.
 - 
- Unit will confirm, Bluetooth LED slowly blinks every 2 seconds.
 -  (Every 2 Sec.)
- HOLD** Bluetooth® button for 2 seconds to enter **Pairing**.
 -  (Hold 2 Sec.)
- Unit will confirm mode with audible sound.
 - "Pairing"**
- Select **"MONSTER DRIFT"** on your audio device to pair.
 -  
- Speaker will confirm connection with audible sound.
 - "Connected"**
- Change tracks by double tapping the **DECREASE** (Previous) or **INCREASE** (Next) **VOLUME** button.
 -   (Double Tap)
- Play/Pause tracks using the **BLUETOOTH®** button.
 -   (Press)
- Unpair a device by pressing and holding the **BLUETOOTH®** Button for 3 seconds.
 -   (Hold 3 Sec.)
- Unit will confirm disconnection with audible sound.
 - "Disconnected"**


EZ-SYNC Pairing

- Bluetooth **PAIR** device to speaker, this will be the Transmitting speaker.
 -   (Connect)
 - See Bluetooth Pairing.
- POWER** on a second EZ-SYNC compatible speaker.
 -  (Hold 3 Sec.)
- DO NOT Bluetooth® Pair** the second unit to a device.
 -  
- HOLD** EZ-SYNC Button of first speaker for 2 seconds.
 -  (Hold 2 Sec.)
- Bluetooth® LED will begin to blinking Blue & White a second.
 -  (Blinks Every Sec.)
- Transmitting speaker automatically searches for an EZ-SYNC connection.
 -   (Solid White)
- Speaker will confirm with audible sound and the **WHITE LED** on both speakers will remain solid.
 -  **"Stereo Connected"**



~30 feet max connection range after pairing. Devices out of range may suffer disruption or loss of signal.

AUX IN (3.5 mm)

- Plugging in a 3.5mm cable into the AUX input will automatically turn off the Bluetooth function and switch the speaker to AUX.
 -  (Connect)
- Speaker will confirm connection with audible sound.
 - "AUX IN"**

SPECIFICATIONS

General	
Bluetooth® Version	4.1
Battery	Lithium-Ion 2200mA
Speaker Drivers	(x2) 3" Speakers (x2) 3" Passive Radiators
THD + Noise	≤10%
Materials	Plastic/Metal
Dimensions (W x H)	5.3" x 5.3" x 10.5" (135 x 135 x 266mm)
Weight	1.25 lbs. (0.6 kg)
S/N	>60dB
Power	20 Watts
Water Resistant	IPX7

Operating Temperature	
Operating Temperature Range	32F° - 104F°
Operating Humidity Range	40-90% RH
Storage Temperature Range	-13F° to 158F°

TROUBLESHOOTING

Buttons are not responding	<ul style="list-style-type: none"> Reset the speaker by turning the power OFF, and then back ON. (See pg. 1)
No music is playing	<ul style="list-style-type: none"> Make sure the speaker is set to the same source as your audio device. If you are playing audio via AUX IN jack, make sure the speaker is in AUX IN mode, etc. (See pg. 2) Make sure the VOLUME level is high enough on your audio device as well as the speaker.
Bluetooth® audio quality is poor	<ul style="list-style-type: none"> Move your music device closer to the speaker. Remove objects that may be interfering with the wireless connection.
Bluetooth® device is not pairing	<ul style="list-style-type: none"> Verify that the speaker and your device have BLUETOOTH® mode active. (See pg. 2) Make sure the speaker and/or your device is not already paired with another device. Check that the speaker is in pairing mode. (See pg. 2) Turn the speaker OFF, and then back ON. Press and hold the BLUETOOTH® button to manually enter pairing mode. (See pg. 2)
Contact our support team for additional services	<p>Call: 1-800-976-0677</p> <p>Email: support@mymonsteraudio.com</p> <p>Hours of Operation: Monday - Friday: 7:00 am - 4:00 pm (PST) Saturday - Sunday: CLOSED</p>

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions – All the safety and operating instructions should be read before this product is operated.
 - 2) Keep these instructions – The safety and operating instructions should be retained for future reference.
 - 3) Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
 - 4) Follow all instructions – All operating and use instructions should be followed.
 - 5) This apparatus can be used in wet location conditions after disconnected the AC Mains supply and closing the water proof cap for the AC inlet. It must not be used in wet location conditions when charging. Do not use this apparatus near water- The appliance should not be used near water or moisture – for example, in wet basement or near a swimming pool.
 - 6) Clean only with dry cloth.
 - 7) Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
 - 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 11) Only use attachments/accessories specified by the manufacturer.
 - 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lighting storms or when unused for long periods of time.
 - 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - 15) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
 - 16) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
 - 17) No naked flame sources, such as lighted candles, should be placed on the apparatus.
 - 18) Attention should be drawn to the environmental aspects of battery disposal.
- WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.



Protective earthing terminal. The apparatus should be connected to a mains socket outlet with protective earthing connection.



LIMITED WARRANTY

Model: MNDRIFT

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in as is condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Received Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Received Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used In the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or received invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement noncommercial use of this Product, and shall not apply to the

following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product result in service problems: incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service, please contact technical support with questions

Phone: 1-800-976-0677 • Email: support@mymonsteraudio.com

DO NOT return this product to the store. Visit: MyMonsterAudio.com

FCC WARNING STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC WARNING STATEMENT

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- 1) This device may not cause interference; and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC RADIATION EXPOSURE STATEMENT This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.



A lightning flash and arrowhead within an equilateral triangle is intended to alert the user to the presence of insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



An exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

Prevent fire and shock hazards. Do not use extension cords or outlets that expose plug blades. Do not expose cables and plugs to rain or moisture.

Do not attempt to perform any servicing that is not included in the operating instructions. Do not attempt to replace the battery, as incorrect installation can cause fire or explosion. For service, contact qualified service personnel.

Do not remove cover or back of product. There are no user-serviceable parts inside. Attempting to modify controls or performance beyond manufacturer specifications may result in hazardous exposure to radiation.


TABLA DE CONTENIDO

CONTROLES DEL PRODUCTO	9	NOTAS	11
ALIMENTACIÓN		ESPECIFICACIONES	12
Cargando	9	SOLUCIÓN DE PROBLEMAS	
Encendido/Apagado			
AUDIO		IMPORTANTES INSTRUCCIONES DE SEGURIDAD	13
Emparejamiento Bluetooth® y Controles	10	GARANTÍA LIMITADA	14
Emparejamiento EZ-SYNC			
Entrada Auxiliar (3,5mm)			
CARACTERÍSTICAS		DECLARACIONES DE ADVERTENCIA	15
Modos de Luz	11		
Impermeable IPX7			
Flotador			




CONTROLES DEL PRODUCTO ALIMENTACIÓN

 Botón y Luces LED

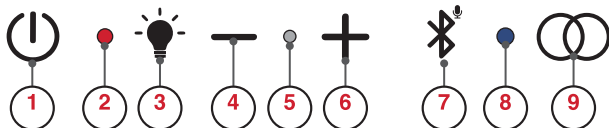

1. Botón de Encendido/ Apagado
2. Indicador LED de Alimentación (**ROJO**)
3. Botón Modo de Luz
4. Botón para Disminuir El Volumen
5. Micrófono
6. Botón para Disminuir El Volumen
7. Botón Bluetooth®
8. Indicador LED Bluetooth®/EZ-SYNC (**Azul/Blanco**)
9. Botón EZ-SYNC

 Puerto y Varios



10. Soporte de Correa de Transporte
11. Entrada Auxiliar (3.5 mm)
12. Puerto de Carga Micro USB
13. Montaje Universal de ¼"

Cargando

1 **CONECTE** el Puerto Micro USB del altavoz a una fuente de alimentación externa mediante el cable Micro USB incluido.



- Mientras se está **CARGANDO**, el indicador LED **ROJO** parpadea cada 2 segundos.



(Parpadea cada 2 segundos)

- Cuando esté **COMPLETAMENTE** cargado, el indicador LED **ROJO** permanecerá encendido.



(Encendido Fijo)

- Cuando esté **BAJO**, el indicador LED **ROJO** parpadeará rápidamente.



(Flashing)

CARGA COMPLETA

Logrado en **6 horas** mientras está **APAGADO**.
Logrado en **12 horas** mientras está **ENCENDIDO**.

IMPORTANTE: Antes del primer uso, cargue por 6 horas.

Encendido/Apagado

1 Mantenga presionado el botón de **ENCENDIDO/APAGADO** durante 3 segundos para **ENCENDER** el altavoz.



(Mantenga presionado durante 3 seg.)

La unidad confirmará con el indicador **LED de Encendido/Apagado** encendido durante 5 segundos y con un sonido audible.



(Encendido durante 5 seg.)

“Power On”

“Encendido”



Unit will turn OFF when left idle after ~10 minutes.

Encendido/Apagado Continuo

- Mantenga presionado el botón de **ENCENDIDO/APAGADO** durante 2 segundos para **APAGAR** el altavoz.   (Mantenga presionado por 2 seg.)

La unidad confirmará con un sonido audible.

“Power Off”

“Apagado”

AUDIO



1 m de rango de conexión máximo después del emparejamiento. Los dispositivos fuera de rango pueden experimentar interrupciones o pérdida de la señal.

Emparejamiento Bluetooth® y Controles

- Coloque su dispositivo inteligente a **1 m** de distancia del altavoz. 

Asegúrese que la función **Bluetooth®** esté habilitada en su dispositivo.



- La unidad buscará emparejarse con un dispositivo **Bluetooth®** cuando se encienda.



La unidad confirmará, el indicador **LED de Bluetooth** parpadeará lentamente cada 2 segundos.



(Cada 2 seg.)

- MANTENGA** presionado el botón **Bluetooth®** durante 2 segundos para ingresar al **EMPAREJAMIENTO**.  (Mantenga presionado por 2 seg.)

La unidad confirmará el modo con un sonido audible.

“Pairing”

“Emparejamiento”

- Seleccione **“MONSTER DRIFT”** en su dispositivo de audio para emparejar.



El altavoz confirmará la conexión con un sonido audible.

“Connected”

“Conectado”

- Cambie las pistas presionando dos veces el botón de **DISMINUIR** (Previo) o **INCREMENTAR** (Siguiente) **VOLUMEN**.



(Presione Doble)

- Reproducir/Pausa pistas usando el botón **BLUETOOTH®**.



(Presionar)

- Desempareje un dispositivo manteniendo presionado el botón **BLUETOOTH®** por 3 segundos.



(Mantener presionado por 3 seg.)

La unidad confirmará la desconexión con un sonido audible.

“Disconnected”

“Desconectado”

Emparejamiento EZ-SYNC

- El dispositivo **Bluetooth®** **EMPAREJADO** al altavoz, será el altavoz transmisor   (Conectar)
Ver Emparejamiento Bluetooth®.

- ENCIENDA** un segundo altavoz compatible con **EZ-SYNC**.  (Mantenga presionado por 3 seg.)

NO conecte **Bluetooth®** la segunda unidad a un dispositivo.

