

## PACKAGE CONTENTS

Included with your purchase:



Monster FLEX



 
User Manual  
(Incl. Warranty Statement)



AUX Cable




Micro USB Cable

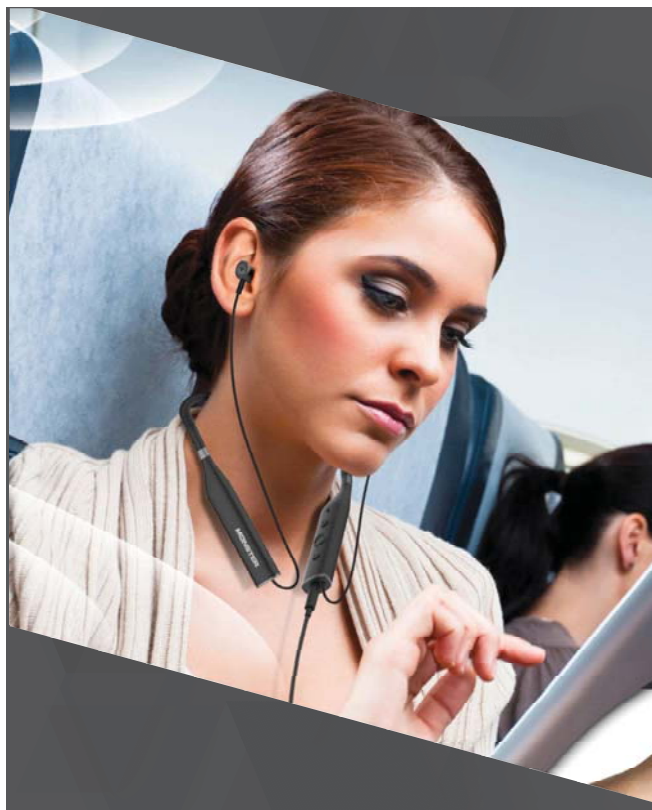

## **TABLE OF CONTENTS**





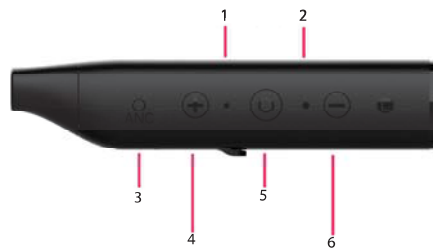 






<b>PRODUCT CONTROL</b>	<b>4</b>
<b>KEY BEHAVIOR</b>	<b>4/5</b>
<b>CHARGING</b>	<b>6</b>
<b>RESET MODE</b>	<b>6</b>
<b>AUTO POWER OFF</b>	<b>6</b>
<b>VOLUME CONTROL</b>	<b>7</b>
<b>AUDIO TONE</b>	<b>7</b>
<b>BATTERY REQUIREMENT</b>	<b>7</b>
<b>OTHER</b>	<b>8</b>
<b>FCC WARNING STATEMENT</b>	<b>9</b>
<b>NOTES</b>	<b>10</b>
<b>SPECIFICATIONS</b>	<b>12</b>
<b>WARRANTY</b>	<b>13</b>

## PRODUCT CONTROLS










- 1. RED/BLUE/GREEN LED
- 2. MIC
- 3. ANC ON / ANC OFF
- 4. VOL +
- 5. POWER/MULTI FUNCTION
- 6. VOL -

### KEY BEHAVIOR

- 1. Turn ON Power: press and hold  for 2 seconds
- 2. Turn OFF Power: press and hold  for 3 seconds
- 3. Vol+: Short Press 
- 4. Vol-: Short Press 
- 5. Previous:  Press and hold 2 seconds
- 6. Next:  Press and hold 2 seconds
- 7. Play/Pause:  Short press
- 8. Accept calls:  Short press
- 9. End a call:  Short press
- 10. Reject an incoming call:  Press and hold for 2 seconds
- 11. Launch Voice Assistant: Double-Click 

**KEY BEHAVIOR** *continued*

- 12. Turn Off ANC in Power off mode: Short press ANC button
- 13. Turn On ANC in Power off mode: Press and hold ANC button for 2 seconds
- 14. Turn Off ANC in Power on mode: Short press ANC button
- 15. Turn On ANC in Power on mode: Short press ANC button
- 16. Reconnect when disconnected: Double click Multifunction button
- 17. Voice transfer in calling:  Press and hold for 2 seconds
- 18. Mute in calling:  Press and hold for 2 seconds
- 19. Enter pairing mode: Press and hold  and  together for 3 seconds
- 20. Three-Party Conference: During the call, double click the  button to receive the seconds incoming call, the first coming call will enter the call hold, double click the  button to switch between two calls freely; During the call, click the  button to answer call and hang up the current call.

Bluetooth is always in pairing state after being turned on the first time

#### **CHARGING**

New headphones will have enough power for pairing and dialing out but need to be fully charged to use for a prolong time. The RED LED will flash quickly when in low battery, Red LED will blink while charging, Red LED will turn solid after fully charged; 1-2 hours are needed for a fully charged battery.

#### **RESET MODE FOR HARDWARE RESET**

Connect the headphones to the computer via Micro USB cable. When red LED light flashes, headphones reset is finished.

#### **AUTO POWER OFF TO SAVE BATTERY IN BATTERY MODE**

1. If the FLEX is on and Bluetooth has disconnected over 15 minutes; the FLEX will auto power off to save battery.
2. The FLEX will power off to charge when power cable is connected.

Remarks: The FLEX can auto power off if Bluetooth is connected and battery is too low

**VOLUME CONTROL**

1. Volume range: 0-16
2. Volume will remain the same after the FLEX is powered Off/On.
3. Short press "VOLUME -" key once to decrease volume, the "chime" tone will sound off once after pressing "Volume -" key again when volume reaches minimum level.
4. Short press "VOLUME +" key once to increase volume, the "chime" tone will sound off after press "Volume +" key again when volume arrive maximum position

**AUDIO TONE**

"Connected" tone will sound off when main unit has paired successfully.




**BLUETOOTH PAIRING DISTANCE**

BT distance > 10m

**BATTERY REQUIREMENT**

1. It takes 1-2 hours to fully charge the FLEX.
2. Battery playback time is over 8 hours with ANC Off mode.
3. Battery playback time is over 7 hours with ANC On mode.


#### **OTHER**

1. Incoming call status:  
If a call comes in when the phone is playing music through Bluetooth, the music will be stopped and the phone will be playing the ring tone;  
When the call is ended, the FLEX will resume the music playing
2. The operation of Conference call by three parties:  
Short press the multifunction button, pick up the new incoming call and end the current call; When headphones are in use and a new call is in coming, double press the  button to pick up the new call, and previous call will stay connected and vice versa.  
To Pairing, When headphones are connecting, press and hold the key  and  together for 3 seconds to enter pairing mode and the 'Pairing' audio tone sound off.

#### **Connection loss due to transmission distance out of range**

The Flex will say "Pairing" when it is out of range and when there is a link loss with the Bluetooth device that it is connected to. The Flex will attempt to connect for 5 minutes during link loss.

#### **To reconnect**

When headphones are disconnecting and are within transmission range, Double press  button 2 times to reconnect last smart phone.



### FCC WARNING STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### IC WARNING

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:  
(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

 Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



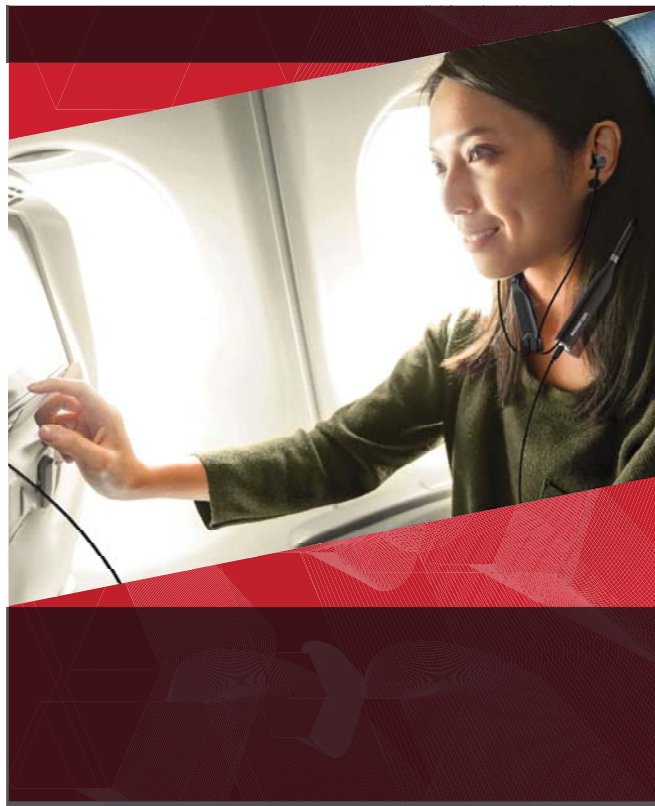

## SPECIFICATIONS

### Function list Bluetooth playing music /ANC/Aux in input /Calling

Chipset ..... BT V5.0  
 The depth of the noise reduction ..... 30dB - 26dB  
 Weight (Lbs) ..... 35g

### Sound

Channel ..... 2  
 Power (RMS/PMPO) ..... 2 x 5mW  
 (total music power: 6mW)  
 Earphone ..... Yes

### User interface

Volume control type ..... Digital up/down  
 No. of tact switches ..... 4  
 - Vol - (Previous) key  
 - Vol + (Next) key  
 - ANC On/Off key  
 - MFB key(Power On/Power Off/Play  
 /Pause /Call/Pairing/Power)  
 No. of LEDs ..... 3 (Blue LED for Bluetooth Indicator x 1;  
 - RED LED for Power Indicator x 1;  
 - Green LED for ANC on x 1)  
 Input Interfaces ..... Microphone x 2,  
 USB ..... Yes

### Speaker

Size .....  $\phi$ 13,0 x 2  
 Input Sensitivity ..... 93dB $\pm$ 3dB (at 1kHz)

### Microphone for HFP

Microphone Type ..... 42dB $\pm$ 1dB (at 1kHz) MEMS Microphone  
 Directivity ..... Omnidirectional

### Microphone for ANC

Microphone Type ..... 42dB $\pm$ 1dB (at 1kHz) Electret  
 Condenser Microphone  
 Directivity ..... Omnidirectional

### Battery

Battery Type ..... Polymer Lithium Battery  
 Battery Volume ..... 3,7V 160mAh x 1  
 Battery Charge Voltage / Current ..... 5V with 150 mAh  
 Battery Life Time ..... 7.5 Hours with playback  
 battery songs by ANC OFF  
 Charging Time ..... 1-1.5H

### USB

Version ..... 2.0  
 Charging only ..... Yes  
 Charging current ..... 150mAh  
 Charging in standby mode ..... Yes

### Bluetooth

Bluetooth version ..... BT5.0  
 Receive, HFP ..... V1.7  
 Receive, HSP ..... V1.2  
 Receive, A2DP ..... V1.3  
 Receive, AVRCP ..... V1.6  
 Transmit, A2DP ..... Yes  
 Transmit, AVRCP ..... Yes  
 Simple pairing ..... Yes  
 Audio codec .....  
 Transmission range ..... > 10 Meters with 300  
 Transmission Frequency: ..... 2,402G $\pm$ 2,48G  
 Transmission Power: ..... CLASS 2  
 CIBS ..... Built-in mic for hands-free call

### Accessories

USB cable ..... Yes 1 meter  
 Earphone bag ..... Yes  
 AUX in Cable ..... Yes 1,2 meter  
 User manual ..... Yes  
 Ear tips ..... Yes middle size x 2 Small size x 2  
 Safety & Environment Certification ..... RoHS

**LIMITED WARRANTY**  
Model: MNFLEX-BLK

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in as is condition, "close out", "liquidation and clearance sales", "open box", products missing accessories or not fully found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or re-manufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer; which damage this Product result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems, and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images; Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER, WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service:

Telephone: 1-800-976-0677  
Email: support@mymonsteraudio.com

## MERCI DE CHOISIR MONSTER

Félicitation pour votre achat d'un casque Monster FLEX. Veuillez prendre le temps d'explorer toutes les fonctionnalités que nous avons intégrées à ce produit.

Tous nos produits sont soumis à des tests rigoureux de contrôle de la qualité. Pour votre tranquillité d'esprit, nous vous offrons une garantie d'un an limitée contre les défauts de fabrication et de main-d'œuvre. Veuillez vous référer à la section sur la garantie de votre manuel de l'utilisateur pour plus de détails.

Pour plus d'information sur nos produits, veuillez visiter le : [MyMonsterAudio.com](http://MyMonsterAudio.com)

SUIVEZ-NOUS :

 @MyMonsterAudio

 @MyMonsterAudio

 @MymonsterAudio

## CONTENU DE L'EMBALLAGE

Inclus dans votre achat :



Manuel de l'utilisateur  
(Incl. Énoncé de garantie)

 
Monster FLEX ANC



Câble Aux



Câble USB micro

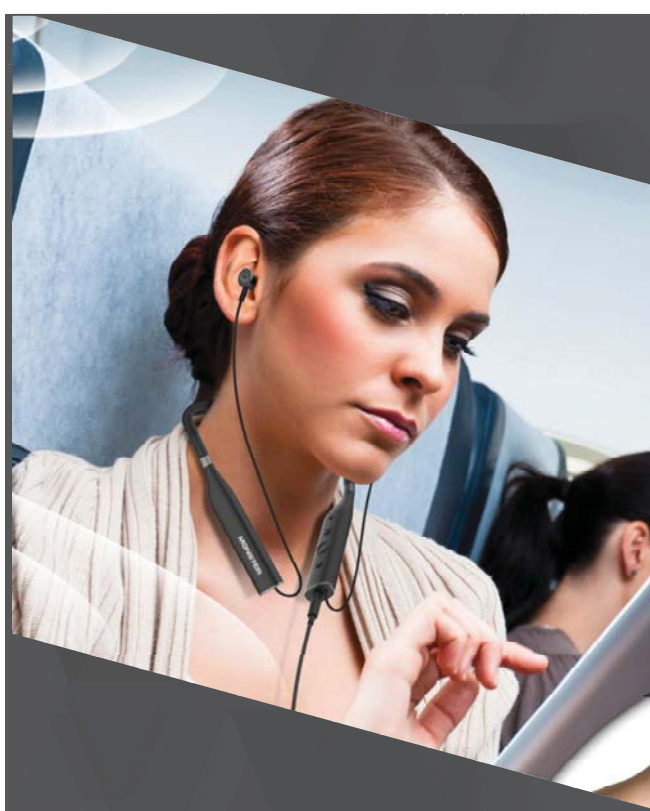




## TABLE DES MATIÈRES

COMMANDES DU PRODUIT	18
PRINCIPAL COMPORTEMENT	18/19
CHARGE	20
MODE RÉINITIALISATION	20
ARRÊT AUTO	20
CONTRÔLE DU VOLUME	21
TONALITÉ AUDIO	21
TYPES DE BATTERIES	21
AUTRE	22
DÉCLARATION D'AVERTISSEMENT DE LA FCC	23
REMARQUES	24
SPÉCIFICATIONS	26
GARANTIE	27
 
## COMMANDES DU PRODUIT

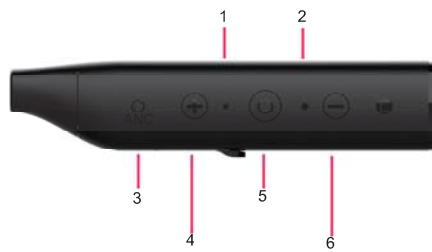




 



1. ROUGE/BLEU/VERT/VOYANT DEL 4. VOL +  
2. MICRO 5. MISE EN MARCHÉ/MULTIFONCTION  
3. ACTIVATION/DÉSACTIVATION ANC 6. VOL -

### PRINCIPAL COMPORTEMENT

1. Mise sous tension : appuyer sur la touche et maintenir enfoncée pendant 2 secondes.
2. Arrêt de l'alimentation : appuyer sur la touche et maintenir enfoncée pendant 3 secondes.
3. Vol + : Appuyer brièvement sur la touche .
4. Vol - : Appuyer brièvement sur la touche .
5. Précédant : Appuyer et maintenir pendant 2 secondes
6. Suivant : Appuyer et maintenir pendant 2 secondes
7. Lecture/Pause : Brièvement presser
8. Accepter un appel : Brièvement presser
9. Terminer un appel : Brièvement presser
10. Rejeter un appel entrant : Appuyer et maintenir pendant 2 secondes
11. Lancer l'assistant vocal : Double cliquer

**COMPORTEMENT PRINCIPAL** *suite*

12. Désactiver la fonction ANC en mode Arrêt : Appuyer rapidement sur la touche ANC
13. Activer la fonction ANC en mode Arrêt : Appuyer et maintenir la touche ANC pendant 2 secondes
14. Désactiver la fonction ANC en mode En marche : Appuyer rapidement sur la touche ANC
15. Activer la fonction ANC en mode Marche : Appuyer rapidement sur la touche ANC
16. Reconnecter lorsque déconnecté : Double cliquer
17. Transfert vocal lors d'appel :  Appuyer et maintenir pendant 2 secondes
18. Sourdine lors de l'appel :  Appuyer et maintenir pendant 2 secondes
19. Entrer en mode couplage : Appuyer et maintenir à la fois  et  pendant 3 secondes
20. Conférences à trois participants : Pendant l'appel, double cliquer sur le bouton  pour recevoir le deuxième appel entrant, le premier appel entrant sera placé en attente. Double cliquer sur le bouton  pour basculer librement entre deux appels. Pendant l'appel, cliquer sur le bouton  pour répondre et raccrocher l'appel courant.

Le Bluetooth est toujours en mode couplage après avoir été activé pour la première fois

#### **CHARGE**

Les nouveaux écouteurs auront assez d'énergie pour le couplage et la numérotation, mais ils doivent être complètement chargés pour pouvoir être utilisés pendant une période prolongée. Le voyant DEL ROUGE clignote rapidement lorsque la batterie est faible. Il clignote pendant la charge et demeure allumé en continu après la charge complète. Entre 1 et 2 heures sont nécessaires pour une charge complète de batterie.

#### **MODE DE RÉINITIALISATION POUR LA RÉINITIALISATION MATÉRIELLE**

Connecter le casque d'écoute à l'ordinateur via le câble Micro USB. Lorsque le voyant DEL rouge clignote, la réinitialisation du casque est terminée.

#### **MISE HORS TENSION AUTOMATIQUE POUR ÉCONOMISER LA BATTERIE EN MODE BATTERIE**

1. Si le FLEX est allumé et que Bluetooth s'est déconnecté dans les 15 minutes, l'unité FLEX s'éteint automatiquement pour économiser la batterie.
2. Le FLEX s'éteint pour se recharger lorsque le câble d'alimentation est branché.

Remarques : Le FLEX peut s'éteindre automatiquement si Bluetooth est connecté et que la batterie est trop faible.