

**MONSTER®**

# ROCKIN' ROLLER

PORTABLE INDOOR/OUTDOOR WIRELESS SPEAKER

**270**

**USER MANUAL**



**MODEL: MNRR270**

# THANK YOU FOR CHOOSING MONSTER

Congratulations on your Rockin' Roller 270 indoor/outdoor wireless speaker. Please take your time to explore all of the features and utilities we have built into this product.

We put all of our products through rigorous testing and quality control. We take great pride in presenting this product to you now. For your peace of mind, we offer a one-year limited warranty against manufacturing defects and workmanship. Please refer to the warranty section of the user manual for more details.

For more information on all of our products, please visit: [MyMonsterAudio.com](http://MyMonsterAudio.com).

## FOLLOW US:



@MyMonsterAudio



@MyMonsterAudio



/MyMonsterAudio

## PACKAGE CONTENTS

Included with your Rockin' Roller 270 purchase:



Rockin' Roller 270



AC Power Cable  
(Length: 8')



AUX Cable  
(Jack: 3.5mm; Length: 6')



 
User Manual &  
Quick Start Guide

# TABLE OF CONTENTS

<b>PRODUCT CONTROLS</b>	<b>1</b>	▪ Line Out (3,5mm)	<b>5</b>
<b>POWER &amp; BATTERY</b>		<b>FEATURES</b>	
▪ Power/Charging	<b>2</b>	▪ Standby Mode	<b>5</b>
▪ AC Pass Through Outlet	<b>2</b>	▪ Telescoping Handle	<b>5</b>
▪ Battery Level Indicator	<b>2</b>	<b>TROUBLESHOOTING</b>	<b>7</b>
▪ USB Power Banks	<b>2</b>	<b>NOTES</b>	<b>8</b>
▪ QI Wireless Charger	<b>2</b>	<b>SPECIFICATIONS</b>	<b>9</b>
<b>AUDIO</b>		<b>IMPORTANT SAFETY INSTRUCTIONS</b>	<b>10</b>
▪ Bluetooth Pairing	<b>3</b>	<b>IMPORTANTES CONSIGNES DE SÉCURITÉ</b>	<b>11</b>
▪ ¼" Guitar/Mic Inputs & Gain/Echo Controls	<b>3</b>	<b>LIMITED WARRANTY</b>	<b>12</b>
▪ AUX-IN (3,5 mm)	<b>3</b>	<b>RF exposure statement</b>	<b>13</b>
▪ FM Radio	<b>4</b>	<b>IC WARNING</b>	<b>13</b>
▪ True Wireless System (TWS)	<b>4</b>	<b>FCC WARNING STATEMENT</b>	<b>14</b>
▪ Bass/Treble Adjustment	<b>4</b>		
▪ Equalizer Presets (Bluetooth/AUX-IN ONLY)	<b>5</b>		
▪ Saving Radio Stations (FM)	<b>5</b>		

# PRODUCT CONTROLS

## Control Panel

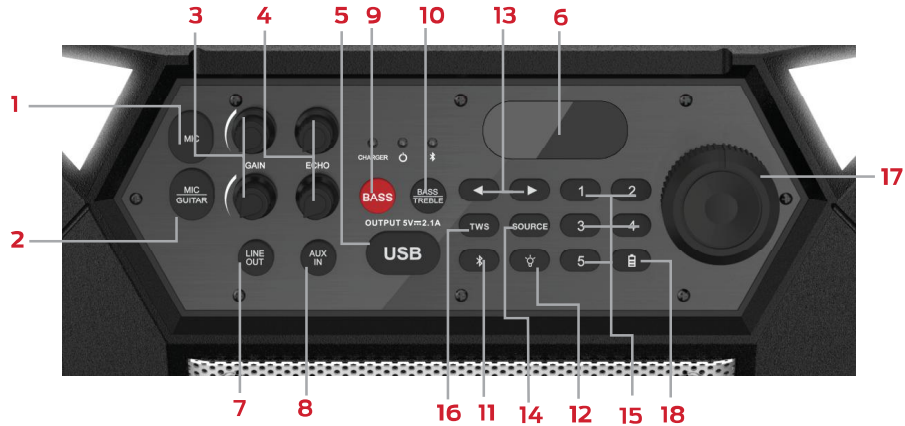

### Control Panel

- 1. MIC 1/4" Input
- 2. MIC/GUITAR 1/4" Input
- 3. GAIN Knob (x2)
- 4. ECHO Knob (x2)
- 5. USB Power Bank
- 6. LED Display
- 7. LINE OUT
- 8. AUX IN
- 9. BASS BOOST Button
- 10. BASS/TREBLE Button
- 11. BLUETOOTH Button

### LED Display

- 12. LED LIGHT Button
- 13. ARROW Buttons
- 14. SOURCE Button
- 15. NUMBER Buttons
- 16. TWS Button
- 17. VOLUME Knob
- 18. BATTERY LEVEL Button

 
### LED Display

- 19. SSD Display
- 20. BATTERY Indicator
- 21. MICROPHONE Indicator
- 22. AUX Indicator


### Back Panel

- 23. FM Display
- 24. BLUETOOTH Indicator
- 25. POWER ON/OFF Switch
- 26. INPUT POWER Port

## LED Display

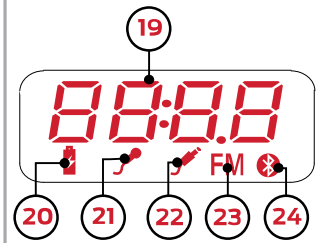

## Back Panel

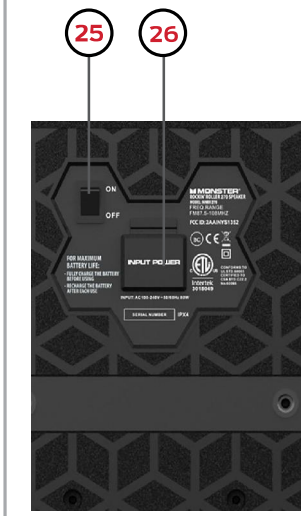 


# POWER & BATTERY

**IMPORTANT:** Before first use, charge for ~7 hours.


## Power/Charging

 - Connect the **INPUT POWER** port to an external power source using the included power cord.

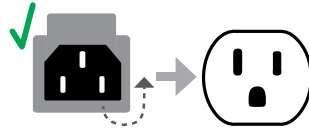

**Full Charge** – achieved in 7 hours while powered OFF  
– achieved in 15 hours while powered ON.

 - Flip the switch **UP** to turn **ON** the speaker.  
(**"Hi"** will appear on the **LED** display. The speaker will connect to the last selected source.)
- Flip the switch **DOWN** to turn **OFF** the speaker.

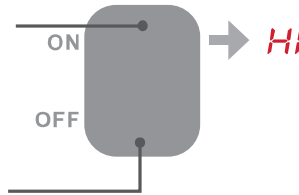

## USB Power Banks

- Connect device to the speaker via the **5V/2.1A USB** port to charge device from the speaker's internal battery.



(USB cable not included.)



 
**USB port is for charging ONLY**  
– they will not make audio connections.

## Qi Wireless Charger

- Charge a device via the **9V/1.2A WIRELESS** Charger by setting a device on the top of the speaker.\*



*The speaker will make an audible confirmation when it begins to charge your device.*

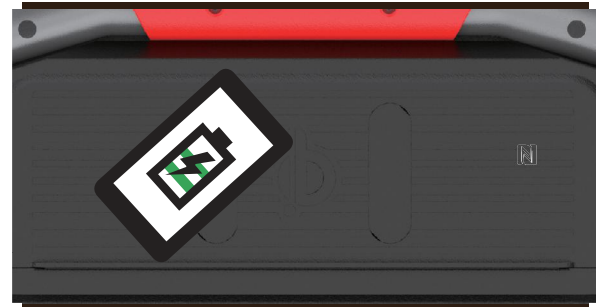

\* Top view of unit



**Do not place non-Qi Certified devices or other metal/magnetic objects on the Qi Charger. Doing so could result in damage to the device/object or the Retro speaker.**

# AUDIO

## Bluetooth Pairing

- 1 Place your mobile device within 3 feet of the speaker.



Make sure Bluetooth is enabled on your mobile device.



- 2 Press the BLUETOOTH button to set the speaker to Bluetooth mode.

(Press)



The speaker will automatically enter pairing mode.

The speaker will make audible and visual LED confirmation. Bluetooth icon will flash in pairing mode.



If the Bluetooth icon is NOT flashing, press and hold the BLUETOOTH button to manually enter pairing mode.

- 3 Select "MONSTER RR270" on your mobile device to pair with the speaker.



 
The speaker will make audible confirmation and the Bluetooth icon will stop flashing.



~30 feet max connection range after paired.  
Moving devices outside this range may cause disruption or signal loss.


## 1/4" Guitar/Mic Inputs & Gain/Echo Controls

- Connect an instrument, microphone, or other device to the MIC/GUITAR or MIC port(s) with a standard 1/4 inch jack.

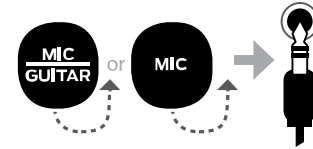

The device(s) will automatically transmit audio playback through the speaker in the current mode.

 - Turn GAIN and ECHO control knobs clockwise to increase their effect, and counter-clockwise to decrease their effect.

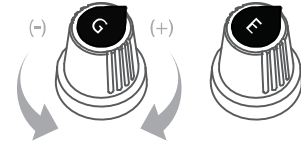


Each 1/4 inch port has its own GAIN and ECHO knobs that can be adjusted independently.



Devices plugged into the 1/4 inch ports will transmit audio playback in all modes/sources.

## AUX-IN (3.5mm)

 - Connect a music device to the AUX IN port with a standard 3.5 mm jack. The speaker will automatically change to AUX mode.

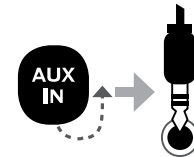

Speaker will make audible and visual LED display confirmation.

AUX "AUX IN"

## FM Radio

- 1 Press the SOURCE button to change the speaker to FM RADIO.

(Press)



Speaker will make audible and visual LED display confirmations.

106.9 FM  
"Radio"

- 2 Press the ARROW buttons to change radio frequency. Press and hold the ARROW buttons to scan for a station.

(Press or Hold)



## True Wireless System (TWS)

Wirelessly connect two Rockin' Roller 270 speakers together.

- 1 Place two Rockin' Roller 270 speakers within 10 feet of each other.



 
- 2 Connect your music device to one of the speakers via BLUETOOTH.



Leave the second speaker in BLUETOOTH mode without connecting to a device.



- 3 Press and hold the TWS pairing button to Transfer speaker for 3 s to activate TWS pairing.

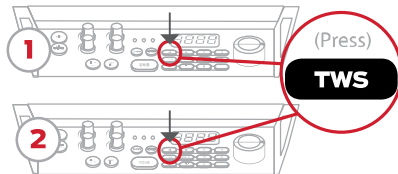

To disconnect a speaker, press the TWS button.

(Press)

TWS



~30 feet max connection range after paired.

Moving devices outside this range may cause disruption or signal loss.

## Bass/Treble Adjustment

- Press the BASS/TREBLE button ONCE to enter bass level mode.

(Press x1)



b 00

 
- Press the BASS/TREBLE button TWICE to enter treble level mode.

(Press x2)



t 00

- Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease the bass/treble levels (-06 to 06).

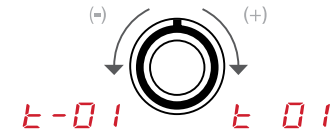

Pressing the BASS/TREBLE button a third time will revert to the audio source mode.

The menu will revert to the audio source mode after ~5 seconds of being idle.

## Equalizer Presets (Bluetooth/AUX-IN ONLY)

- Press a **NUMBER BUTTON** (1-5) to change the speaker's equalizer settings.

Setting will show on the speaker's **LED** display.

**E-1**

BUTTON	SETTING	LED
<b>1</b>	FLAT	<b>E-1</b>
<b>2</b>	JAZZ	<b>E-2</b>
<b>3</b>	ROCK	<b>E-3</b>
<b>4</b>	POP	<b>E-4</b>
<b>5</b>	DEFAULT	<b>E-5</b>

## Saving Radio Stations (FM)

- Save the current radio station by pressing and holding one of the **NUMBER BUTTONS** (1-5).



The **LED** display will confirm the saved station (**P-1**, **P-2**, etc.)

 
**P 1**

Press the **NUMBER KEY** while in radio mode to go to the corresponding **SAVED** station.



## LINE-OUT (3.5mm)

- Connect a second speaker to the Rockin' Roller 270 via the **LINE OUT** port with a standard 3.5 mm jack. Audio playback will transmit through the Rockin' Roller 270 and the second speaker simultaneously.

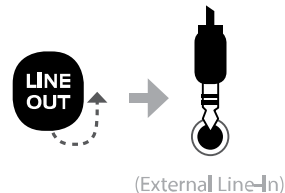

# FEATURES

## Standby Mode

- Press and hold the **VOLUME** knob for ~3 seconds to put the speaker in standby mode.

(Press & Hold ~3 seconds)



 
**LED** indicators will shut off. Power **LED** will turn on.

**OFF**



- Press any button or turn the **VOLUME** knob to wake the speaker up from standby.


(Turn)




**The speaker will automatically enter standby mode after ~15 minutes of inactivity or lack of connection.** Standby mode can be manually enabled in any mode.

## Telescoping Handle

 - Pull the telescoping carry handle **UP** and away from the speaker to extend it.

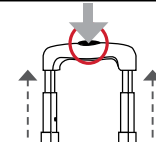

 - Press the **BUTTON** on the grip area to adjust the carry handle to a comfortable length.

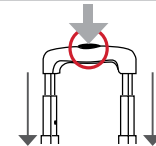

**DO NOT use the carry handle when speakers are stacked.** The handle is graded to only carry the weight of one Rockin' Roller 270 speaker.





# TROUBLESHOOTING

<b>Speaker is not powering on</b>	<ul style="list-style-type: none"><li>▪ Verify that the <b>POWER</b> switch is <b>fully</b> turned to the <b>ON</b> position. (see pg. 2)</li><li>▪ Ensure the speaker is not in <b>STANDBY MODE</b>. (see pg. 6)</li><li>▪ Make sure <b>AC POWER</b> cord is <b>fully</b> inserted into the unit. (see pg. 2)</li></ul>
<b>Buttons are not responding</b>	<ul style="list-style-type: none"><li>▪ Reset the speaker by turning the power <b>OFF</b>, and then back <b>ON</b>. (see pg. 2)</li><li>▪ <b>Unplug</b> the <b>AC POWER</b> cord, then <b>plug</b> it back in. (see pg. 2)</li></ul>
<b>No music is playing</b>	<ul style="list-style-type: none"><li>▪ Make sure the speaker is set to the same source as your audio device. <b>If</b> you are <b>playing</b> audio via <b>AUX cable</b>, make sure the speaker is in <b>AUX IN</b> mode, etc. (see pg. 3-5)</li><li>▪ Make sure the <b>VOLUME</b> is high enough on your audio device as <b>well</b> as the speaker.</li></ul>
<b>Bluetooth/NFC audio quality is poor</b>	<ul style="list-style-type: none"><li>▪ Move your music device <b>closer</b> to the speaker.</li><li>▪ Remove objects that may be interfering with the wireless connection.</li></ul>
<b>Bluetooth/NFC device is not pairing</b>	<ul style="list-style-type: none"><li>▪ Verify that the speaker and your device have <b>BLUETOOTH</b> mode active. (see pg. 3)</li><li>▪ Make sure the speaker and/or your device is not <b>already</b> paired with another device.</li><li>▪ Check that the speaker is in pairing mode. (see pg. 3)</li><li>▪ Turn the speaker <b>OFF</b>, and then back <b>ON</b>. Press and <b>hold</b> the <b>BLUETOOTH</b> button to <b>manually</b> enter pairing mode. (see pg. 3)</li></ul>
<b>Contact our support team for additional services</b>	<p><b>Call:</b> 1-800-976-0677</p> <p><b>Email:</b> <a href="mailto:support@mymonsteraudio.com">support@mymonsteraudio.com</a></p> <p><b>Hours of Operation:</b> Monday - Friday: 7:00 am - 5:00 pm (PST) Saturday - Sunday: CLOSED</p>




# SPECIFICATIONS

General	
<b>Bluetooth Version</b>	5.0
<b>Power Input</b>	AC 100-240V
<b>Speaker Drivers</b>	50W (X1) 15W (X1) / 10W (X2)
<b>THD + Noise</b>	<10%
<b>Cabinet Material</b>	Plastic
<b>Battery Capacity</b>	12V9A
<b>USB Bank Output</b>	5V/2.1A
<b>Dimensions (W x H x D)</b>	W15"X H18.60" X D10.86"
<b>Weight</b>	28.66 lbs

Operating Temperature	
<b>Operating Temperature Range</b>	32F° - 104F°
<b>Operating Humidity Range</b>	40~90% RH
<b>Storage Temperature Range</b>	-13F° to 158F°

# IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions – All the safety and operating instructions should be read before this product is operated.
- 2) Keep these instructions – The safety and operating instructions should be retained for future reference.
- 3) Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- 4) Follow all instructions – All operating and use instructions should be followed.
- 5) This apparatus can be used in wet location conditions after disconnected the AC Mains supply and closing the water proof cap for the AC inlet. It must not be used in wet location conditions when charging. Do not use this apparatus near water- The appliance should not be used near water or moisture – for example, in wet basement or near a swimming pool.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the manufacturer’s instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 16) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 17) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 18) Attention should be drawn to the environmental aspects of battery disposal.
- 19) The use of apparatus in moderate climate.
- 20) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.



Protective earthing terminal. The apparatus should be connected to a mains socket outlet with protective earthing connection.

# IMPORTANTES CONSIGNES DE SÉCURITÉ

- 1) Lisez ces instructions - Toutes les instructions de sécurité et d'utilisation doivent être lues avant d'utiliser ce produit.
- 2) Conservez ces instructions - Les instructions de sécurité et d'utilisation doivent être conservées pour référence ultérieure.
- 3) Attention aux avertissements – Tous les avertissements sur l'appareil et dans le mode d'emploi doivent être respectés.
- 4) Suivez toutes les instructions - Toutes les instructions d'opération et d'utilisation doivent être suivies.
- 5) Pour utiliser cet appareil dans un endroit humide, veiller à le débrancher de l'alimentation secteur CA et à fermer le bouchon étanche de l'entrée CA. Il ne doit pas être utilisé dans un endroit humide pendant la recharge. N'utilisez pas cet appareil près de l'eau – L'appareil ne devrait pas être utilisé près de l'eau ou dans des conditions humides – par exemple, dans un sous-sol humide ou près d'une piscine.
- 6) Nettoyez uniquement avec un chiffon sec.
- 7) N'obstruez pas les ouvertures de ventilation, installez-les conformément aux instructions du fabricant.
- 8) N'installez pas l'appareil près des sources de chaleur telles que les radiateurs, bouches de chaleur, poêles ou autres appareils (y compris les amplificateurs) produisant de la chaleur.
- 9) Ne mettez pas en péril la finalité sécuritaire de la prise polarisée ou de la mise à la terre. Une prise polarisée dispose de deux lames dont l'une est plus large que l'autre. Une prise de mise à la terre dispose de deux lames et d'une troisième broche qui sert de mise à la terre. La lame large ou la troisième broche sont fournies pour votre sécurité. Si la fiche fournie n'entre pas dans votre prise de courant, consultez un électricien pour faire remplacer la prise obsolète.
- 10) Protégez le cordon d'alimentation pour éviter qu'il ne soit piétiné ou pincé, en particulier au niveau des fiches, des prises de courant et de son point de sortie de l'appareil.
- 11) Utilisez uniquement les accessoires et le matériel de fixation recommandés par le fabricant.
- 12) Utilisez l'appareil uniquement avec un chariot, support, trépied, support de montage ou une table recommandés par le fabricant ou vendus avec



l'appareil. Lorsque vous utilisez un chariot ou un support, soyez prudent lorsque vous déplacez la combinaison chariot/appareil afin d'éviter les blessures causées par le basculement.

- 13) Débranchez cet appareil pendant les orages ou au cours des longues périodes de non-utilisation.
- 14) Confiez toute réparation à un personnel d'entretien qualifié. L'intervention d'un technicien est nécessaire lorsque l'appareil a été endommagé de quelque façon que ce soit, par exemple : si le cordon d'alimentation ou la fiche sont endommagés ; si du liquide a été renversé ou des objets sont tombés dans l'appareil ; s'il a été exposé à la pluie ou à l'humidité ; s'il ne fonctionne pas normalement ou s'il est tombé.
- 15) La prise secteur est utilisée comme dispositif de déconnexion et doit rester facilement accessible.
- 16) N'installez pas cet équipement dans un espace confiné tel qu'une bibliothèque ou endroit similaire, mais plutôt dans un endroit aéré. La ventilation ne doit pas être entravée par le recouvrement des ouvertures de ventilation avec des articles tels que journaux, nappes, rideaux, etc.
- 17) Aucune source de flamme nue telle qu'une chandelle allumée ne devrait être placée sur l'appareil.
- 18) Il convient d'attirer l'attention sur les aspects environnementaux de la mise au rebut des piles.

**AVERTISSEMENT :** La batterie ne doit pas être exposée à une source de chaleur excessive comme des rayons du soleil, des flammes, etc.

**MISE EN GARDE :** Danger d'explosion si la batterie est remplacée de manière incorrecte. Remplacez-la uniquement avec le même type ou un type équivalent. Borne de mise à la terre de protection. L'appareil doit être raccordé à une prise secteur avec une borne de mise à la terre de protection.



Borne de mise à la terre de protection. L'appareil doit être raccordé à une prise secteur avec une borne de mise à la terre de protection.

# LIMITED WARRANTY

## Model: MNRR270

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russe Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of ninety (90) days for Labor and one (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in as is condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Received Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Received Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or received invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement noncommercial use of this Product, and shall not apply to the

following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product result in service problems: incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

**To obtain warranty service, please contact technical support with questions**

**Phone: 1-800-976-0677 ■ Email: [support@mymonsteraudio.com](mailto:support@mymonsteraudio.com)**

**DO NOT return this product to the store. Visit: [MyMonsterAudio.com](http://MyMonsterAudio.com)**

# RF exposure statement

This equipment meets the exemption from the routine evaluation limits in section 2.5 of RSS-102. It should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

Cet équipement est conforme à l'exemption des limites d'évaluation habituelle de la section 2.5 de la norme RSS-102. Il doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et toute partie de votre corps.

## IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1) This device may not cause interference;
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



# FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

 <p>A lightning flash and arrowhead within an equilateral triangle is intended to alert the user to the presence of insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>An exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	--

## WARNING

Prevent fire and shock hazards. Do not use extension cords or outlets that expose plug blades. Do not expose cables and plugs to rain or moisture.

Do not attempt to perform any servicing that is not included in the operating instructions. Do not attempt to replace the battery, as incorrect installation can cause fire or explosion. For service, contact qualified service personnel.

Do not remove cover or back of product. There are no user-serviceable parts inside. Attempting to modify controls or performance beyond manufacturer specifications may result in hazardous exposure to radiation.



# MUSIC WITHOUT LIMITS

Monster and the Monster logo are registered trademarks of Monster Inc., and its subsidiaries in the U.S. and other countries, used under license.  
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.  
The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.  
NWS, NOAA, and the NOAA Radio logo are registered trademarks of the National Weather Service in the United States and used with kind permission.

 **MONSTER®** 1-800-976-0677 ▪ [support@mymonsteraudio.com](mailto:support@mymonsteraudio.com) ▪ [MyMonsterAudio.com](http://MyMonsterAudio.com)