

# **Mobile Phone**

## **FPXPHONE Model:F9300**

### **User Guide**

## Contents

<b>Contents</b> .....	2
<b>Introduction</b> .....	5
Insert SIM card and battery .....	5
Insert memory card .....	5
Battery charging .....	5
Power on and off .....	5
<b>Idle</b> .....	5
Switch to Idle Page .....	5
Adding and Delete Application .....	5
Wallpaper Settings .....	6
Task Manager .....	6
Notification .....	6
Search .....	6
Settings .....	6
Open Option Menu .....	6
<b>Main menu</b> .....	6
<b>Call</b> .....	6
Dialpad .....	6
Making an overseas call .....	6
Dialing via Contacts .....	7
Calling an extension number .....	7
Making an emergency phone .....	7
Answer or reject incoming calls .....	7
Menu during a call .....	7
Adjust volume .....	7
End a call .....	7
<b>Call logs</b> .....	7
Set as a rejected call .....	7
Commonly Used Functions .....	7
More Functions .....	8

<b>Contacts</b> .....	8
Browsing contacts .....	8
Quick search.....	8
New contact.....	8
Function Menu of Contacts .....	8
<b>Message Service</b> .....	9
Wirte message .....	9
SMS .....	9
MMS.....	9
Inbox.....	9
Outbox .....	9
Draftbox.....	9
Send messages.....	9
Commonly Used Phrases.....	10
Broadcast message.....	10
Voice mail server.....	10
<b>Internet</b> .....	10
Browser .....	10
<b>Multimedia</b> .....	10
Audio Player.....	10
Video Player.....	11
Camera Function .....	11
FM Radio.....	11
Picture Browser .....	11
Analog TV .....	11
<b>Application</b> .....	12
E-book .....	12
Alarm.....	12
Calendar.....	12
Calculator .....	12
Recorder .....	12

World time.....	12
Countdown timer.....	12
Stopwatch .....	12
Location.....	12
STK .....	13
Unit Conversion .....	13
Local Search.....	13
Memo .....	13
Magic sound .....	13
Weather .....	13
WIFI .....	13
JAVA.....	13
<b>Settings.....</b>	<b>13</b>
Phone Settings .....	14
Phone profile .....	14
Connection Management.....	14
Display Settings:.....	14
Security settings .....	14
MSD .....	15
<b>File Management .....</b>	<b>16</b>
Copy Files.....	16
New Folders .....	16

## Introduction

### Insert SIM card and battery

Long press power supply key for 3s to turn it off; Slide the back cover downwards and remove it; Remove the battery.

Note:

1. This User Guide is designed for both SIM cards inserted by selecting [Settings→Call Settings→Dual-SIM→Standby mode→Dual SIM dual standby]. If only one card is inserted or no Dual SIM dual standby is set up, the screen and options may differ from this manual.

### Insert memory card

This phone supports the T-Flash memory card. After it is inserted, you can browse or copy, etc. the files stored in the memory card. Also, the disk space of this phone can be expanded.

#### Warning:

Please don't insert or remove the memory card quickly or frequently to avoid damage

### Battery charging

Note:

1. Please use the standard matched battery and charger to prevent explosion.
2. If the battery is absolutely of no power, the battery icon will appear 2~3min after charging. Charging may take 2~5h depending on the current condition of this device (whether it is started, any call is made, etc.).
3. Please use charger to charge this device. USB wire charging shall be avoided if possible.
4. In order to help the new battery perform best, it shall complete 2~3 charge-discharge cycles. Its initial chargings shall last for more than 10h unceasingly for each

### Power on and off

#### Warning:

Please don't turn on this phone where it is prohibited or using it may cause interference or danger. In this case, please ensure this phone does not activate the regular power on/off or other functions.

## Idle

### Switch to Idle Page

Sliding to left and right can switch to Previous Slide/Next Slide.

Press Home button for a long time to enter into the thumbnail of the idle page, and select the needed page.

Press widgets or applications on the idle page, and pull it to the bottom dustbin to delete.

### Adding and Delete Application

Press Menu button on the idle page, select Add to add widgets and application to the standby.

Press widgets or applications on the idle page, and pull it to the bottom dustin to delete.

## Wallpaper Settings

Press Menu button on the idle page, and select Wallpaper.

Users can set ordinary picture as the wallpaper, and can set dynamic wallpaper and video wallpaper.

## Task Manager

Press Menu button on the idle page, and select task manager.

Click the close icon behind the application, and close the applications running in the background.

## Notification

Press Menu button on the idle page, and select Notification.

Users can directly pull out the notification panel downward from the status bar.

Click tabs to browse the notification message, and check the running applications.

## Search

Press Menu button on the idle page, select Search to use the local search fuction.

## Settings

Press Menu button on the idle page, select Settings to enter into the phone settings.

## Open Option Menu

Under standby situation, press the Lock button to open the option menu.

Users can fast set mute/flight mode or shutdown.

## Main menu

### Use Function Menu of Main Menu

Under idle situation, press the application icon, and open the function menu of the main menu.

Slide the main menu to display all the applications. Different main menus may have different slide mode.

Select **[Main Menue->Main Menue Display]** to select various main menu with different styles.

Press the icon of a certain application for a long time to pull the application to the idle page.

Press Return button or main display to return back to the idle page.

## Call

### Dialpad

Under idle situation, press “Dialpad” button to enter into the dialpad interface, and press virtual keyboard to dial;

### Making an overseas call.

Enter the country code (in this case, “+” shall be entered by pressing \* twice continuously);

Enter the area code (without “0” prefixed to that as usual) and the phone number;

Press “Call”, escape the SIM card option screen. Select SIM1 to dial with SIM1; select SIM2 to dial with SIM2

## Dialing via Contacts

### Calling an extension number

Enter the switchboard number;

Press [Option→Insert→Pause] and then input the extension number;

Press “call”, escape the SIM card select screen. Select SIM1 to dial with SIM1; select SIM2 to dial with SIM2

### Making an emergency phone

### Answer or reject incoming calls

For incoming calls under the lock situation, slide to left and right to answer or reject calls.

### Menu during a call

During a call, you can :

**Hold:** Press [**Hold**] to hold current call, and press [**Activate**] to resume current call when holding the call (the function needs to be supported by network).

**Record:** Record the call details, and the document will be kept in the file manager automatically.



#### Note:

It is illegal to record any call in some countries. So please do so with the speaker's prior consent.

### Adjust volume

You can volume the receiver by side key during a call

### End a call

Press “Hang up” to end a call.

## Call logs

Show the phone numbers missed recently

Roll to any number and press the dial button reply the call, and can press [**Menu**] to select other operations.

### Set as a rejected call

In the record details interface, press [**Menu**] to select [**Set as a rejected call**], Set the phone number as a rejected call, which may be available in the [**Contacts→Blacklist**].

### Commonly Used Functions

Press the single record for a long time, and open the option menu.

**Write SMS:** Send SMS to the current number.

**Write MMS:** Send MMS to the current number.

**Language call:** Callback this number.

**IP Call:** Callback this number by IP.

**Add to New Contacts :** Store the number to this phone.

## More Functions

On the call record interface, press [**Menu**] button to open the option menu:

**Answer record:** The phone, if not answer, will play the preset voice and then record the words of the speaker.

**Delete All:** Delete all phone numbers.

**Call timers:** The details of the SIM card is available after selecting that card to be viewed.

**GPRS volume :** Read the information of GPRS volume.

# Contacts

## Browsing contacts

When this device standby, select [**Contacts**] and open the namelist.

The contacts are listed in the order of unnamed, special symbol, digit and English letter respectively (for Chinese names, the English letter corresponding to their pinyin prevails).

## Quick search

When this device standby, select [**Contacts**] and open the namelist.

Click search bar to search and position (vague search is allowed) through the virtual keyboard.

Example 1: search for “**sam**”

Enter keys “**726**” where the letters “**sam**” are located.

## New contact

**SIM1:** The input is added to SIM1 with only one number stored under a name.

**SIM2:** The input is added to SIM2 with only one number stored under a name.

**Phone:** All records other than in SIM1 and SIM2 are stored in the memory of this device. The editable items include the name, phone number, home phone number, company phone number and/or other phone numbers, the incoming a picture or ringtone, etc. for the said contact

**Note: Name may be empty, but phone number shall not be so for any new record.**

## Function Menu of Contacts

On the interface of the contact list, press “Menu” to operate the functions:

**Group:** Enter into the group list interface.

**Mark:** Mark one or more contacts.

**vCard:** Import or export all the cards.

**Quick Dial:** Enter the quick dial.

**Contact display:** Select the display mode of the contacts.

**More:** Query the settings of this phone number and the size.

On the contacts list interface, press one record for a long time to operate the following functions:

**Wirte message:** send one message to the contacts.

**Call:** ring the contact.

**Delete:** Delete the person information.

**Copy:** Copy the contact information.

**Send vCard:** send the contact in vCard.

**Export:** Export the contact.

**Addto Blacklist:** Add the contact into Blacklist.

## Message Service

### Wirte message

#### SMS

Under idle situation, press “information service” button to enter into the mailbox list interface, press [**Wirte message**→**New SMS**] to enter into the message editor interface, manual input or insert the contacts from the address list as the recipients, press “send” button to send the messages after editing the contents.

#### MMS

Short for multi-media service, MMS is just a multi-media message, which supports GIF, JPEG, WBMP or BMP display.



#### Note:

This function is available only when supported by the network operator. Meanwhile, only the phone compatible to MMS can receive and display such message.

Under idle situation, press “information service” button to enter into the mailbox list interface, press [**Wirte message**→**New MMS**] to enter into the MMS editor interface, manual input or insert the contacts from the address list as the recipients, press “send” button to send the messages after editing the contents or inserting the attachment.

### Inbox

Save the received SMS and MMS.

### Outbox

Save the SMS and MMS not sent out successfully.

### Draftbox

Save the unsent messages and MMS.

### Send messages

Save the SMS and MMS you sent successfully.

## Commonly Used Phrases

Directly use the default phrases when writing the messages.

### Broadcast message

Network service enables you to receive all kinds of text message, such as news, weather report, traffic conditions, etc. For the detail, please refer to your network operator.

### Voice mail server

This is similar to the Answer machine. You may transfer the incoming call that you fail to answer duly to your Voice mail server, where the caller can leave message. You are reminded of message, if any, in the mailbox by a short message. This function is part of the mating software provided by the network operator, so you need to register it, please refer to your network operator for the detail.

## Internet

### Note:

1. Your Internet service provider may not support some functions, please confirm that your SIM card supports Internet function and the function has been opened.
2. To browse webpages, you might be charged of corresponding flow rate
3. If WLAN network is applicable, surf the internet through WLAN interlinkage.

Internet is an application platform integrating wireless communication and Internet technology, which makes it possible for you to access to rich Internet information source and e-commerce application etc.

### Browser

Open the starting page of the browser, users can enter into input URL, search, bookmarks, history and stored pages through the interfaces. Press Menu button to open more menus: homepage, settings, clear records and exit browser homepage, and users can set the homepage of ISP internet (set in advance or default homepage).

## Multimedia

### Audio Player

The phone is able to play music files saved in phone and the downloaded music and support background play of MP3 file.



#### Instruction:

MP3 supports MPEG 1 layer 3 audio; supports MPEG 2 layer 3 low sampling rate extension; MPEG 2.5 layer 3 (unofficial).

#### Play songs:

When play some certain contents, select the needed items from the list.

#### List

Select menu > music list and select the list.

### ***Create New List***

1. Select menu > new list.
2. Enter name of the list and select Confirm.
3. Select Yes to immediately add the songs; please select No to add the songs later.
4. Select Finish.

Press to pop up the menu to delete or edit custom list.

Select Option > Add music when checking the list to add more songs later on.

## **Video Player**

The video player supports 3gp, mp4 and avi documents.

If the document is the standard format not supported, use the tools to convert into the standard format.

### ***Play:***

When play some certain contents, select the needed items from the list.

## **Camera Function**

Take pictures and video clips with audio through the self-contained camera function.

Click the camera icon from the main screen, and switch to the framing menu of the camera.

Press return button to exit the camera procedure.

## **FM Radio**

The system will automatically scan channels and record firstly open FM radio.

(Note: Insert the headset, the headset is the antenna.

## **Picture Browser**

Check the pictures and shoted photos in the memory card through the photo album.

## **Analog TV**

In [Analog TV] mode, press [Option] to carry out the following function operations:

**Add to favorites:** add the channel you are watching to my channels.

**My favorites:** play channels you have added.

**Channel list:** view all the channels.

**Record list:** the recorded videos are saved in the Record list. You may set the video as screen protection, starting up animation, Power off display. You may send the video through multimedia message. You can also mark, Unmark, mark all, and cancel all the marks the selected video.

**Search channel:** automatically search channels and save them in channel list.

**Select country/region:** select a country/region you are from so as that channels can be searched by Analog TV.

**Set:** set Storage for video, you may save your recorded video in phone or memory card.

**Adjustg brightness:** adjust brightness of Analog TV. Press [5] to quickly adjust brightness of Analog TV while playing the Analog TV.

Help: provide help related to Analog TV.

## Application

### E-book

E-book can support file of TXT format. You can copy TXT file to [E-book] folder on the T-FLASH card by PC. In standby mode, enter the function menu, then select [**E-book**].

Randomly select a book in the bookshelf to read; slide to turn pages.



#### Instruction:

Please delete the unnecessary files when you read the E-book with the hint that there is no enough space. Make sure there is over 500KB free space in your mobile phone.

### Alarm

Enter into the function list, then select **Alarm**.

### Calendar

Enter into the function list, then select **Calendar**.

### Answer Machine

The answering machine can set the starting answer function, and can be used to save the messages.

### Calculator

1. Select **Calculator** under function menu mode.
2. Use the buttons matched with the calculator to carry out basic arithmetic operation.

### Recorder

Enter into the function menu to select the **Recorder**.

### World time

Understand how to check the time of other areas and set the displayed world time on the screen.

### Countdown timer

Enter the function list and select **Countdown timer**.

### Stopwatch

### Location

Enter the function list and select **Location**.

## STK

Enter the function list and select [STK]

Entering the STK sub-menu, you can use the value added service offered by network operator.

This mobile supports STK function but this service is offered by network operator. If your SIM card and network operator don't support this service then you cannot use it. Please contact your network operator for more information.

## Unit Conversion

### Local Search

### Memo

### Magic sound

### Weather

Check weather information through the weather procedure.

### WIFI

WIFI can connect the mobile phone's terminal to the wireless network.

#### *Start WLAN*

1. Enter into the function menu, and select WLAN.
2. Click switch button to start WLAN. PIN code may be not necessary, depending on the devices. The WLAN on the background will consume the battery quantity. Start WLAN as needed if the users want to save the electric quantity.

#### *Automatically Connect to WLAN*

1. Enter into function menu, and select WLAN.
2. Click switch button to open the **Automatically Connection**.

## JAVA

Java function can offer you powerful mobile entertainment function and you can install any favorite program to your mobile phone. Click the Java program existed and run it.

### *Java Application*

#### *Java Application List*

Press Menu button to open the option menu:

**Local installation:** For install Java installation procedures in the mobile phone or memory card.

**Download:** For downloading games, e-book and others and carry out relevant settings.

**Resume Java system:** Resume Java system to default.

## Settings

## Phone Settings

### Phone profile

The preset modes are General mode, Mute mode, Conference mode, Indoor mode, Outdoor mode, Headset mode. It support custom profiles, define at most 5 profiles, and users can set the parameters of the profiles.

Instruction: The preset profiles do not support delete, while the custom profiles support delete.

### Connection Management

The items are :

**Internet account:** Manage internet account, and support editor and delete.

**Data connection settings:** Select to connect as needed or all the time.

**Network selection:** Select to automatically or manually connect.

### Display Settings:

The settings items:

**Motion Effects:** including Screen special effects, Screen orientation switch special effects, Power on display, Power off display.

**Wallpaper Settings:** Supported wallpapers: Static wallpapers, dynamic wallpapers, more pictures and video wallpapers.

**Screen Savers Settings:** set the screen savers.

**Backlight:** adjust the screen backlight.

**Button Backlight:** adjust the backlight time.

**Font Settings:** set the font.

### Security settings

Including:

**PIN code:** Start and close of PIN code and the modification of PIN.

#### **Warning**

Please use this function cautiously. If you forget the PUK code, please get it from the service provider. Ten consecutive incorrect PUK code entries will make the SIM card card unserviceable.

**Modify PIN2 code:** Modification of PIN2 code.

#### **Warning:**

Be cautious to use this function, if wrong PUK2 code is entered for 10 times, SIM card can not be used.

**Phone Lock:** Open or close the phone lock.

**Change Phone Password:** change the phone password.

**Privacy Protection:** set the privacy protection

**Automatic lock:** Set time of the automatic lock.

**Lock password:** Start or close the lock password.

## MSD

MSD is also called Mobile phone dog. Its main function is to collect information like the current CELL ID to a pre-determined phone when your phone is used by others illegally, and prevent others using the phone after a limited period or a certain number of power-on. The default MSD is off. You need to change the password before activating it. After that, password is required to activate or cancel the function as well as change the password. The password must be 6 digits long. To activate the function, you have to input a pre-determined phone number (to receive the informing message when the phone is stolen) besides the password. After the function is activated, the phone will memorize IMSI number of this card. Because the number is the only one, when another SIM card is inserted, a prompt box will appear after power-on and you need to input MSD password. Three incorrect entries or choosing exit will be considered as illegal use, and then an illegal use prompt is given. At this time, information like CELL ID (refers to: cell identity), LAC (refers to: Location Area Code, used to identify different locations), MCC ("460" stands for China), MNC and MCN will be read and short messages will be sent to the pre-determined phone number. The legal user could report a case to the Public Security Organs where the illegal use of the phone can be checked according to the information through the internet service provider (including the phone location, call log and so on).

If the short messages fail to send or are being sent, they will be sent in the next minute until they are sent successfully. Keeping in standby mode for 24 hours or powering the phone on again, the phone will send a short message again to the pre-determined phone number. When the number of the successful short messages comes to a certain amount (15 times), none illegal used SIM card can be used on the phone. The phone will power off automatically.

 **Note:**

Please report a case to the Public Security Organs when the phone is stolen. But they do not ensure to find the stolen phone. Therefore, please take good care of your personal belongings.

If the phone considers the card is illegally used, Unauthorized to use will appear if someone wants to activate the MSD, namely the corresponding functions under the MSD menu can not be used. If other cards are used to power on the phone and the password is correct, the number of the messages will be counted from 0, and the prompt Bind the card or not will appear. Choose Bind the card, the phone will update the IMSI card information, regarding the card as the appointed card of the phone.

**Start:** Firstly set the password to start this function, input the guardlock password and notify the mobile phone when starting (Receive illegally using SIM card of this mobile phone and send the information about the illegal SIM card), the settings are completed, and the guardlock function can be started.

**Cancel:** To cancel the MSD. You have to input MSD password when canceling the function.

**Change password:** Change the MSD password.

 **Warning:**

Please use this function cautiously. You can not use the phone if you forget the password.

**Fixed Dialling:** Start and close of the fixed dialling, and management of the fixed dialling list.

**Blacklist:** Settings of the blacklist and management of the list.

## File Management

File manager can manage the files in the memory card.

### Copy Files

1. For copying the files, press to pop up the menu, and enter into the copy mode.
2. Select the target folder, click the confirm icon on the right or click “select the contents” in the folder.
3. Click “Mark” to copy multiple files.

### New Folders

1. Open the file manager.
2. Press Menu button → New Folder.
3. Input folder name and click to save.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The max SAR value of the mobile phone is 0.726W/Kg. This equipment should be installed and operated with minimum distance 10mm between the radiator & your body.

# Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## IMPORTANT NOTE:

### Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This equipment should be installed and operated with minimum distance 1.0cm between the radiator & your body.

To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories those do not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.