

User Manual

Mobile Phone

FLASH II

Global Phoenix Computer T&S, Inc.

Contents

Safety.....	1
1.Getting Started.....	2
1.1 Installing the SIM card, battery and storage card.....	2
1.2 Charging the battery.....	3
1.3 Starting Icons.....	4
1.4 Status Icons.....	6
2.Using Phone Features.....	7
2.1 Turn the phone function on and off.....	7
2.2 Making a call.....	8
2.3 Answering and ending a call.....	8
2.4 In-call options.....	8
2.5 Using call history.....	9
2.6 Call settings.....	10
3.Setting on Your Device.....	10
3.1 Wireless & Networks.....	10
3.2 Device.....	11
3.3 Personal.....	12
3.4 System.....	13
4.ActiveSync.....	13
5.Contacts.....	14
6.Exchange Messages.....	16
7.Internet.....	18
7.1 Ways of Connecting to the Internet.....	18

7.2 Browser.....	18
8.Experiencing Multimedia.....	20
8.1 Camera&Picture.....	20
8.2 Music.....	21
8.3 FM Radio.....	23
9.Other Applications.....	23
9.1 Calendar.....	23
9.2 Alarm Clock.....	24

Safety

Do not disassemble phone.

As a general rule, always power off the phone wherever the use of a phone is prohibited. Use of the phone is subject to safety measures designed to protect users and their environment.

Do not use the phone in damp areas. Protect it from liquids and other moisture.

Do not expose the phone to extreme temperatures lower than - 10 °C and higher than + 40 °C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. The phone automatically protects the batteries in extreme temperatures.

Keep out of reach of small children.

Electrical safety: Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous and void the warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

Electronic equipment: To avoid the risk of demagnetization, do not leave electronic devices close to the phone for a long time.

1 Getting Started

1.1 Installing the SIM card, battery, and memory card

Remove the back cover before installing the SIM card and battery. Also, make sure to always turn off the power before installing or replacing the SIM card and battery.

To remove the battery

1. Make sure the device is powered off.
2. Remove the back cover.
3. The bottom of the phone has a notch. Lift the battery by the notch to remove.

To install the SIM card

The SIM card contains your phone number, service details, and phonebook/message memory. This device supports 2G, 3G (WCDMA) SIM cards.

1. Remove the battery if installed.
2. Locate the SIM card slot, and then insert the SIM card with its gold contacts facing down and its cut-off corner facing out the card slot.
3. Slide the SIM card completely into the slot.

Note: • The phone can support dual SIM cards. The card slot supports 3G (WCDMA).

When 3G or 2G card inserted, you can only use 3G or 2G operation.

• Some legacy SIM cards may not function with your device. You should consult with your service provider for a replacement SIM card. There may be fees for this service.

To install a memory card

1. Make sure the device is turned off, then remove the back cover.
2. Locate the memory card slot on the upper part of the exposed right panel.
3. Insert the memory card into the slot with its gold contacts facing down until it clicks into place.

Note: To remove the memory card, press in to eject it from the slot.

To install the battery

KOCASO®

The device comes with a rechargeable Lithium-ion battery and is designed to use only manufacturer-specified original batteries and accessories. Battery performance depends on many factors, including network configuration, signal strength, and usage patterns.

Warning: To reduce risk of fire or burns:

- Do not attempt to open, disassemble, or service the battery pack.
 - Do not crush, puncture, short external contacts, or dispose of in fire or water.
 - Do not expose to temperatures above 40 °C.
 - Replace only with the battery pack designated for this product.
 - Recycle or dispose of used battery as stipulated by local regulations.
1. Align the battery's exposed copper contacts with the battery connectors at the bottom part of the battery compartment.
 2. Insert the contacts side of the battery first and then gently push the battery into place.
 3. Replace the back cover.

1.2 Charging the battery

Before using the device, it is recommended to install and charge the battery. Some batteries perform best after several full charge/discharge cycles.

Note: Only the AC adapter and USB sync cable provided with the device must be used to charge the device.

Connect the USB connector of the AC adapter to the sync connector on the device, and then plug in the AC adapter to an electrical outlet to start charging the battery.

As the battery is being charged while the device is on, a charging icon appears in the title bar of the Home screen. After the battery has been fully charged, a

full battery icon appears in the title bar of the Home screen.

Warning: • Do not remove the battery from the device while charging.

• As a safety precaution, the battery stops charging before it overheats.

1.3 Starting up the device

Power on/off

To power off the phone, press & hold POWER. On release, the Phone options menu opens. Select 'Power off' and confirm.

To power on again, press & hold POWER.

Silent mode

To silence the phone quickly, press & hold the – volume button to zero volume.


Or on the Home screen, touch  and select Settings > Sound & notification > 'Silent' check box.

Screen sleep


After a period of inactivity, the screen will go to sleep (display will turn black).

In sleep mode, the phone uses less battery power.

Set screen timeout period

1. On the Home screen, touch  and select Settings.
2. Select Display > Sleep. Select a time from the menu.

Prevent sleep while charging

1. On the Home screen, then touch  and select Settings.
2. Select Developer options > 'Stay awake' check box.

Lock screen & put phone to sleep


Except when on a phone call, from any screen, press POWER (immediately).

While not on a call, to lock your control buttons and screen from accidental touch activation, press POWER.

Increase the security of your phone by setting a 'Screen lock' pattern. Once set, in order to unlock your screen, draw the correct pattern to unlock.

Setting the screen lock pattern:

KOCASO®

1. On the Home screen, touch  and select Settings.
2. Select Security and then scroll down to 'Screen lock' pattern.
3. Set or change the unlock pattern by selecting 'Screen lock' pattern.
4. Follow the prompts to create your pattern.

Note: Slide a finger along the screen to create the pattern. Connect at least four dots.

If you want the pattern to be hidden, uncheck box for 'Make pattern visible'

Home screen

The Home screen is the starting point for using all the applications on the phone. Customize the Home screen to display applications, shortcuts, and widgets.

1. The Home screen actually extends beyond the screen width. On Home screen, slide fingertip left and right along the screen to reveal the full width of the Home screen. This additional space gives more room to customize the Home screen with applications, shortcuts, and widgets.

2. Create Home screen shortcuts and widgets:

- On Home screen, touch MENU or touch and hold the blank screen to select 'WIDGETS'.
- Touch and hold to pick up an Application shortcut, a Shortcut to saved information (such as a playlist), or a Widget (a clock or picture frame). To place the widget, slide fingertip right along the screen to reveal the width of the Home screen.
- The application, shortcut, folder, or widget appears on Home screen.

3. To create an application shortcut quickly, touch the application tab to reveal all application icons, then touch & hold an application icon. Now the shortcut is added to the Home screen.

4. To remove a shortcut or widget from the Home screen, touch & hold the item to enter 'Remove mode'. Drag the item to 'Remove' button and release. Item and tab will turn red when hovered over "Remove"

5. Move objects on the Home screen

















- To move an icon or other item on the Home screen, first touch & hold it to enter 'Remove mode'. The object will magnify when it's ready to be moved.

- Without lifting fingertip, drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.

1.4 Status Icons

Connection status icons

Along the top of the phone screen is the status bar. On the left side, icons will appear, notifying a new message, upcoming calendar event, etc. On the right side of the status bar, are connection status icons.

	Network signal E: EDGE 3G: WCDMA		Sign-in/sync error
	Call forward		Song is playing
	Missed call		Connected to the PC
	SMS/MMS		Call in progress
	Alarm is set		Wireless services are off (Airplane mode)
	Ringer is off		Phone on mute
	Battery is charging		Battery is low
	Connected to the earphone		Battery is very low!


Read your notifications

When a notification is in the status bar, touch the bar and slide fingertip down the screen to open the list of notifications displayed in the window.

Ongoing notifications report activities such as call forwarding ON, current call status, song playing.

Notifications report the arrival of new messages, calendar events, and alarms. Clear notifications list by selecting 'Clear' notifications at the bottom of the notifications window.

To open the message, reminder, or other notification, touch the items. To close the notifications window, slide fingertip up the screen.


Notes: On the home screen, touch the bar and slide fingertip down the screen to open the list of notifications displayed in the sliding window, touch the icon  on the top of the screen to enter the shortcuts screen, such as Airplane mode, Wi-Fi, Data connection, Airplane mode, and Brightness.

2 Using Phone Features

2.1 Turning the phone function on and off

To enable or disable Airplane Mode

To enable Airplane Mode, all wireless radios on the device are turned off, including the phone function, Bluetooth, and WLAN.

1. Touch  > Settings > More > Airplane mode.
2. Touch 'Airplane mode' to enable or disable.


When disabled, the phone function is turned back on and the previous state of BT and WLAN are restored.

Adjusting the volume

Press Volume button on the side of the phone to show the volume screen.

If the phone is in vibrating mode, the voice will be muted automatically and the device will vibrate when there is an incoming call.

2.2 Making a call

On Home screen, touch  > Phone to enter the dial screen.

1. Touch the on-screen dial pad to enter a number, touch ‘Delete’ button to delete entries. Touch & hold to delete all the numbers in the field.

To dial a call, touch ‘Call’ button to make a call.

To end a call, touch ‘End’ button (Red icon).

2. On the dial screen, touch Call history tab (Recents) to show the call records, select an entry listed in the log to call the number.

3. Also, enter Contacts that the contacts with phone numbers are listed. Select a contact, and then select the phone number to dial the call.

2.3 Answering and Ending a call

When receiving a phone call, the incoming voice call screen will appear, allowing you to either answer or ignore the call.

1. To answer an incoming call, slide ‘ANSWER’ (Green icon) button rightward.

2. To reject a call, slide ‘REJECT’ button (Red icon) button leftward.

2.4 In-call options

While on a call, reveal the in-call options: Speaker, Mute, Hold, End.

Note that if BT services are on and connected to a hands-free device, the more the menu indicator will show.

1. Speaker: To use the speaker, select ‘Speaker’ so it shows a green bar. To turn it off, select it again so the bar is unfilled. The status bar will display this icon when the speaker is on.

KOCASO®

2. Mute: To mute the microphone, select 'Mute' so it shows a green bar. To turn it off, select it again so the bar is unfilled. The status bar will display this icon when Mute is on.

3. Hold: To put an active call on hold, select 'Hold' so it shows a green bar. To resume the call, or take the call off hold, select it again so the bar is unfilled. If answering a call while already on a call, the first call will be placed on hold automatically.

4. Add call: to enter numbers while on a call, touch 'Add call'.


5. Incoming call: During call in progress, if already on a call ("call in progress") when another call comes in ("incoming call"), there are a few choices:

- Answer the incoming call and place the call in progress on hold. To switch calls at any time, touch 'Swap calls'.
- To ignore incoming call, touch 'END'.
- When one call is in progress and one caller is on hold, to end both calls, touch 'End all'.

6. While on a call, conference up to five additional callers. Note - caller can be on hold during a conference call, regardless of how many participants are on the conference.

Group calls may require additional services. Please contact your network provider for details.

2.5 Using call history

1. The missed call icon  appears in the title bar when there is a missed call.

2. Use 'Call history' tab to check the caller ID, or view all dialed and received calls. To open 'Call history' tab, touch 'Call history' button in the phone screen to enter the call history list.


3. Call back - scroll to select the contact or number you want to dial and touch "Call back" button.

To edit - Tap and hold the selected contact, and then edit number before call, send text message or remove from call log on the shortcut menu

2.6 Call settings

On the dialing screen, press MENU > Settings to enter Call settings menu.

3 Settings

Control phone-wide settings from the Home settings screen: touch  and select Settings.

3.1 Wireless & Networks


Wi -Fi

1. Select this check box to use Wi-Fi for the data connection.
2. Wi-Fi settings: Open the Wi-Fi settings screen; select it from the network list. Provide username or password if required.

SIM cards

To set the information of the SIM card, and activate or deactivate data connection.

More

Airplane mode on/off: When airplane mode is selected, all wireless connectivity is off. This icon  will display in the status bar when airplane mode is selected.

Mobile network

- Select data roaming capability.
- Select a wireless operator network - Scan for all available networks, or select a network automatically.
- Add or edit network Access Point Names (APNs) - Do not change this setting unless advised to do so by an authorized wireless provider.

Display

Brightness: Select to open the brightness control, and then slide fingertip along the brightness bar to set the level. In sunlight, increase the level.

Sleep: Select to decide how long the phone must be inactive before the screen turns off.

Sound & notification

Select one user profile and enter the following options:

Volume: Select to open the volume control, and then slide fingertip along the volume bar to set an incoming call ring volume or alarm, play back music, videos.

Phone ringtones: Select to decide on a ring tone to use for incoming calls. Note: override this function for individual contacts in the Edit contact details screens.

Default notification sound: Select a ring tone to use for a notification (e.g., new message). Note: to override this setting for new Calendar event notifications, text and multimedia message notifications, go to the applications settings screens to select specific ring tones.

Vibrate: Select to have the phone vibrate for incoming calls.

Dial pad touch tones: Select to have a tone sound when using the on-screen Dialer.

Touch sound: Select a sound to play when touching an item on the screen.

Storage

View and manage the data storage.

Memory card: Monitor and manage the use of a Memory card from this screen:

1. View how much space is used on a memory card.
2. Select to use memory card as USB mass storage when phone is connected to a computer (selected by default)
3. Unmount/eject a memory card from the phone. Note that when the phone is connected to a computer via USB, the viewing of pictures or playing of any

media stored on the card is disabled.

Internal phone storage: Reports how much internal storage is free.

Apps

View all the applications stored on the phone and how much space they occupy. Downloaded applications from the Android Market, can be uninstalled from this screen. Select a specific application to:

1. Clear user data associated with a particular application.
2. Disassociate the application with any actions.
3. Uninstall – Select uninstall to remove any downloaded applications.

3.3 Personal

Location

Select a source for determining location.

Security

Screen unlock pattern: Create a pattern to lock/unlock the phone.

SIM card lock settings: Lock SIM card for extra security. Also change the SIM card PIN from this screen. If SIM PIN is not known, obtain it from your wireless provider.

Visible passwords: Select to have password display when typed.

Unknown sources: Select this check box to download applications from the Web. When not selected, only download applications from Android Market. To ensure personal data and phone remain secure; it is recommended to not select this check box.

Accounts

Turn on/off synchronization for all services.

Backup & reset

Restores phone to factory settings. *****This will erase all data from the phone.

Date & time

Set time, time zone, and date: Use Automatic, or override to set manually.

Time format: Select from 12 or 24 hour formats.

Date format: Select from a variety of formats.

Developer options

For application developers only.

USB debugging: To communicate with the phone directly via USB, select 'USB debugging' check box.

Stay awake: To prevent the phone from sleeping while charging (via power adapter or USB), select 'Stay awake' check box.

About phone


View the model number and version information for the phone.

View status of the phone: This screen lists a variety of information, including phone number, network connection, the type of network, signal strength, roaming, WLAN connections, etc.

4 ActiveSync

Data synchronization

Some applications on the phone give access to the same personal information that can be added, viewed, and edited on a computer using Web applications. When adding, changing, or deleting information in any of these applications on the Web, the updated information also appears on the phone, and vice versa.



This mirroring of information happens through over-the-air data synchronization, or data "syncing". Data syncing occurs in the background and shouldn't ever get in the way. Data is being synchronized when the sync icon appears in the status bar: 

Because sending large amounts of data back and forth over the air can take time

and require considerable bandwidth, there are some settings on the phone that allow controlling of the data sync.

Sync by application


To control synchronization Contacts, do the following:

1. On the Home screen, touch  and select Settings.
2. Select Accounts. When any of the applications are synchronizing, the “sync” icon  can be seen. You will also see the last time your data was synchronized.

3. By default, the personal information in Contacts will sync whenever a change is made or a new message received. To change:


Auto-sync: When selected, Auto-sync will sync Contacts automatically, as changes are made or new messages received. When OFF, information will not be synced automatically, although a sync can be forced by using the individual application check boxes described below.

4. Sync problems:

If this icon  appears to the left of the sync check box, then there was a temporary problem with the data synchronization. Check the data connection and try again later.

5 Contacts

The contacts on the phone are synced with your account contacts stored on the Web.

To view the contacts on the phone, touch  and select Contacts.

Contacts belonging to a specific group (choose which group) are listed in the Contacts tab. Only those contacts starred as “favorites” are listed in the Favorites tab. Browse through contacts by sliding fingertip up and down on the screen. Or use “SEARCH” button for quick search, input the first letter of the contact and touch search icon, the matching contacts appear on the screen.

From the Contacts tab:

1. Go to Contact details: Select the contact’s name to open the Contact details


KOCASO®

screen, all contact information is displayed.

2. Take action on a contact: On the Contact details screen, call contact, send text message, add or remove a star or edit the contact details.

3. On the Contact details screen, press MENU to open the context menu. From the menu select to share, place on home screen, or print the contact.

Add a contact

1. On the Home screen, touch  and select Contacts. Contact list will appear.

2. Touch the '+' icon on the right-down of the screen to add new contact.

3. Add all the information to store for this contact in the appropriate fields. Some information is required to save a contact. To change a default label, select the label name to open the label menu. Select a different label or create a custom label. To add more fields, select 'Add another field'.

4. Assign a Caller ID icon to a contact by touching Caller ID icon. The Pictures application opens. Navigate to a picture and select it, crop to size with fingertip. When finished, select 'Done'. The picture is associated with the contact.

5. To save the contact, press BACK, or touch 'Done' icon.

Edit contact details

To make changes to the contact:

1 From Contacts, select the contact to edit.

2. Select 'Edit' icon. The Edit contact screen appears.

3. Make edits, press 'Done' icon.

SIM contacts importer

If contacts already stored on the SIM card, add these to the Contacts stored on the phone by selecting this settings option. From the contact list, press MENU to select 'Import/export', import from SIM card or memory card, once the list of names and numbers appears:

Import only certain names/numbers in the list - Select the name/number wanted for import, then repeat. (As soon as selected the name/number, it is imported)

6 Exchanging Messages

SMS and MMS messaging

To open the SMS & MMS Messaging application, on the Home screen, touch



and select Messaging icon.

About text and multimedia messages

SMS messages are also known as “text” messages and can each be around 160 characters.

MMS messages are also known as “multimedia” or “picture” messages and can contain text, picture, audio, and video files.

When composing a message, the phone will automatically convert a text message into a multimedia message as soon as image or attachment is added, or if the message is addressed to an email rather than a phone number.

View the message from the message list

Select a message thread in the list to open it for reading. When open, the individual messages appear stacked on the screen, much like with instant messaging conversations (or chats).

Note that messages sent are also listed in the Read view.

1. Reading multimedia messages

If you have selected to auto-retrieve multimedia messages, then both the message header and body will download.

If downloading only the headers, then first select the Download button to retrieve the message body. If concerned about the size of your data downloads, you can check the message size before downloading.

Once the message has downloaded, select ‘Play’ button to view the message.

From a message read view:

1. To view details about a particular message, in the Read view, touch & hold the message to open the context menu. Select View details.
2. Reply to a message: Simply start typing the message in the text box at the bottom of the screen to reply to a message. Press MENU and select to add a subject or an attachment to convert it to a multimedia message. Select ‘Send’

KOCASO®

when ready.

3. Links in messages: If a message contains a link to a Web page, it will be selectable. To view the Web page in the Browser, simply select it.

4. Delete messages: messages will be saved until deleted.

- Delete one message in a thread - With the message thread open in Read view, touch & hold the individual message to open the context menu, and then select 'Delete'.

- Delete all messages in a thread - From the message list, press & hold the thread, then touch 'Delete' icon on the bottom of the screen.

- Delete all message threads - From the message list, press MENU and select delete all threads

Compose text and multimedia messages

1. Touch '+' Compose icon. The Compose screen opens.

2. Add recipients by typing a name, phone number, or email address in the 'Type name or number' field. Matching contacts will appear. Select the recipient or continue typing. Add as many recipients as desired.

3. To add a subject, press MENU and select 'Add subject'. If subject added, the message will convert to a multimedia message.

4. To add an attachment, touch '+' icon. Adding an attachment will always convert the message to a multimedia message. Select from audio or picture files.

It is possible to take a new picture, or record a new audio file. Any recordings made will be stored automatically in Music application in a play list named "My recordings". To remove an attachment, select the attachment's 'Remove' button.

5. Remember that text messages have a limit around 160 characters. Once you go over that limit, a new message is actually created but automatically joins into one when received.

6. Select 'Send' when ready. Or save as a draft.

7. As message sends, progress displays in the title bar. Message is not sent until progress bar is complete.

Save message as draft

While composing, press BACK, your message automatically saves as a draft.

Text and multimedia message settings

To set text and multimedia message preferences, from the message list, press MENU and select 'Settings'.

7 Internet

7.1 Ways of Connecting to the Internet

Your device's networking capabilities allow access the Internet or through WLAN, GPRS, EDGE (if available), WCDMA (if SIM card supported).


VPN or proxy connection also supported, see a network administrator.

WLAN

WLAN provides wireless Internet access over distances of up to 100 meters (300 feet). To use WLAN on the phone, access to a wireless access point or "hotspot" is required.

Note: The availability and range of the device's WLAN signal depends on the number, infrastructure, and other objects through which the signal passes.

7.2 Browser

To open the Browser, touch  and select Browser icon.

The Browser always opens to the last Web page you were viewing. The first time the Browser is opened after powering on, the home page will display.

To change the home page press: MENU > Settings > General > Set homepage.

The Browse screen

From the Browse screen:

1. Go to a Web page: Make sure the focus is not on a text box and then start typing the URL.
2. Add a bookmark: To bookmark the web page currently viewed:

KOCASO®

- Press MENU and select 'Save to bookmarks'.
- Confirm the URL and name, and then select 'OK'.
- To view all bookmarks, press MENU and select Bookmarks.

3. Refresh a Web page: To refresh the contents of the current page, press MENU and select 'Refresh'.

Open pages in separate windows


To view more than one Web page open: use multiple windows to display the pages. Open up to eight windows.

Open a new window: From a Web page, press MENU and select 'Windows'. The Current windows screen opens, showing the starting web page, plus a "new window". Select 'New window'. The home page opens in a new window. To return to one of the other windows, press MENU and select 'Windows'. Select another page to view.

Download Web files and applications

Before downloading any files or applications using the Browser, note the following:

1. Before downloading Web applications, "allow" downloading from the Home > Settings screen:

On the Home screen, press  and select Settings. Select 'Security', then select 'Unknown sources' check box.

2. All items downloaded from the Web are stored on the memory card. Make sure to first insert memory card into phone.

3. The Browser will only allow downloads of items that are supported by an application installed on the phone.

Warning! Applications downloaded from the Web can be from unknown sources. To protect your phone and personal data, only download applications from trusted sources.

8 Experiencing Multimedia

8.1 Camera & Picture

All pictures captured or viewed on the phone are stored on the memory card. To use the Camera or view pictures, make sure a memory card is installed.


Load pictures onto a memory card

Read the instructions below to add pictures to a Memory card or the phone storage.

1. Mount memory card to a computer by doing one of the following: Remove the memory card and insert it into a card reader attached to a computer.
2. On a computer, find the mounted USB drive and open it.
3. Create a folder at the top-level called “Pictures” or some other descriptive name and open it.
4. Copy .jpg or other image files into this folder. To organize pictures into albums that will display in the Pictures application, create a folder and copy pictures there for each album you want to display.
5. When finished, close the USB drive window and eject the drive as required by the computer's operating system.

Take a picture

Captured pictures are saved to the “DCIM” folder on your memory card or the phone. Before taking a picture, wipe the sensor window (on the back cover) to remove any debris.


1. To open the Camera, on the Home screen, touch  and select Camera icon.
2. The Camera opens in capture mode. Frame the picture within the screen and hold the phone steady. Touch Camera button to capture. Continue to hold the camera steady for a second after the shutter sound is heard
3. The picture is saved to the Gallery application.

View pictures

To view captured pictures, or ones stored on a memory card or the phone

KOCASO®

storage, go to Gallery application:

1. To open Pictures, on the Home screen, touch  and select Gallery icon.
2. Depending on how many pictures are stored, it may take a few minutes to load.
3. If you've stored the pictures in folders on a Memory card, then the folders will display as separate "albums". The top left album always contains all the pictures in all the albums.
4. The individual pictures display in a grid in thumbnail format. In settings, display can be changed to smaller or larger thumbnails.
5. To open a picture in full-screen view, touch the picture. Once in full-screen, select the arrows to scroll through the pictures within that album. If the arrows disappear, touch the picture again to reveal the arrows and zoom controls.

8.2 Music

To open the music Library, on the Home screen, touch Music icon.

The music is organized into four categories: Artists, Albums, Songs, and Playlists. Select a category to view the lists within each.

For example, select the Artists category, artists are listed in A-Z order. Select an artist, the list opens to display the artist's albums. Select an album, and the album's song list displays.

Load music onto a Memory card

All music is stored on a memory card. Read the instructions below to add music to a memory card.

1. Mount the memory card to a computer by doing one of the following:
Remove the memory card and insert it into a card reader attached to a computer; or, attach the phone to a computer using the included USB cable. Make sure the Home > Settings > Storage > SD card is selected.
2. On a computer, find the mounted USB drive and open it.
3. Although the phone will find all music files on a memory card, it's advisable to keep the number of files or folders at the root level to a minimum. Create a folder at the top-level to store the files.

4. Open this folder and copy music files into it. Create folders within first folder to organize the music further.
5. When finished copying, close the USB drive window and un-mount or eject the drive as required by the computer's operating system. Remove the USB cable from the phone and computer.

Play back music

At any level in the Library, touch & hold a listing (a song, artist, album, or playlist) to open the context menu. Select Play to begin play and go to the Playback screen. From the Playback screen:

1. Shuffle songs: Shuffle plays songs in random order. Touch to toggle shuffle on and off. When the icon is grey, shuffle is off.
2. Repeat mode: Touch to step through repeat modes: repeat all songs, repeat current song, don't repeat (grey icon).
3. Go to any point in song: Slide fingertip in progress bar to desired point in a song.
4. Playback control: from left to right icons: Go to beginning song, Pause/resume play and Go to next of song.

If a song is playing while viewing the Library screen, select the lower song bar to switch back to the Playback screen.

Create ringtones from songs

Too set songs as ringtones:

1. From the Library, navigate to a desired song.
2. Touch & hold the song in the list to open the context menu.
3. Select Use as phone ringtone. The ringtone is set as the default incoming call ringtone.
4. Now, go to Home > Settings > Audio profiles, and select a phone ringtone, the song will be listed as an option.

KOCASO®

8.3 FM Radio

This device provides radio function.

Note: Within doors or shielded environment, the receiving effect of radio may be affected. Improve the effect in the following ways: go near a window, adjust the position of earphone cable or adopt manual adjustment.

9 Other Applications

9.1 Calendar

Calendar views

View multiple calendars on the phone, so each calendar event is coded with a color. View your calendar in a variety of ways. Touch the date on the left-top of the screen to select from Day, Week, Month or Agenda.

Create an event


From any of the views, press MENU and select 'New event' to open the new Event details screen.

- Type the information in the fields.
- Select date & time.
- Name that appears in Day view.
- Add description.
- Select a calendar to display more than one.
- Set a default reminder time.
- Set online presence: available or busy.
- Select calendar privacy from Default (as defined when calendar was created), Private, or Public.

When finished, select 'Done'. Pressing BACK also saves the event.

Tip: Create an event quickly in the Day or Week view by selecting an empty time slot. A new Event details screen appears. The 'From' field contains the selected time slot.

9.2 Alarm Clock

To open Alarm Clock, on the Home screen, touch  and select Clock icon. The Alarm clock offers several different alarms.

Set an alarm

Three alarms are set up, ready to customize. Alarms are turned off by default. Select the check box to turn on the alarm. If no day shows under the set time, the alarm will go off once when the set time is reached.

To begin, select one of the default alarms, go to open Alarm settings.

Set the following options:

Alarm: Select the check box to turn alarm on (checked) or off (cleared). This is the same check box that appears on the main Alarm Clock screen.

Time: The time the alarm will go off is shown. To change this time, select Time to open the time selector. Slide fingertip up or down to set the time you want, and then select Set.

Repeat: The current repeat selection is shown. To change the setting, select Repeat and make a selection from the menu. To have the alarm only go off once at the set time, don't select any of the options. A one-time alarm is shown on the Alarm Clock screen without any days under the set time.

Ring tone: The current ring tone selection is shown. Select Ring tone to pick another ring tone that will play when the alarm rings. (When selecting a ring tone, it plays briefly.) Note that when the alarm goes off, the ring tone will play a maximum of five minutes.

Vibrate: Select this check box to have the phone vibrate when it goes off.

Once the alarm goes off, an alert with the options to Snooze (for 10 minutes) or Dismiss will appear.

Add more alarms

To add more than three alarms, from the main Alarm Clock screen, press MENU and select 'Add alarm'.

KOCASO®

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Mobile Phone has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the handset kept 5mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 5mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 5mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.