



## **External Photographs**

View of EUT-1



View of EUT-2



View of EUT-3



View of EUT-4



### View of EUT-5




Note: USB is only used for debugging and is not used by clients.

### View of EUT-6



View of EUT-7

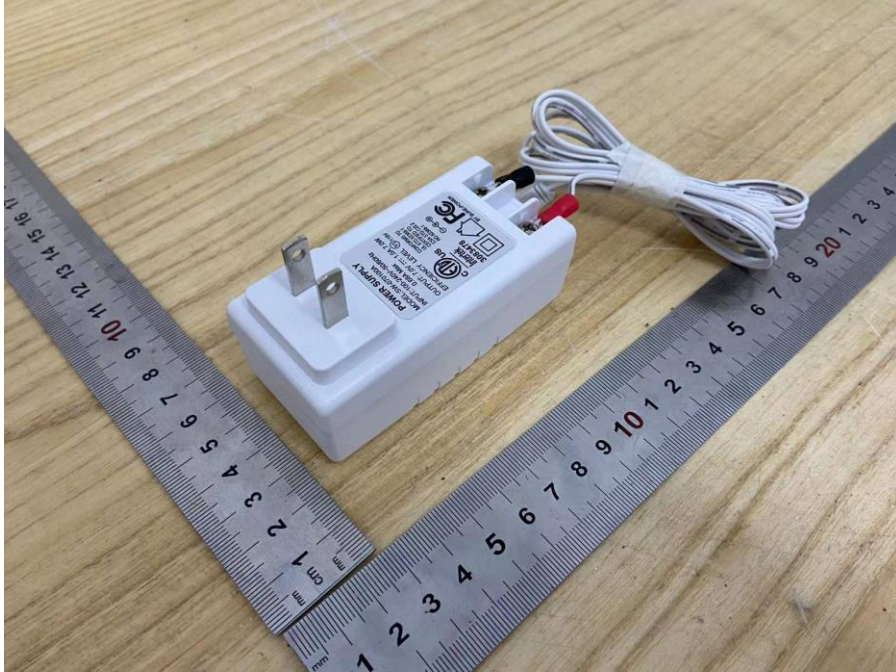

View of EUT-8

